

Removal and Installation

Special Tool(s) / General Equipment

	415-001 Remover, Audio Unit
 E84511	501-125 Remover, Grab Handle Cover
Hot Glue Gun	
Interior Trim Remover	


Removal

NOTE: Removal steps in this procedure may contain installation details.

1. On both sides.


Refer to: [A-Pillar Trim Panel](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

2. On both sides.

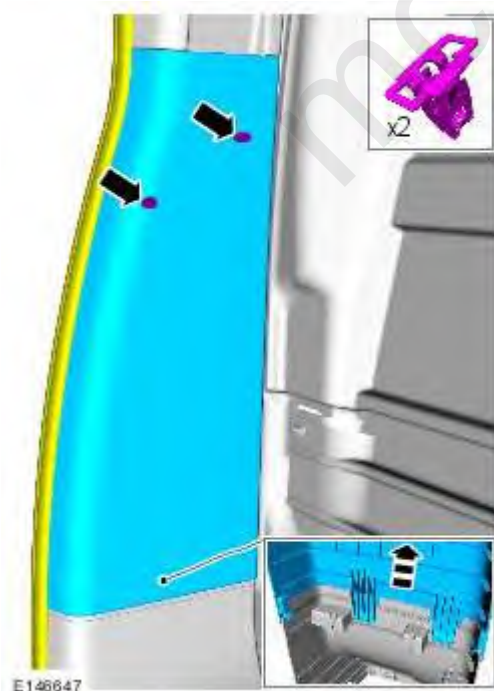


3. On both sides.


Torque: 35 Nm

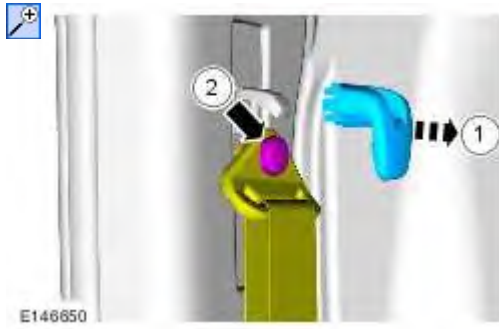


4. On both sides.

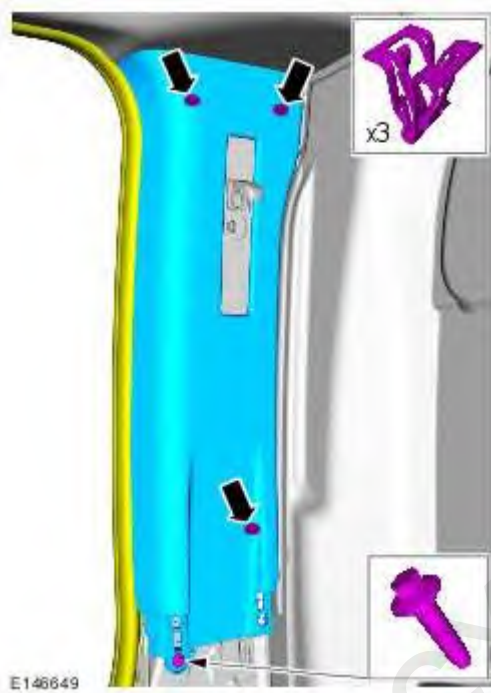


5.

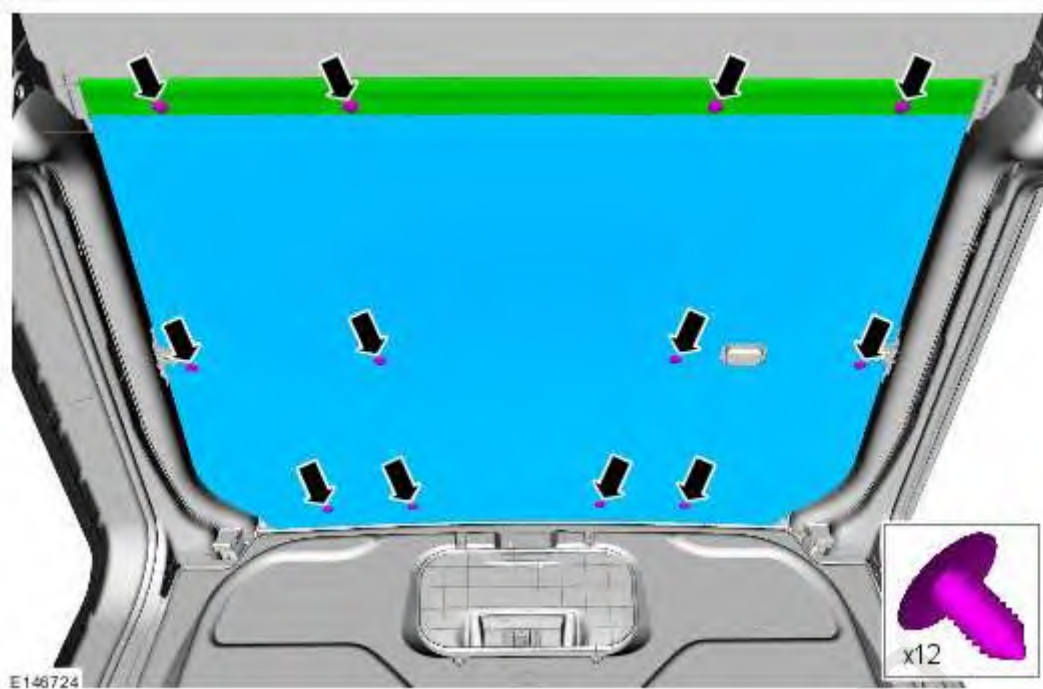

6.

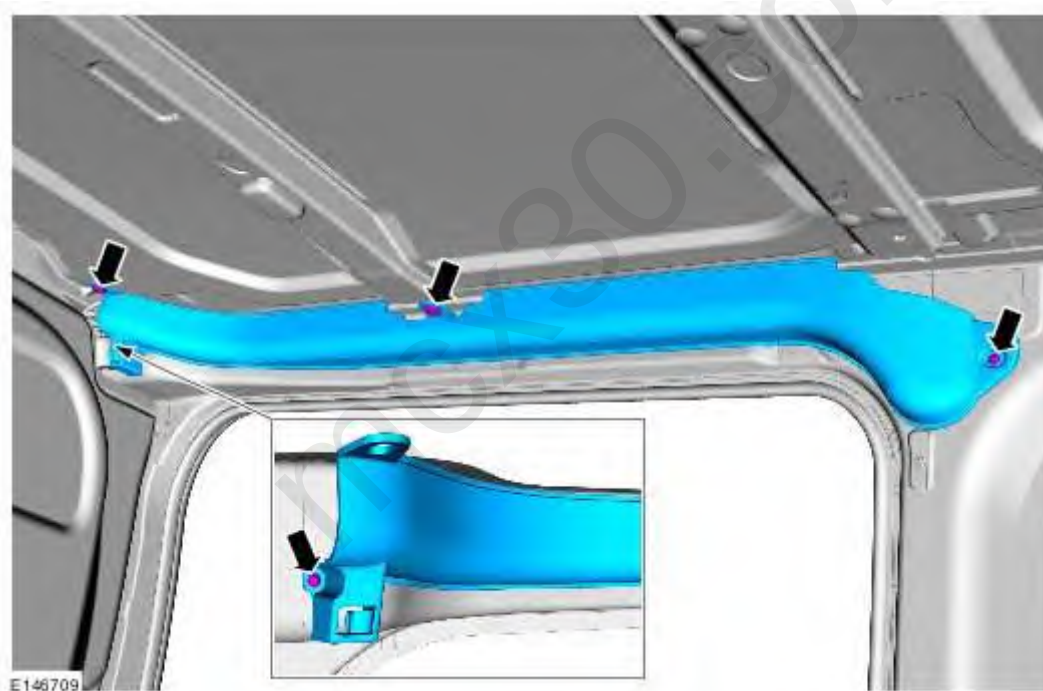

7.

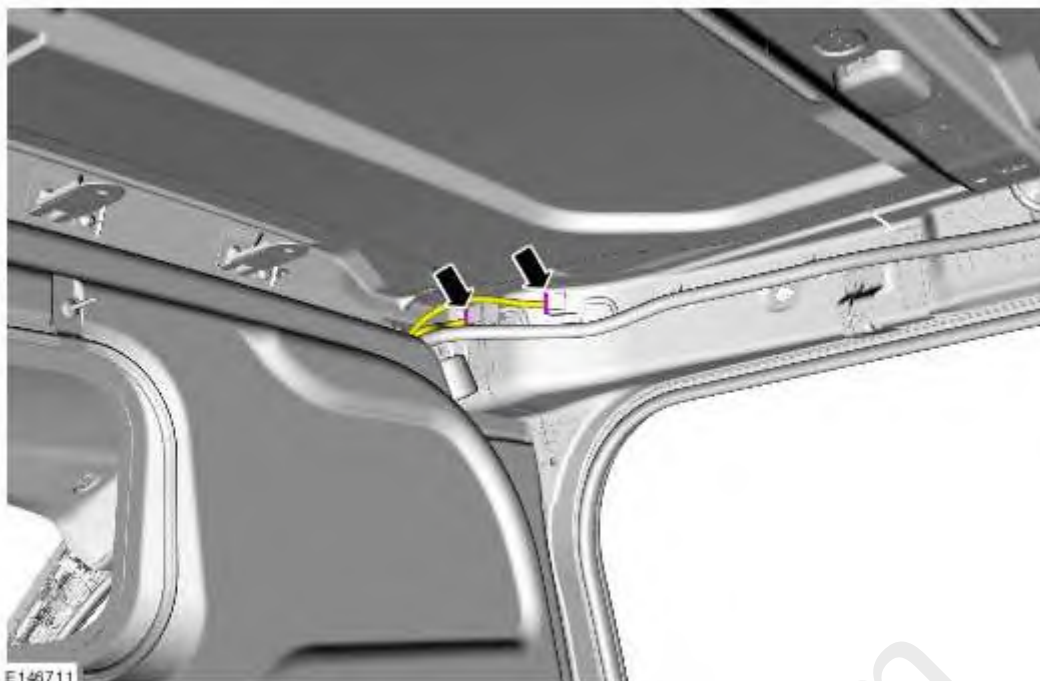


Vehicles with tachograph


8. Remove Special Service Tool: 415-001.



9.

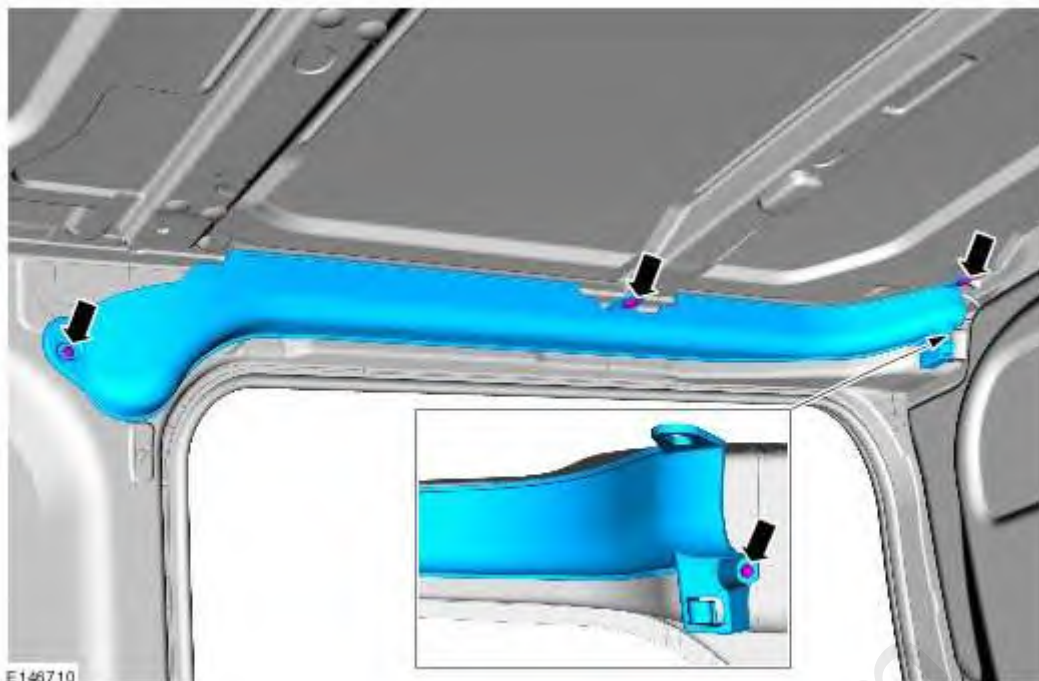


10.

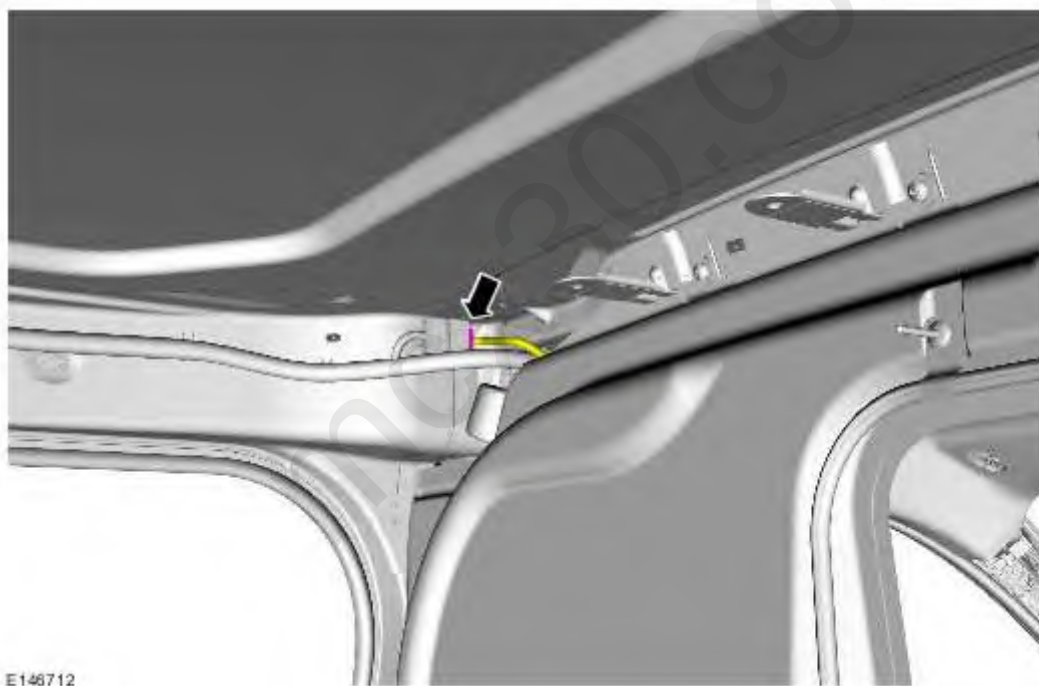

Vehicles without tachograph

11. Remove Special Service Tool: [501-125](#).

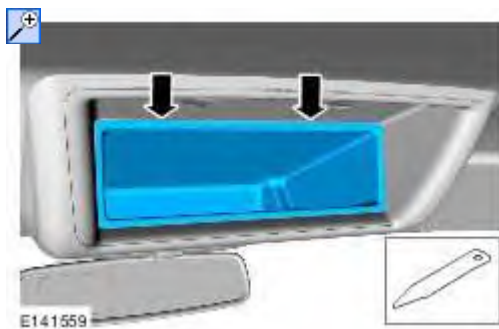


All vehicles


12.




13.

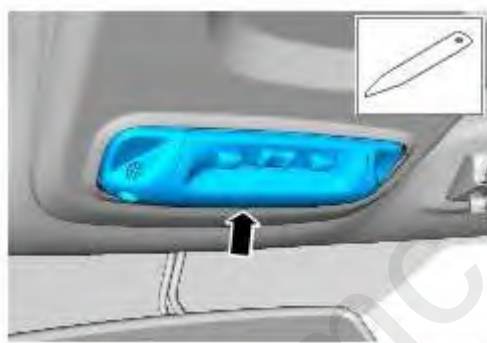

14. On both sides.

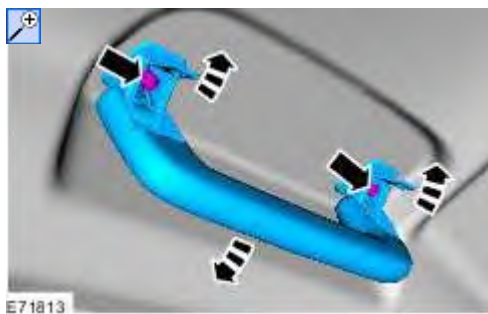


15. On both sides.

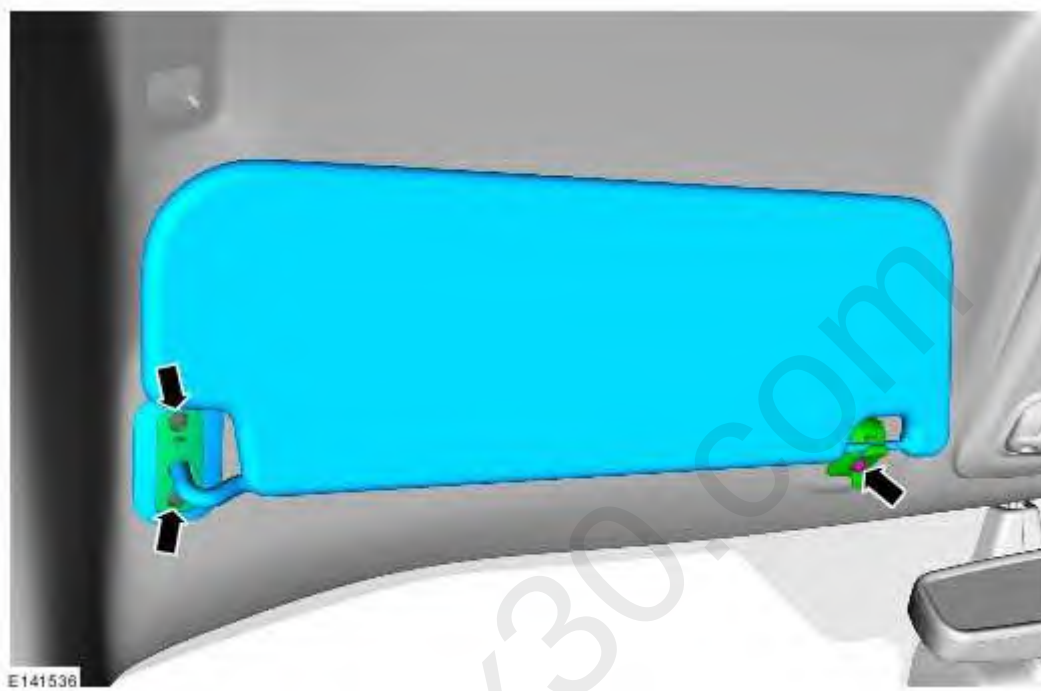


Vehicles without front view camera

16.

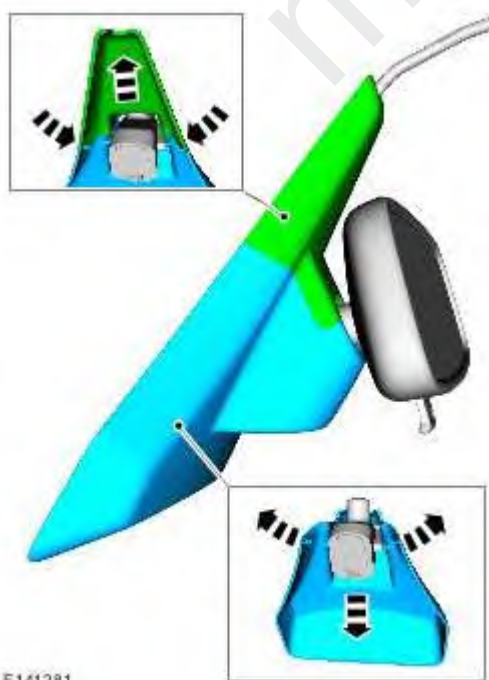


17.

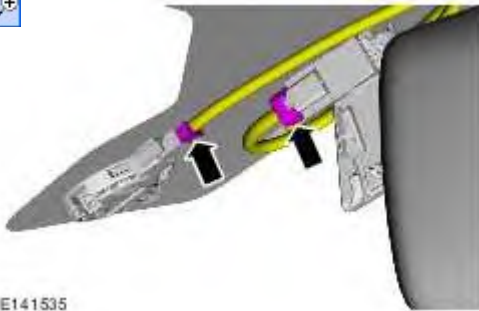

E141535



Vehicles with front view camera

18.

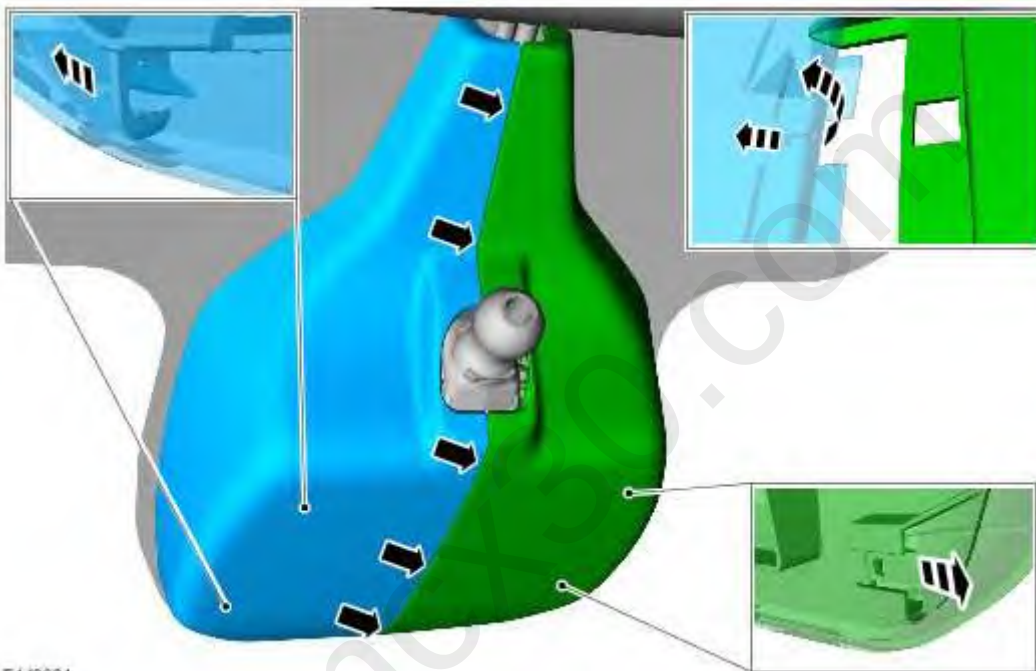


E140621

19. Use the General Equipment: [Interior Trim Remover](#)

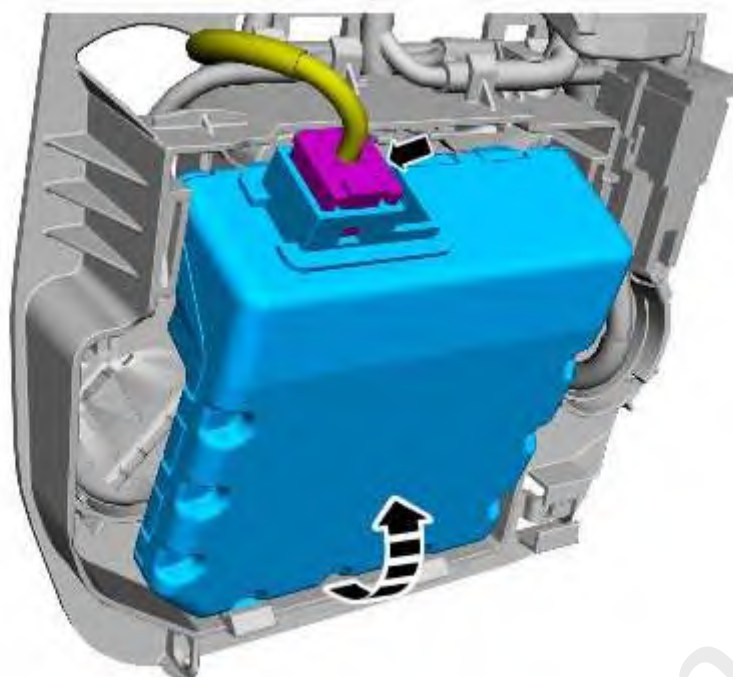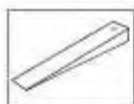

E140622

20.

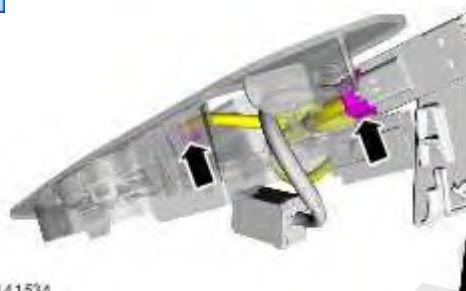

E141534


All vehicles

21.




E141546

22.  **NOTICE:** Take extra care not to crease the headliner.

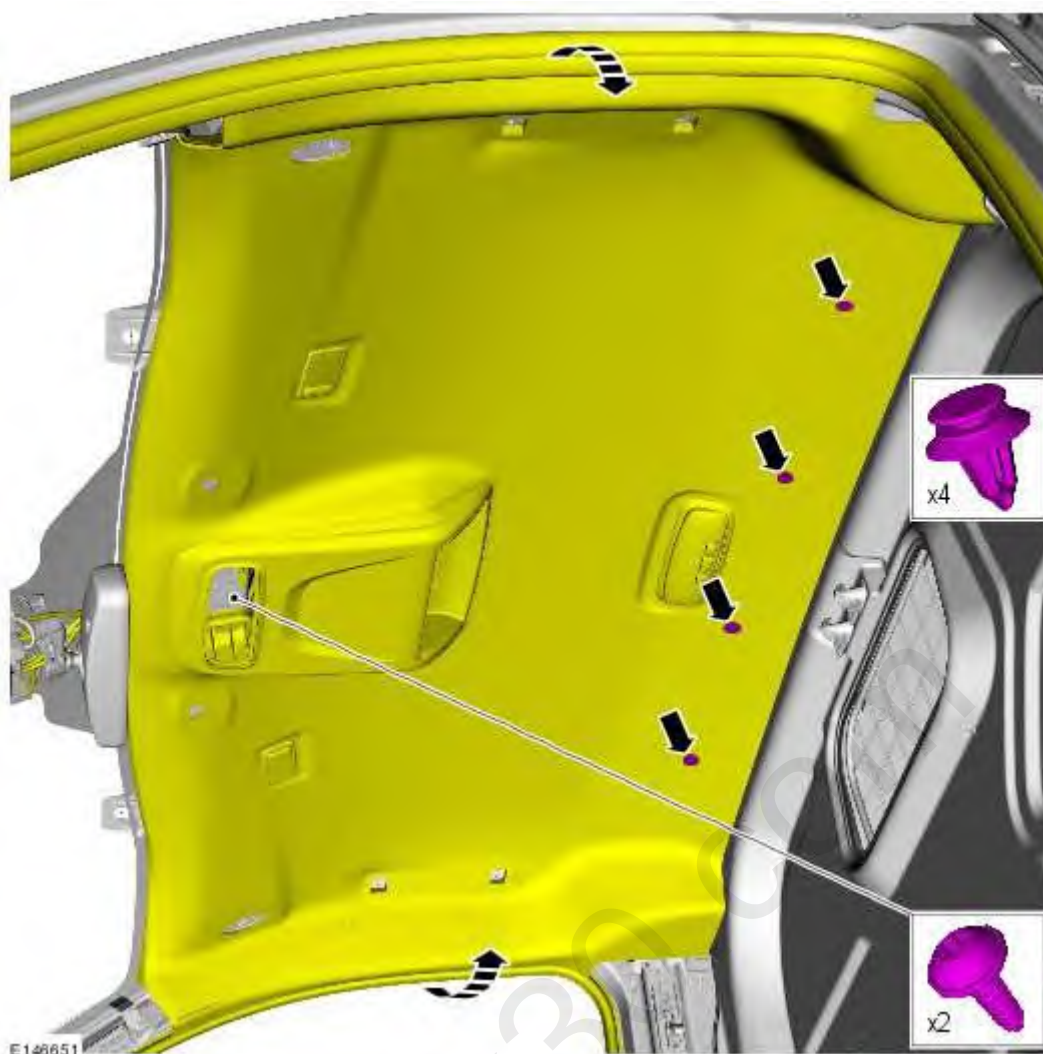


23.  NOTICE: Take extra care not to crease the headliner.

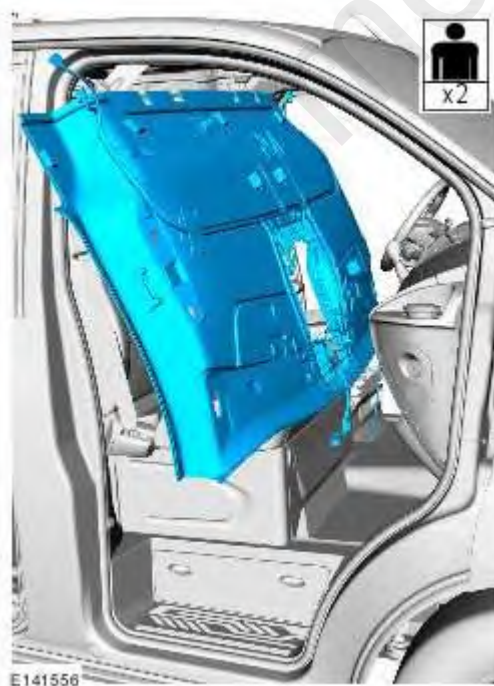


NOTE: The following steps are only necessary when installing a new component.

24.  NOTICE: Replace interior lamp bulbs only from the back side of the lamp, removing the glass causes malfunction.

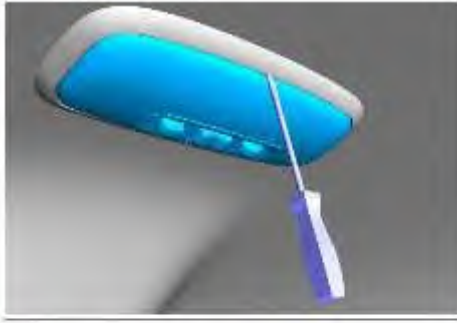


E92668

- 25.

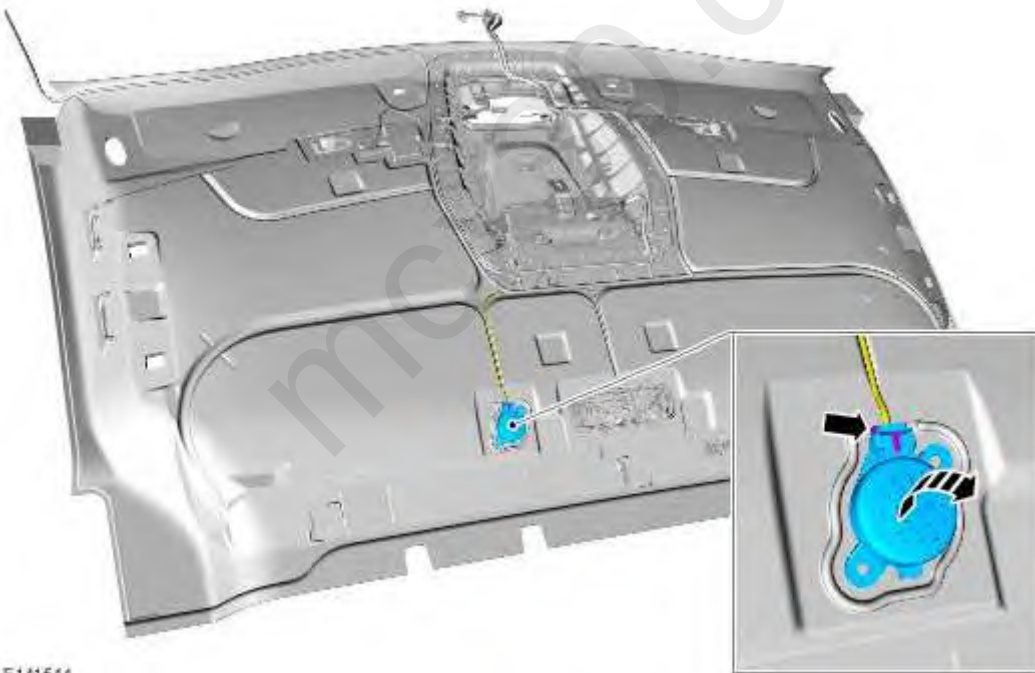


E141544


- 26.

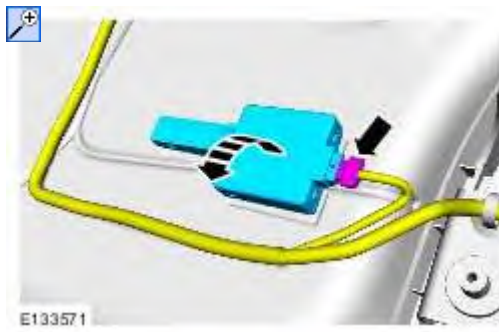

27.

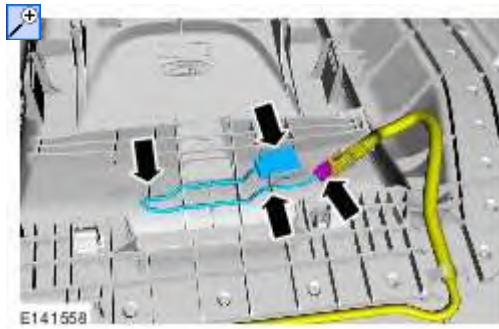

28.

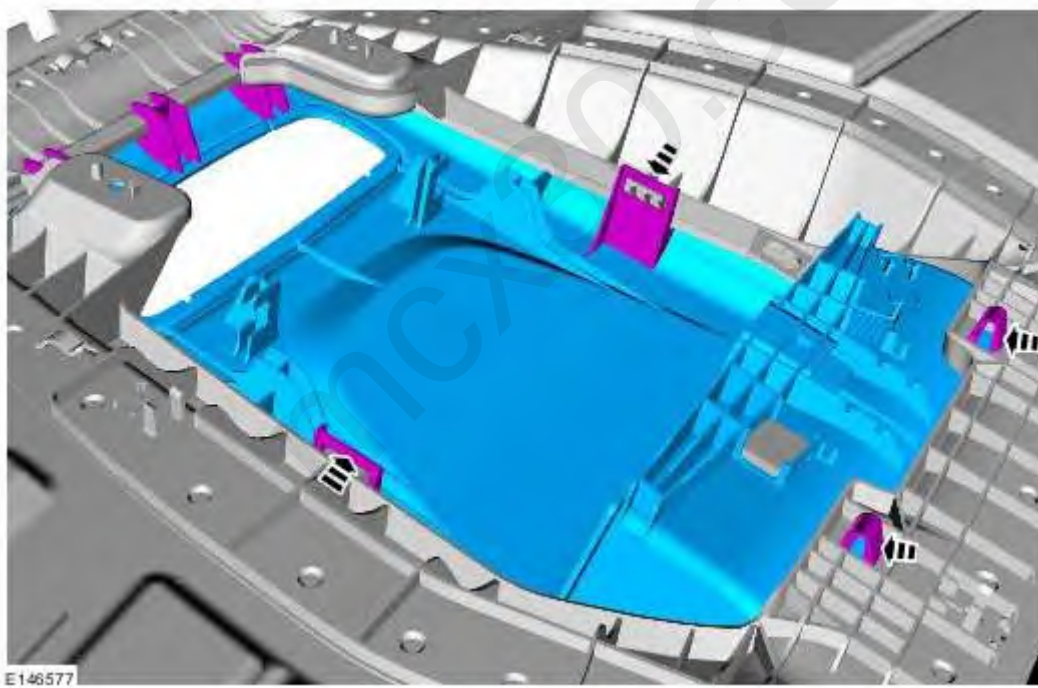


29. All.



30. NOTE: Note the position of the components before removal.

Use the General Equipment: **Hot Glue Gun**

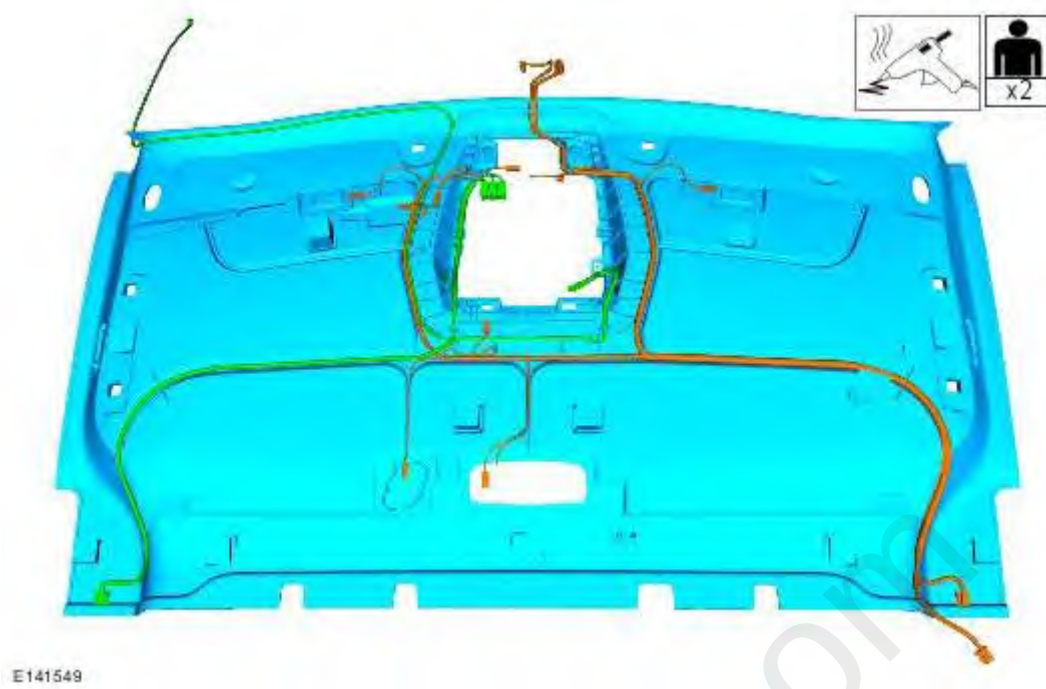

Installation

1. NOTE: Make sure that the components are installed to the position noted before removal.
To install, reverse the removal procedure.