

Removal and Installation


General Equipment

Hot Glue Gun

Removal


NOTE: Removal steps in this procedure may contain installation details.

1.
 - On both sides.
 - 1. If equipped.

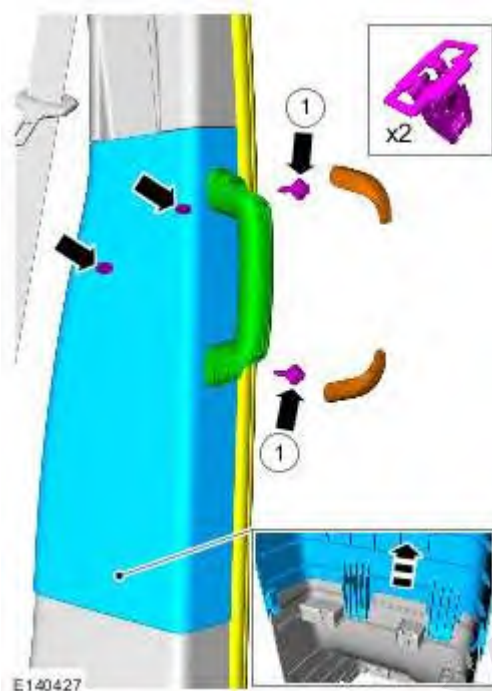

2. On both sides.


Torque: 35 Nm

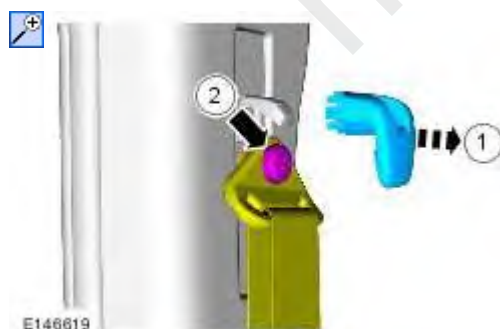


3.
 1. On both sides.




4.

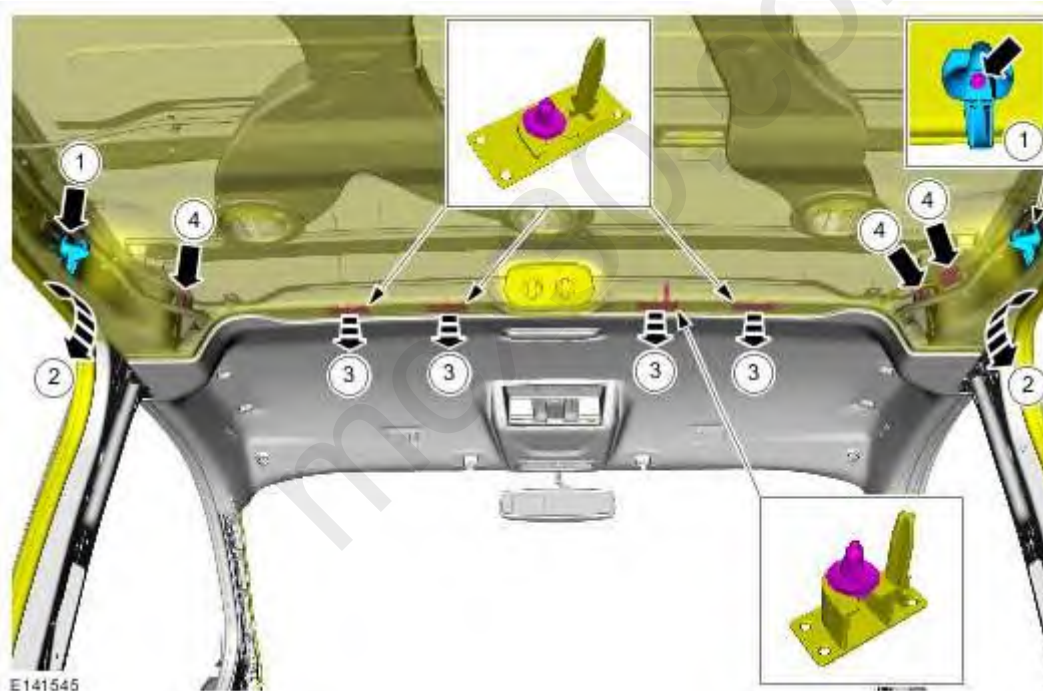

5. On both sides.

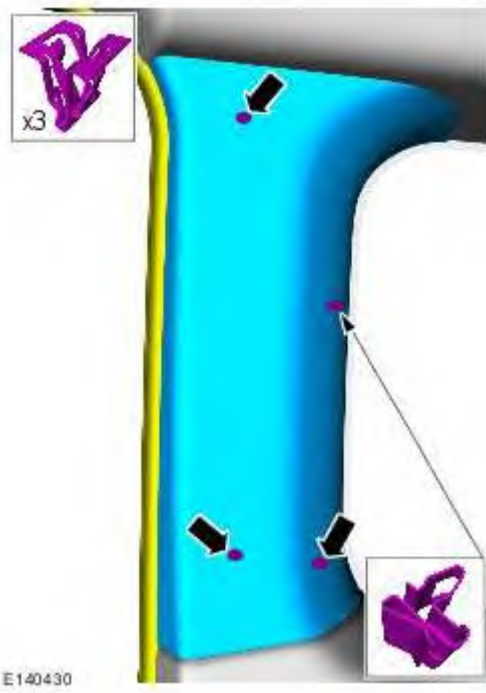

6. On both sides.

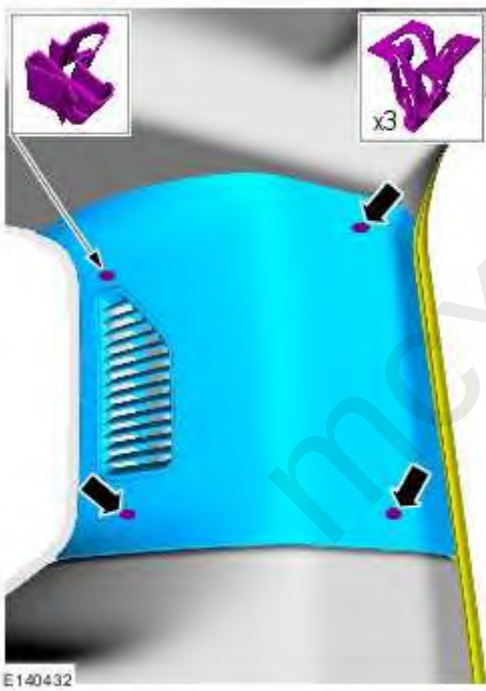


7.



E141880

8.

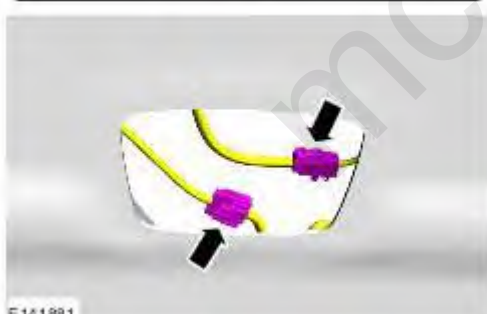


E141881

9. On both sides.



E141882


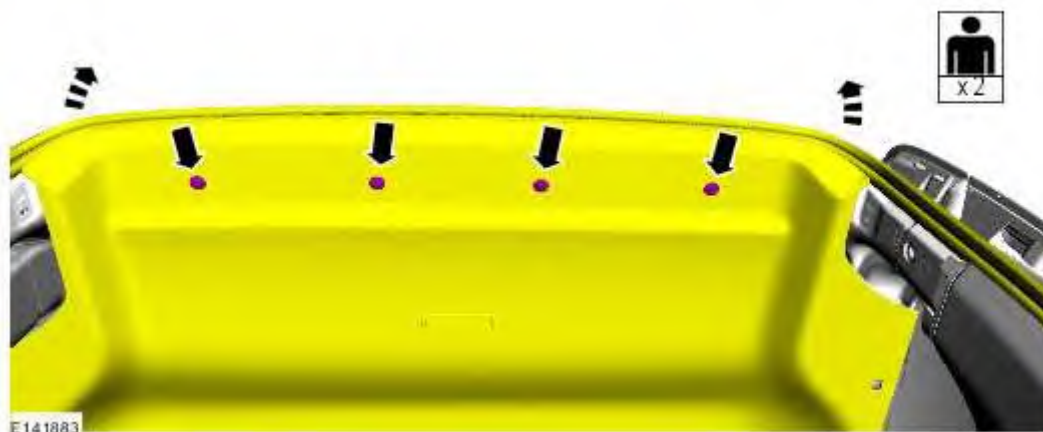


11.  NOTICE: Take extra care not to crease the headliner.




NOTE: The following steps are only necessary when installing a new component.

- 12.

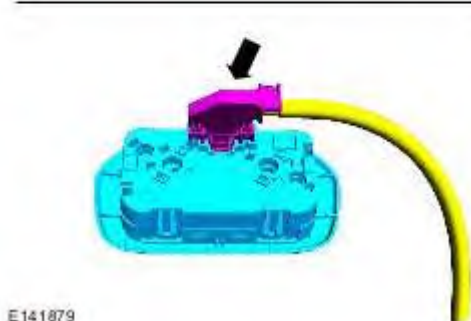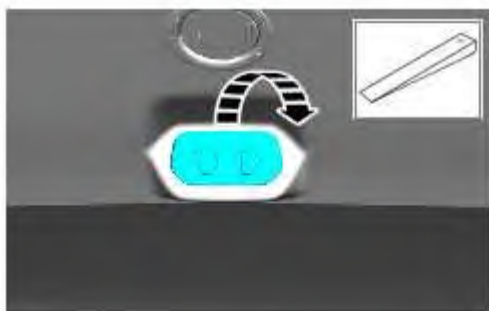

E141879

13. On both sides.

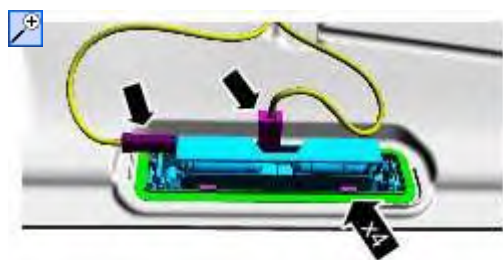

E141885

14.



E141981




Vehicles with auxiliary climate control

16. All.



17. **NOTE:** Note the position of the components before removal.

Use the General Equipment: [Hot Glue Gun](#)

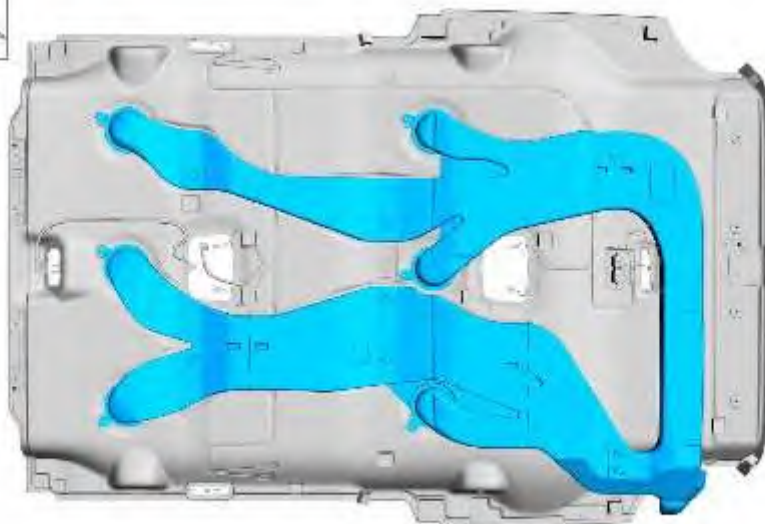


E176521

All vehicles

18. **NOTE:** Note the position of the components before removal.

Use the General Equipment: [Hot Glue Gun](#)

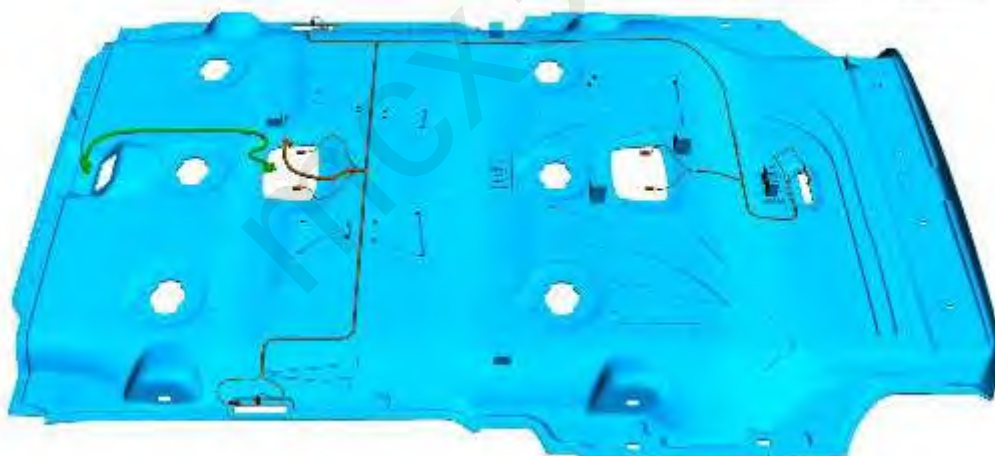

E141984

Installation

1. **NOTE:** Make sure that the components are installed to the position noted before removal.

To install, reverse the removal procedure.