

Removal and Installation

General Equipment

Knife

Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Both sides, If equipped.

Refer to: [Front Seat](#) (501-10A Front Seats, Removal and Installation).


2. If equipped.

Refer to: [Front Bench Seat](#) (501-10A Front Seats, Removal and Installation).


3. Refer to: [Floor Console](#) (501-12 Instrument Panel and Console, Removal and Installation).

4. Refer to: [Battery](#) (414-01 Battery, Mounting and Cables, Removal and Installation).


5. *Torque:* 55 Nm

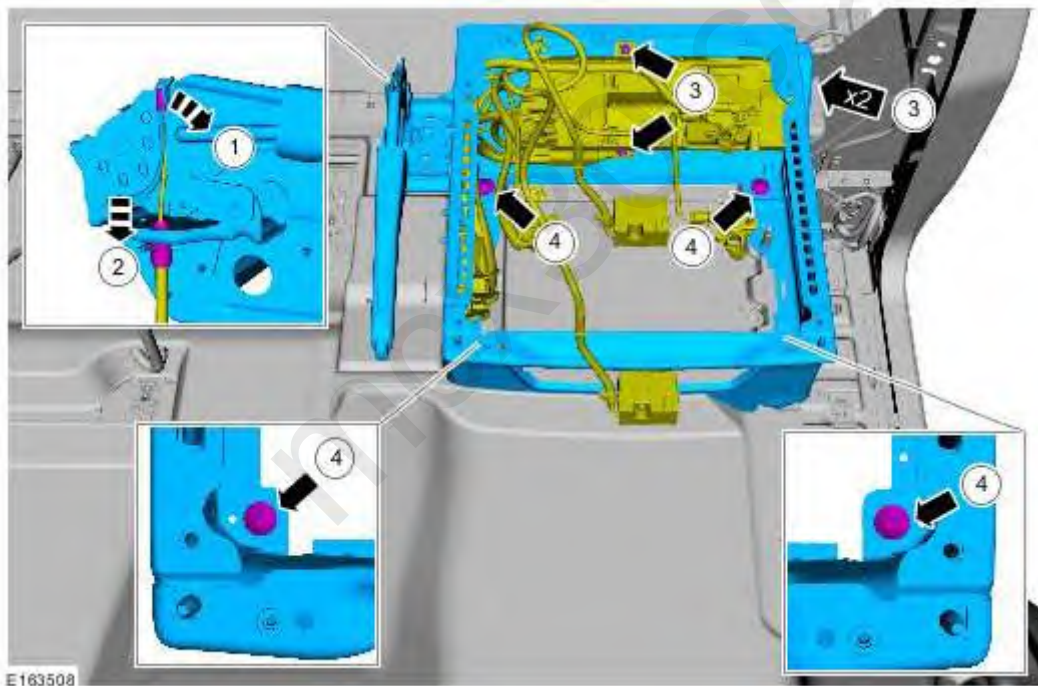


6. *Torque:* 55 Nm

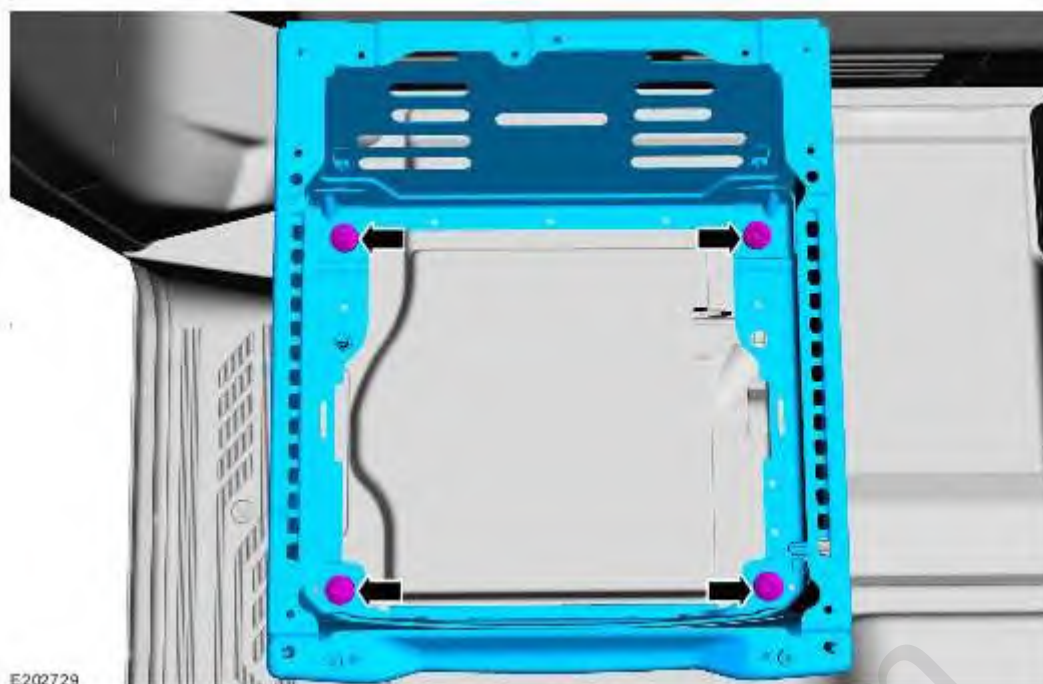

7.

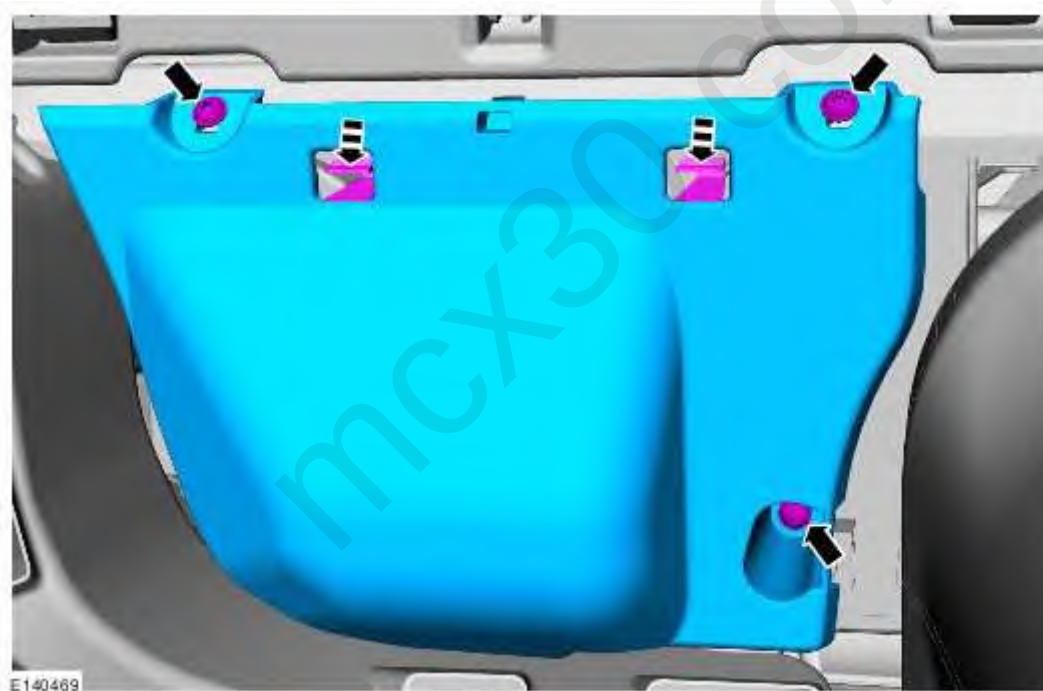


8.

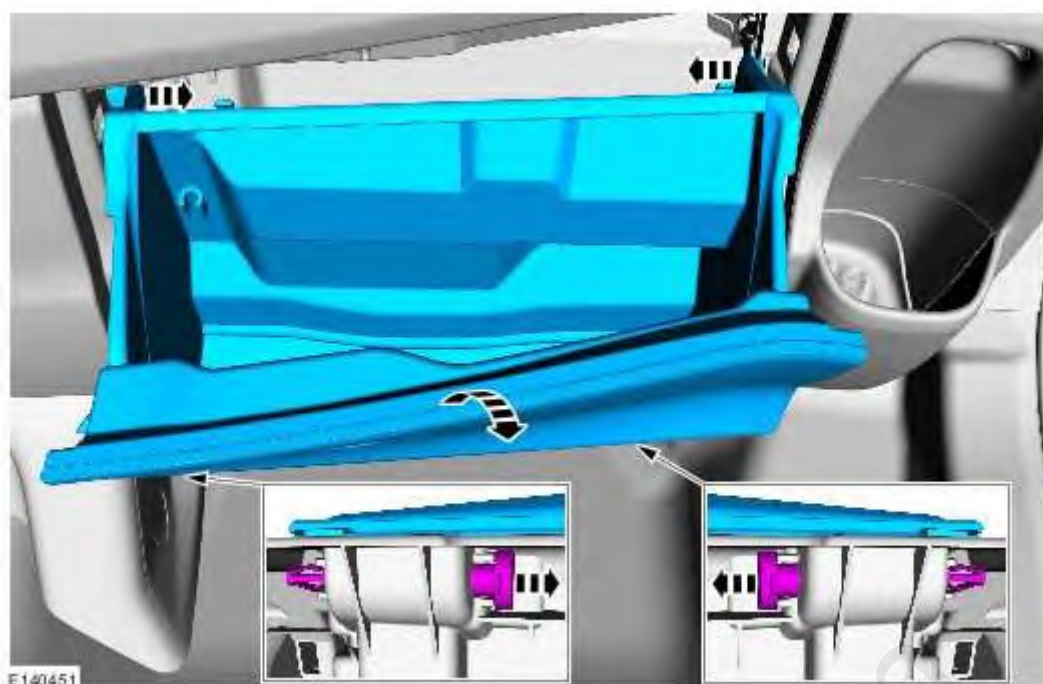


9.



10.

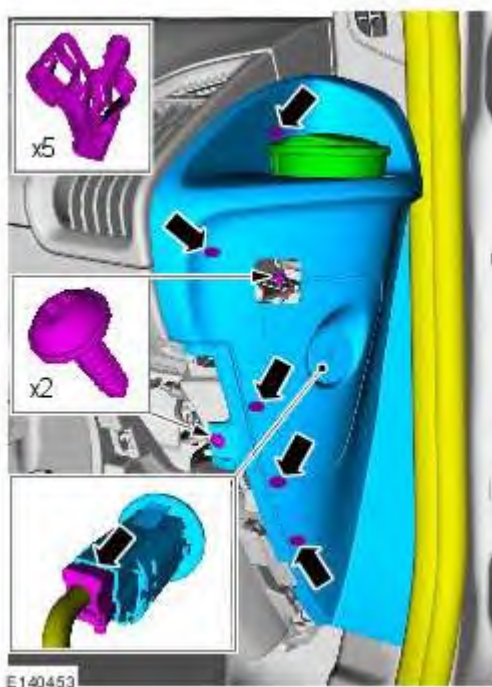


11.

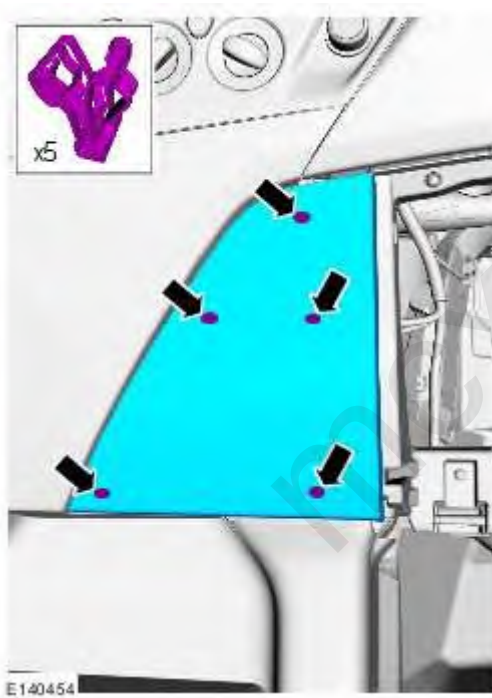

12.




13.

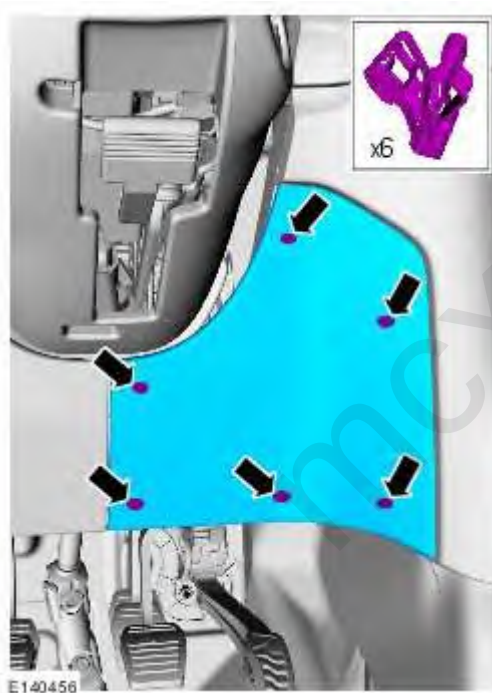


14.




15.

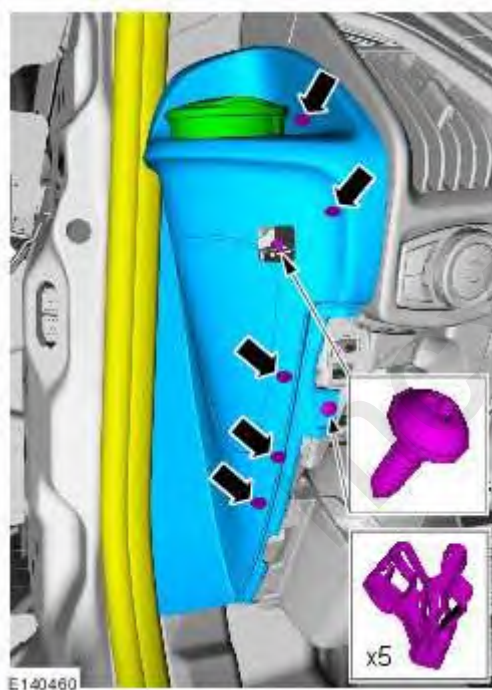

16.

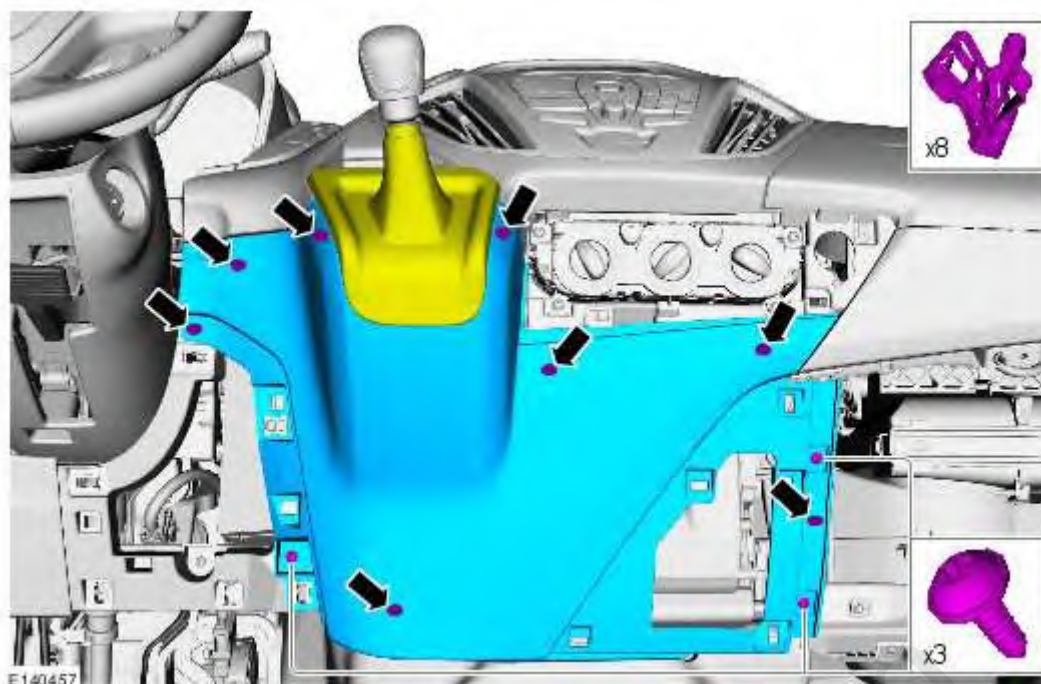

17. 1. On both sides.

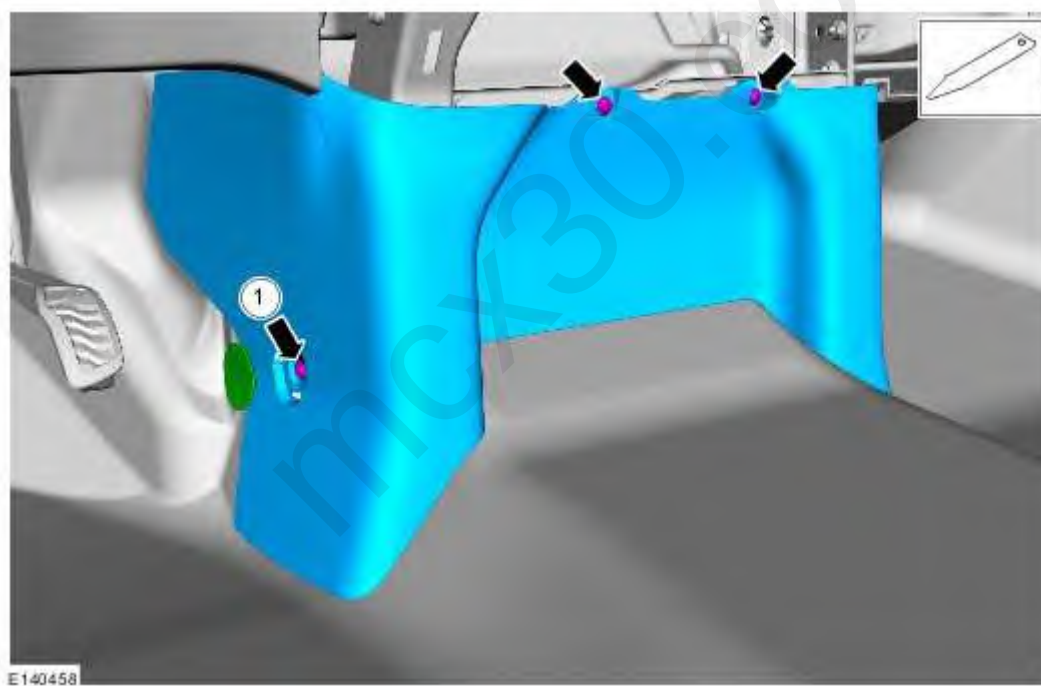

18. **NOTE:** Note the position of the components before removal.
If equipped.



19. NOTICE:




Make sure that a new bolt is installed.



Make sure that the steering column lock is engaged.


NOTE: Make sure that the road wheels are in the straight ahead position.

Torque: 28 Nm

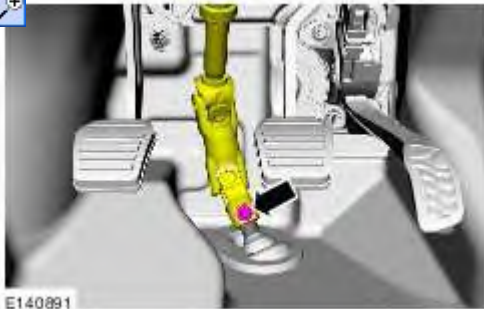


20. Refer to: [Accelerator Pedal](#) (310-02 Acceleration Control, Removal and Installation).

21.

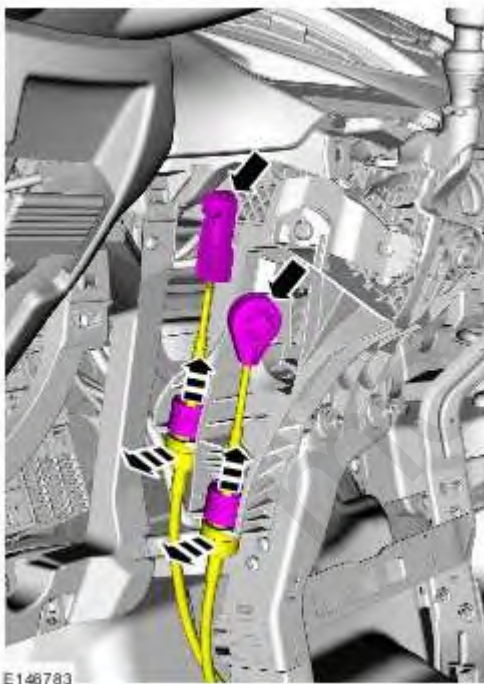


22. Torque: 25 Nm

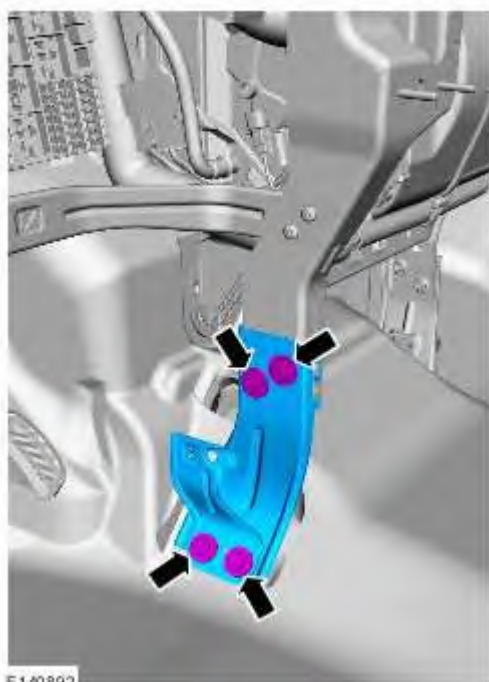


E140892

23. Torque: 25 Nm

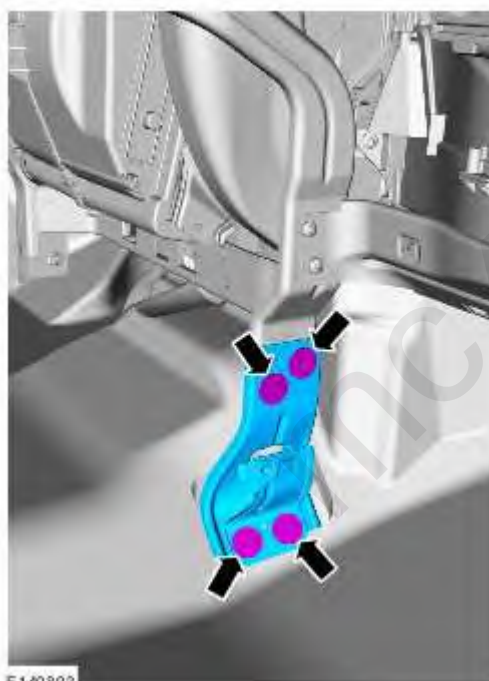


E140893


24. On both sides.

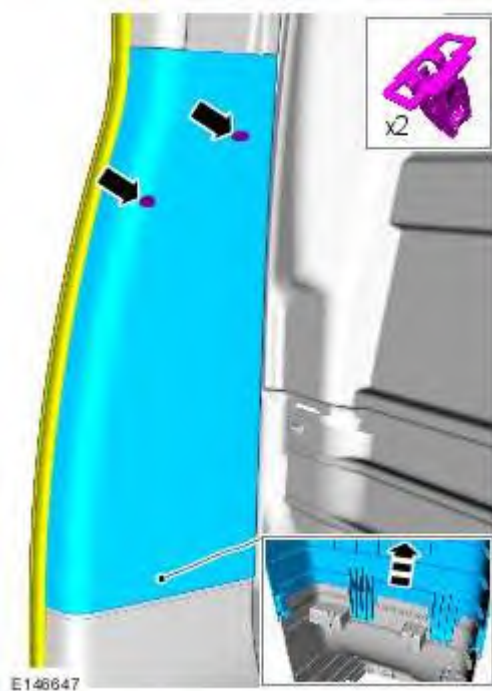


25. On both sides.

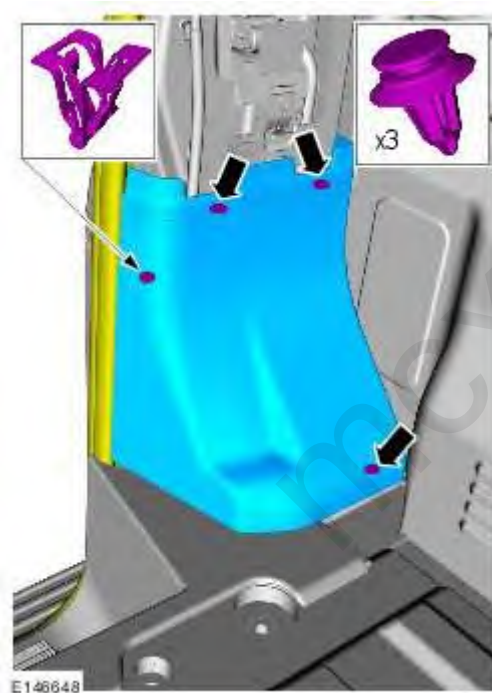

26. On both sides.

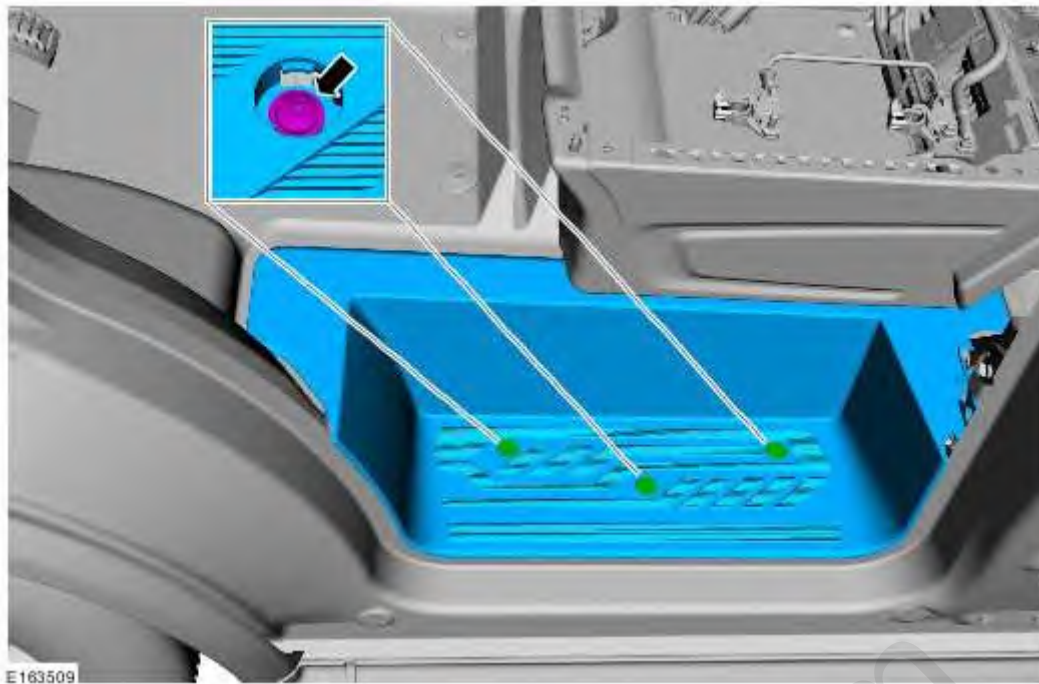

Use the General Equipment: [Knife](#)

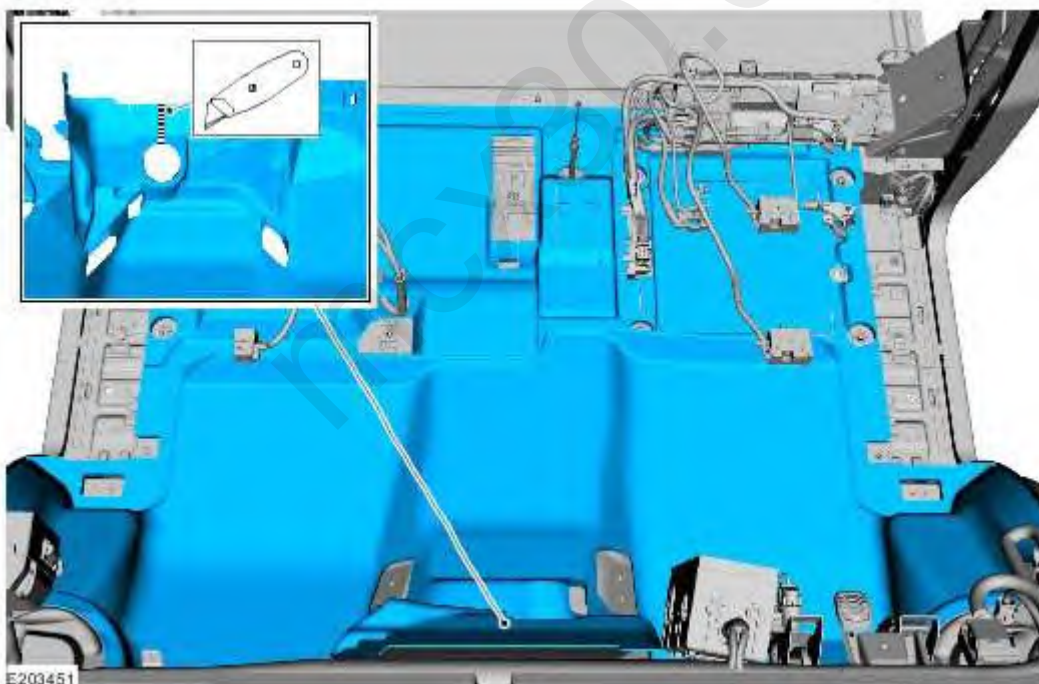

Installation

1. To install, reverse the removal procedure.
2. Refer to: [Parking Brake Cable Adjustment](#) (206-05 Parking Brake and Actuation, General Procedures).