


Removal and Installation

Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Refer to: [Front Door Trim Panel](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).
- 2.

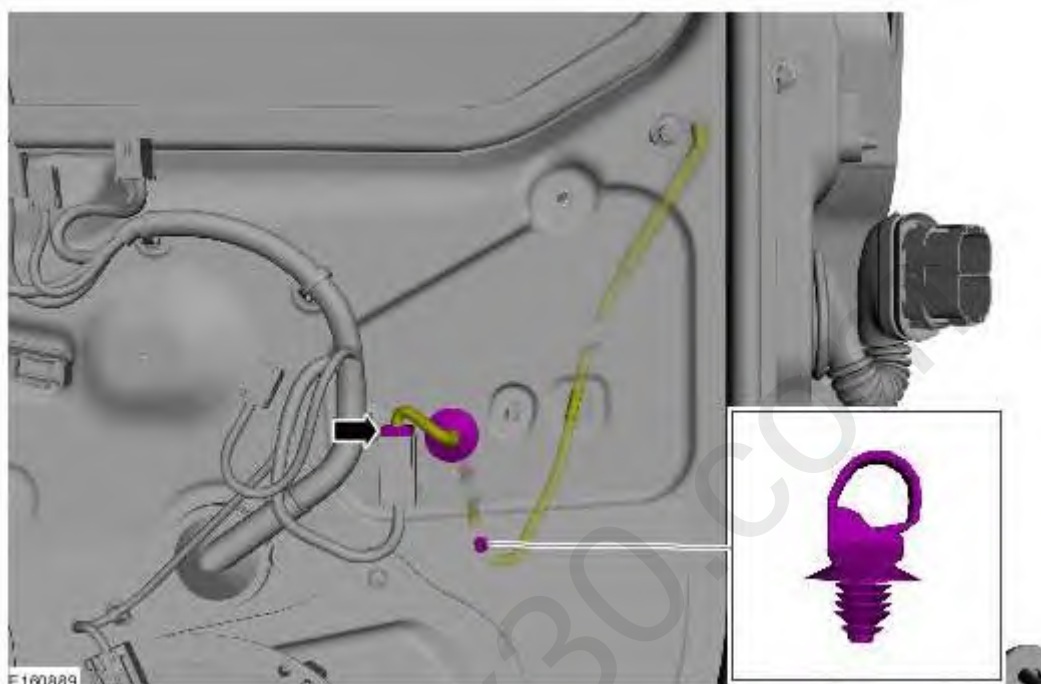

3. Torque: 10 Nm





Installation

1. To install, reverse the removal procedure.