

Removal and Installation

General Equipment

Blind Rivet Gun

Electric Drill


Removal

NOTE: Removal steps in this procedure may contain installation details.


1. Refer to: [Front Seat](#) (501-10A Front Seats, Removal and Installation).

Vehicles without power seats

2. *Torque*: 3 Nm

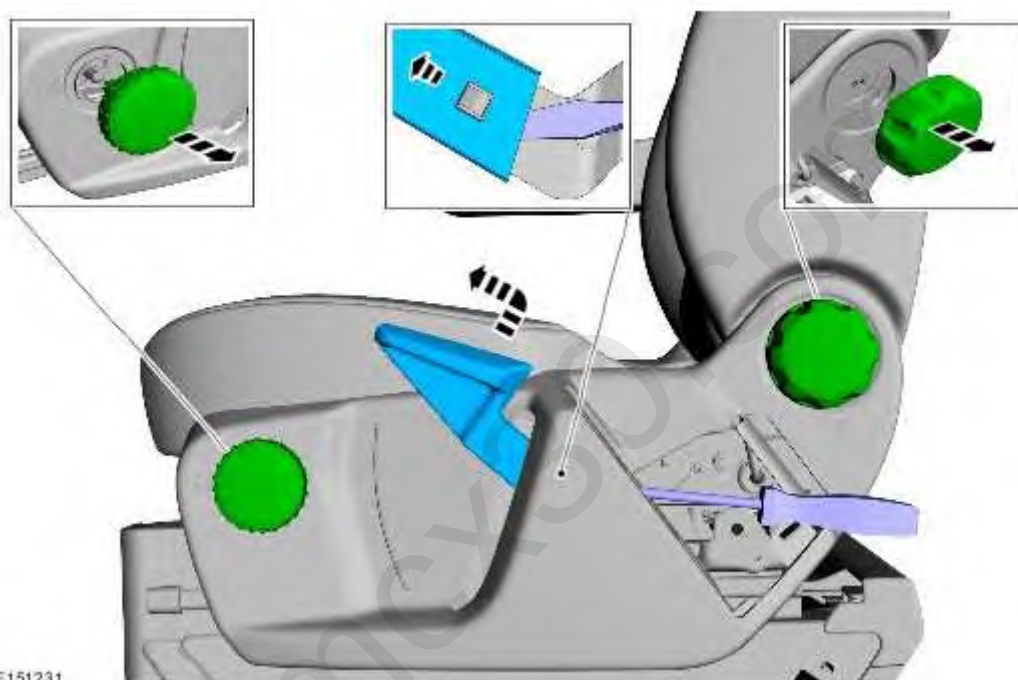


3. *Torque*: 3 Nm

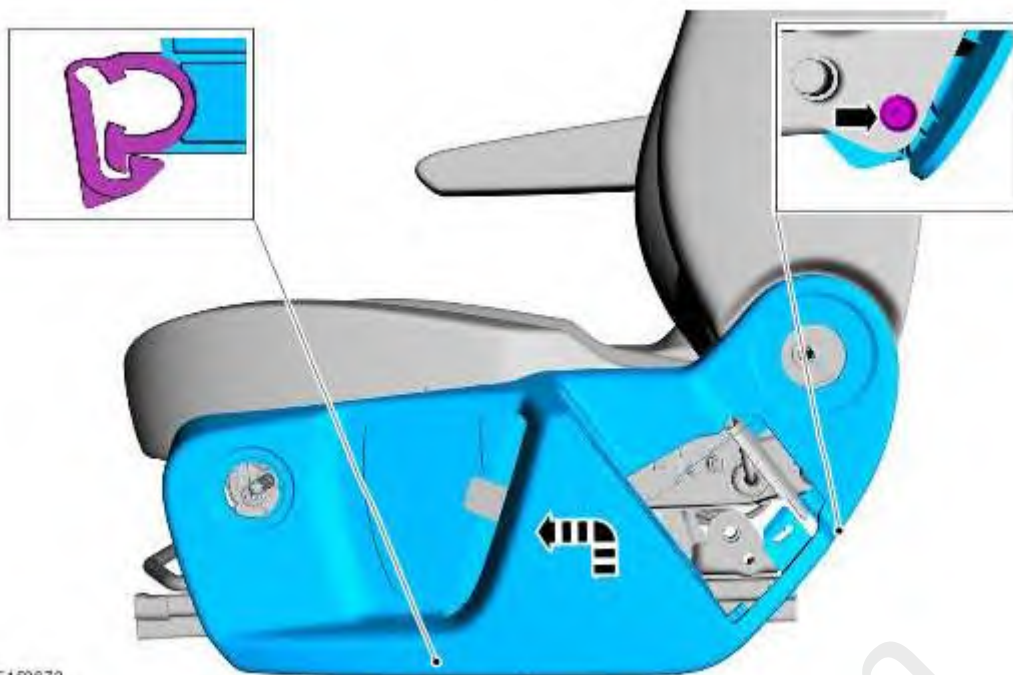

E159672

Vehicles with power seats


4. Torque: 3 Nm

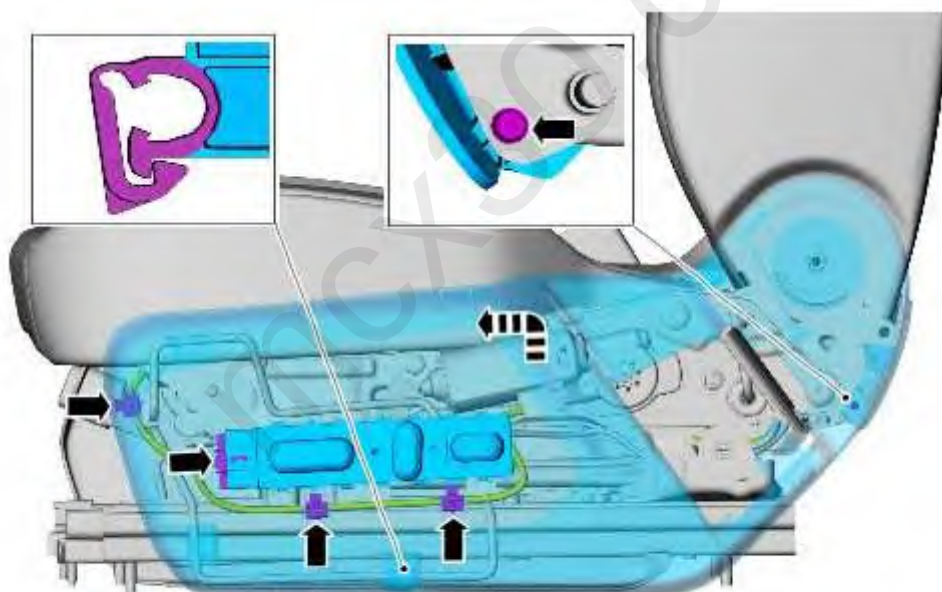

E151230


All vehicles

5. Torque: 3 Nm

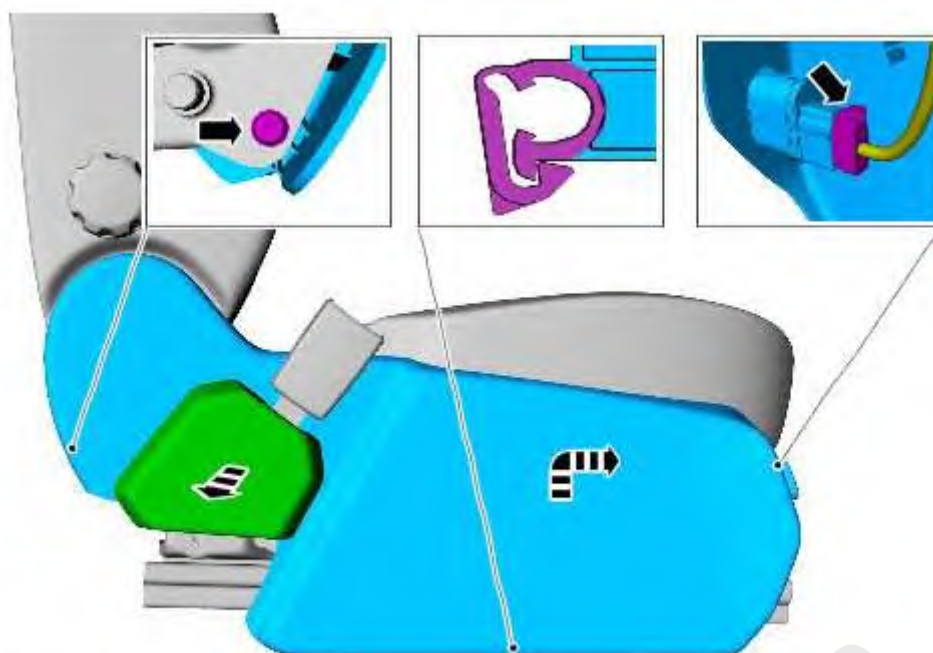


E151229

6.

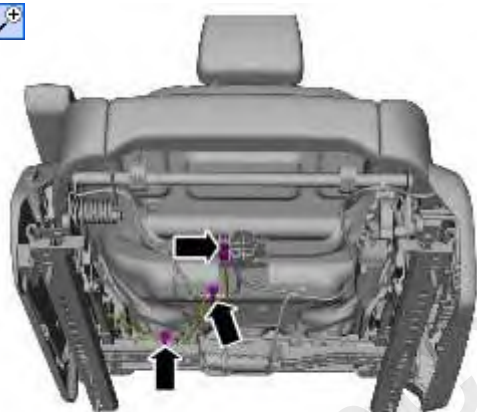


E151224

7. Torque: 47 Nm

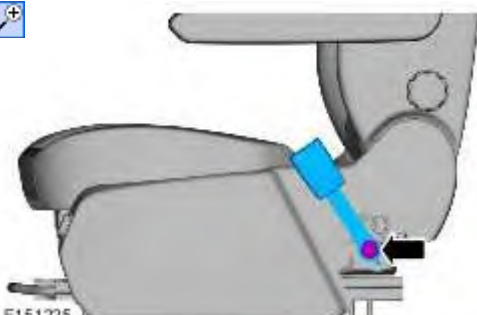


E151225

8.

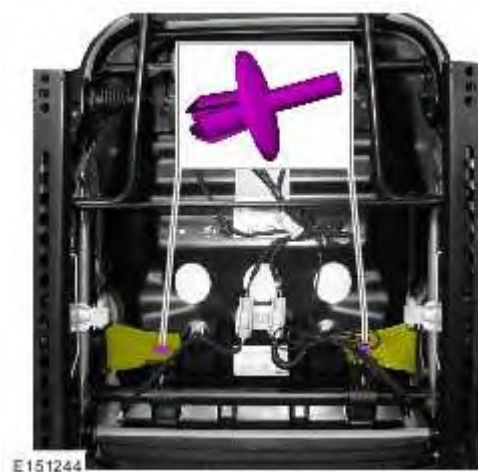

9.

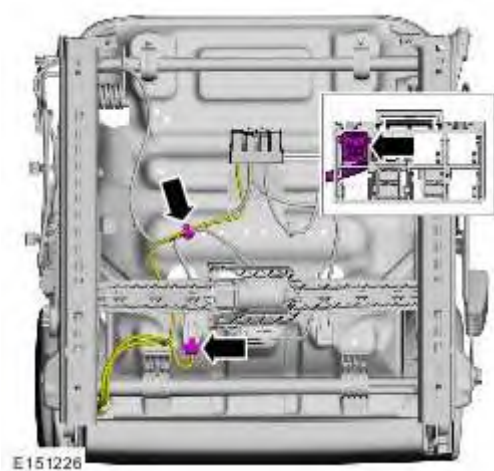

10. If equipped.




11.



E151625

12. Torque: 47 Nm

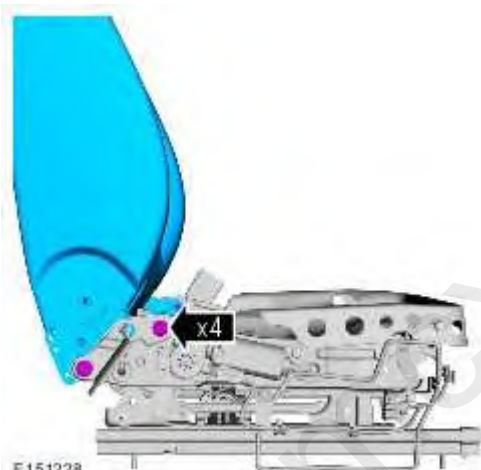


E151228

13.




E151227

14. Use the General Equipments: [Electric Drill](#), [Blind Rivet Gun](#)

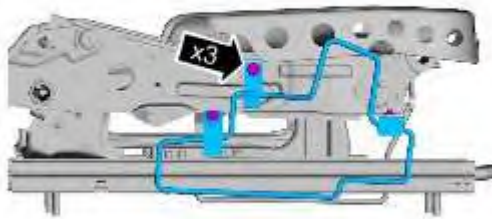

E191369

15. Use the General Equipments: [Electric Drill](#), [Blind Rivet Gun](#)

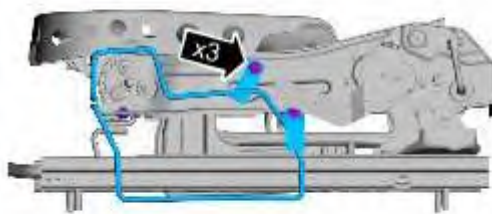

E191370

16. Use the General Equipments: [Electric Drill](#), [Blind Rivet Gun](#)



E191371

Installation

1. To install, reverse the removal procedure.