

Removal and Installation

Removal

NOTE: Removal steps in this procedure may contain installation details.


1. Torque: 40 Nm



- 2.



3. Torque: 48 Nm

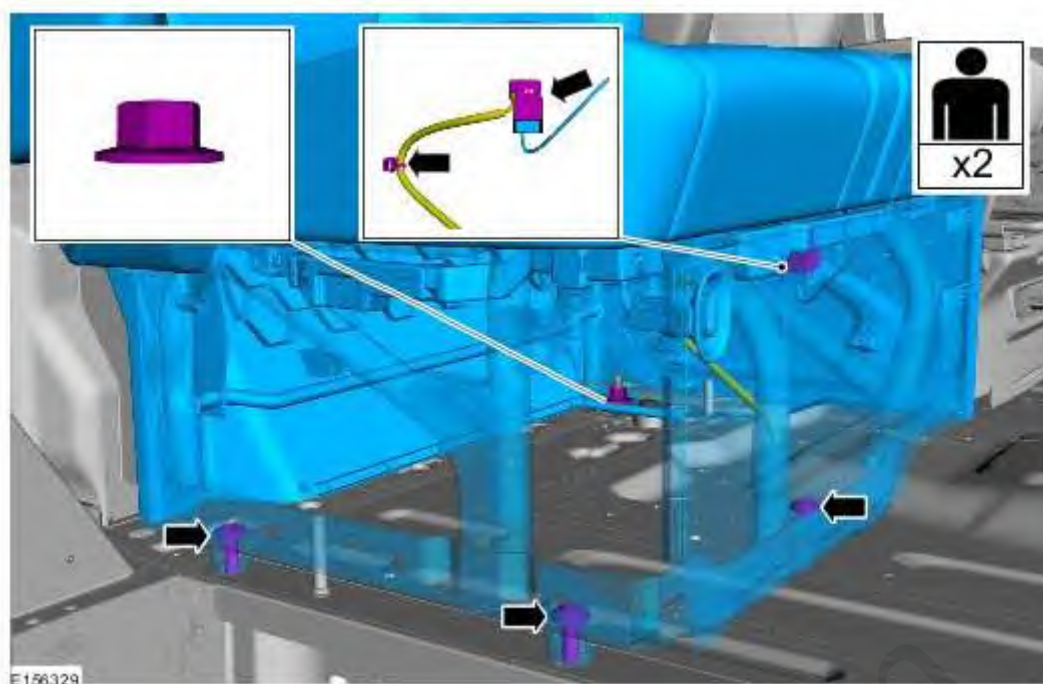

Installation

1. To install, reverse the removal procedure.