

Removal and Installation

General Equipment

Hog Ring Plier

Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Refer to: [Front Head Restraint Guide Sleeve](#) (501-10A Front Seats, Removal and Installation).
2. Torque: 40 Nm




3. Torque: 40 Nm




4. Torque: 3 Nm




5.

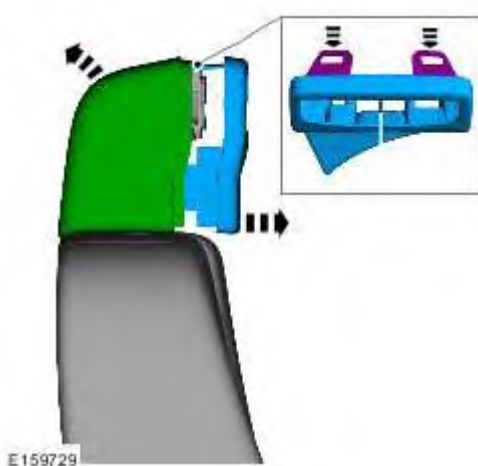

6.

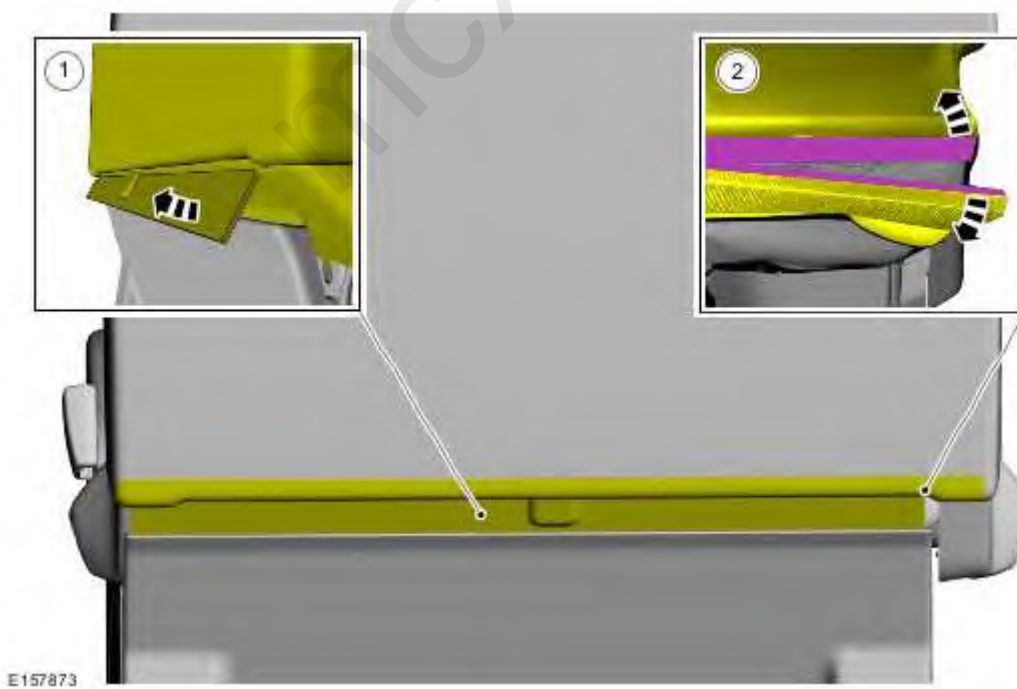

7.

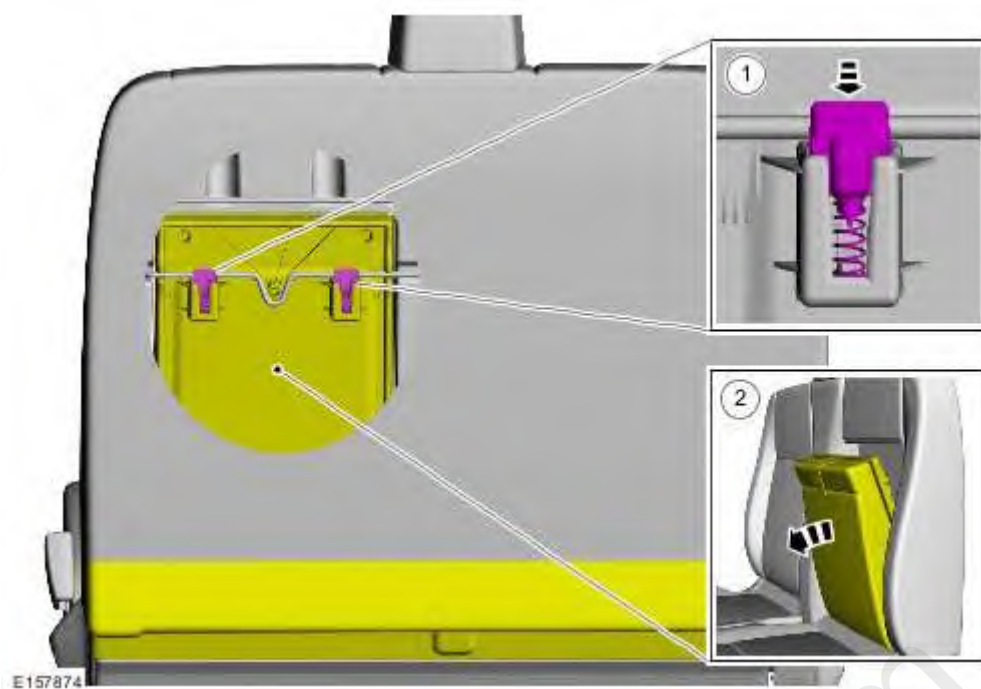


8.




9.




10. If equipped.

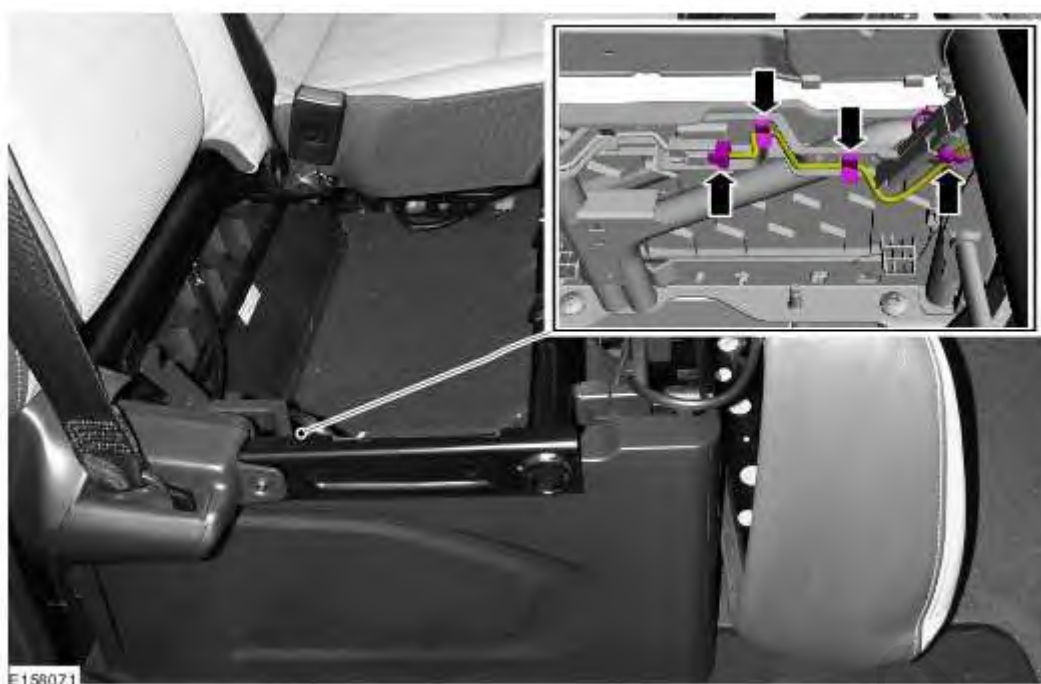

11.

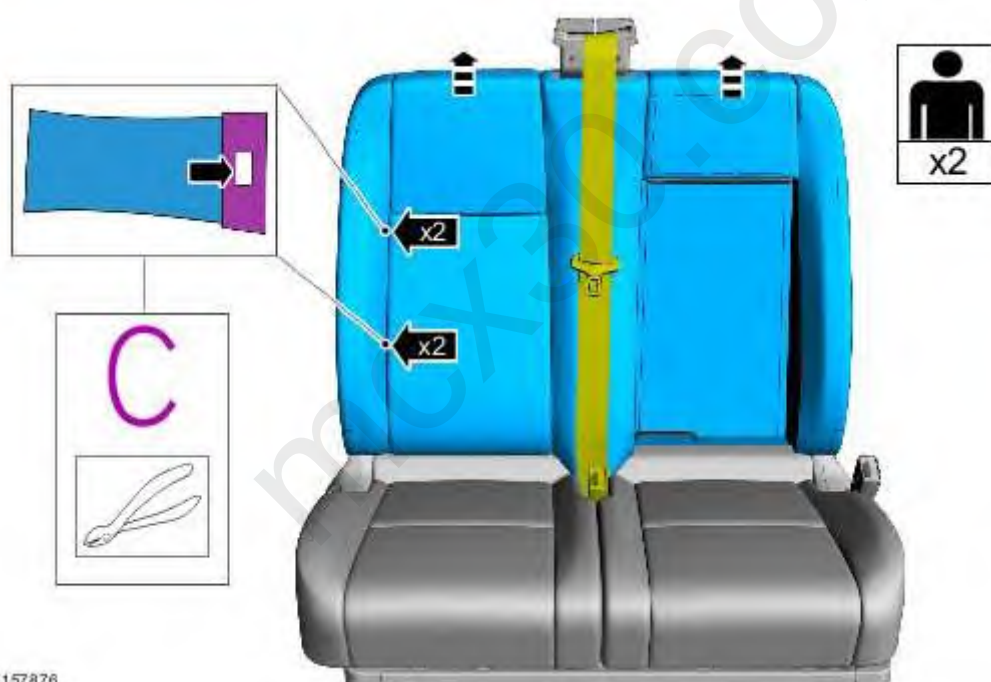

12.

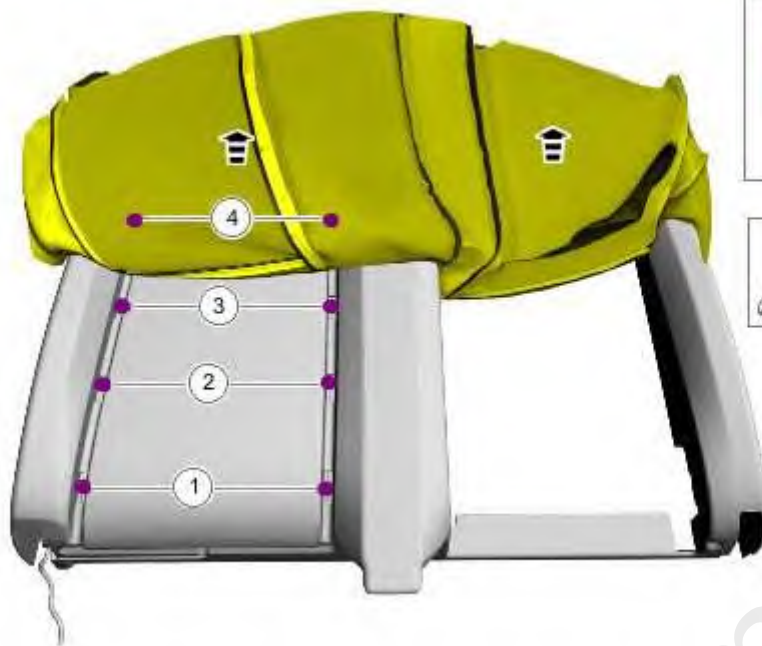

E158060


13. **NOTE:** Touching the adhesive surface will impair rebonding.



E158061

Installation

1. To install, reverse the removal procedure.
2. Use the General Equipment: [Hog Ring Plier](#)

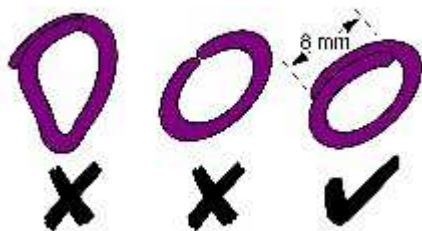

V400 1063