

Removal and Installation

General Equipment

Hog Ring Plier

Removal

NOTE: Removal steps in this procedure may contain installation details.


1. Torque: 3 Nm



- 2.




3. Torque: 40 Nm

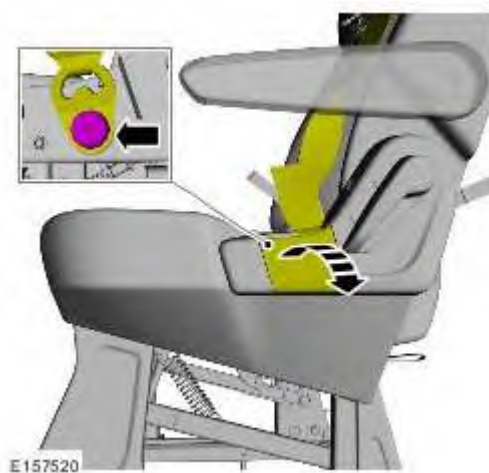


4. Torque: 3 Nm




5. Torque: 3 Nm

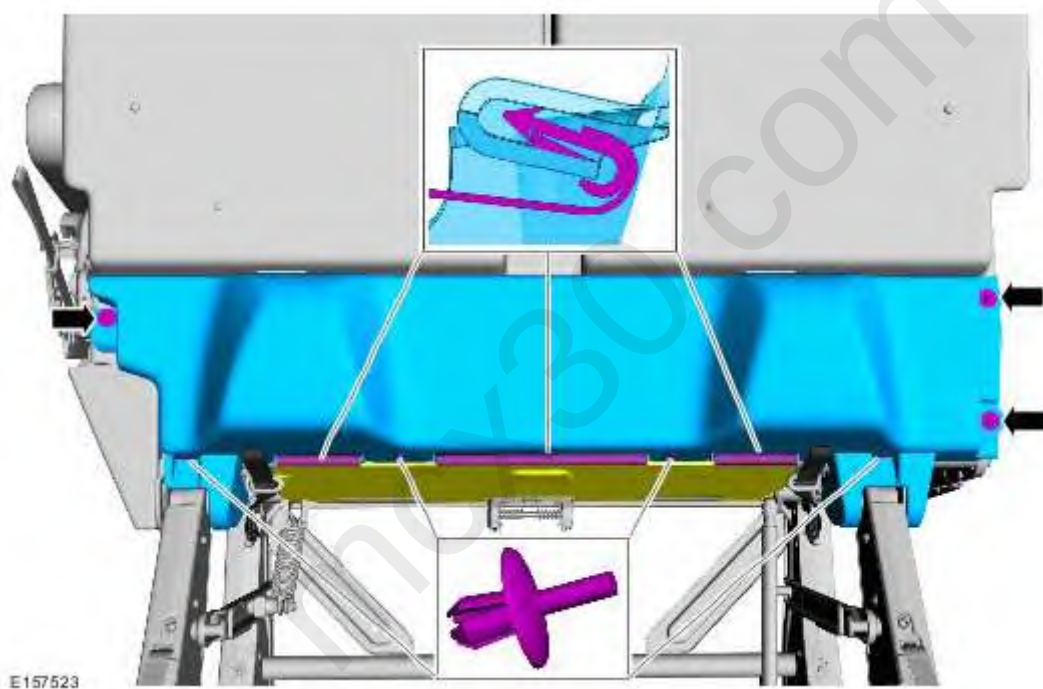


6.

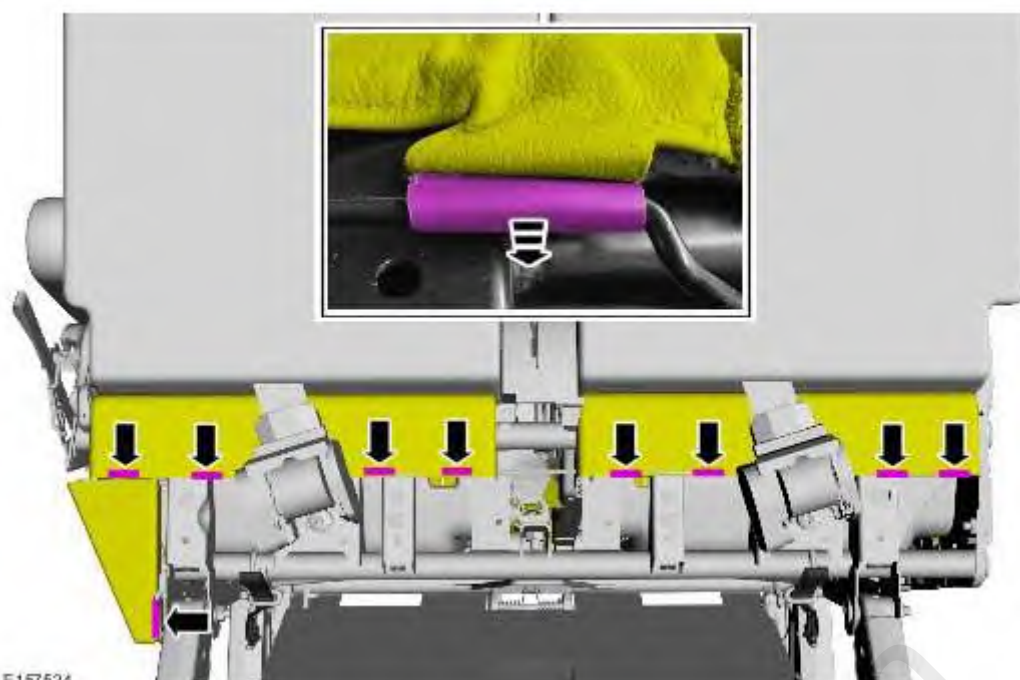

7.

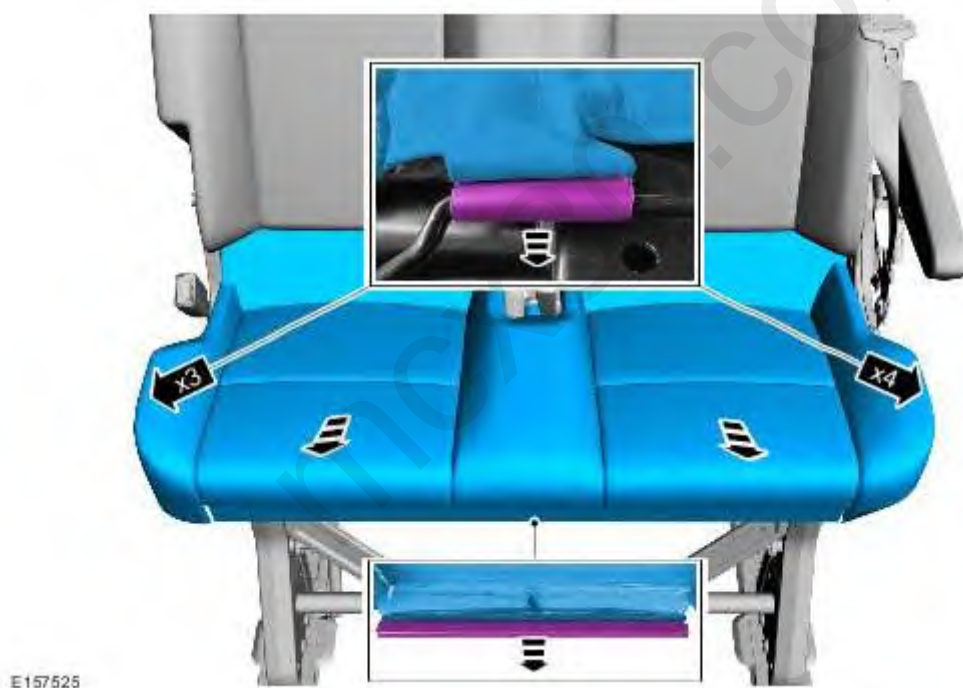


8.

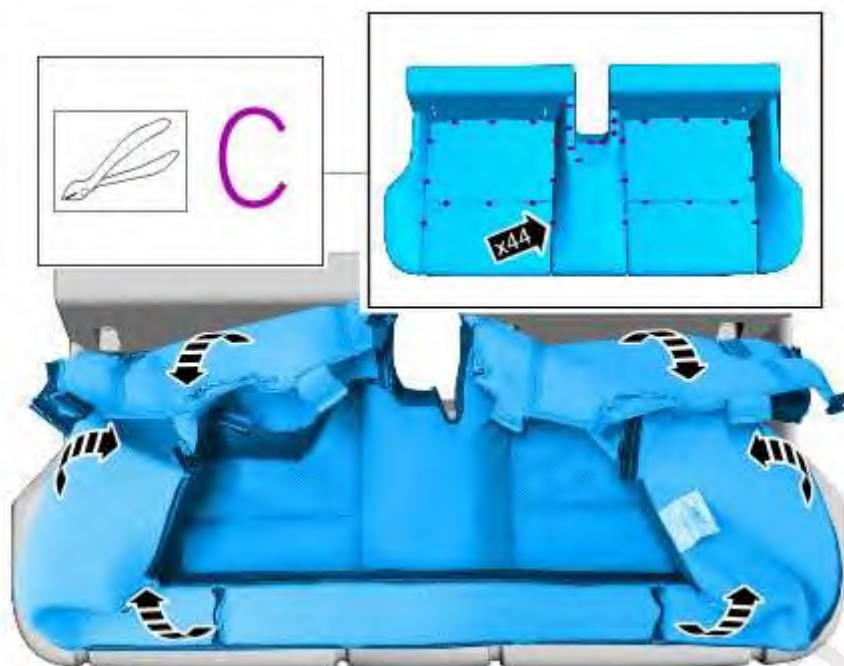

E157526

Installation

1. To install, reverse the removal procedure.
2. Use the General Equipment: [Hog Ring Plier](#)

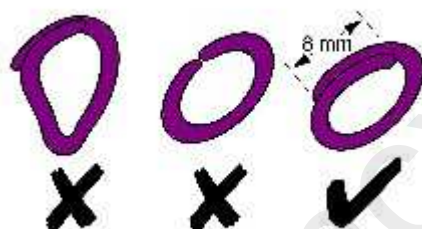

V400 1063