

Removal and Installation

General Equipment

Hog Ring Plier


Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Refer to: [Second Row Seat Head Restraint Guide Sleeve](#) (501-10B Second Row Seats, Removal and Installation).
- 2.



3. Torque: 40 Nm

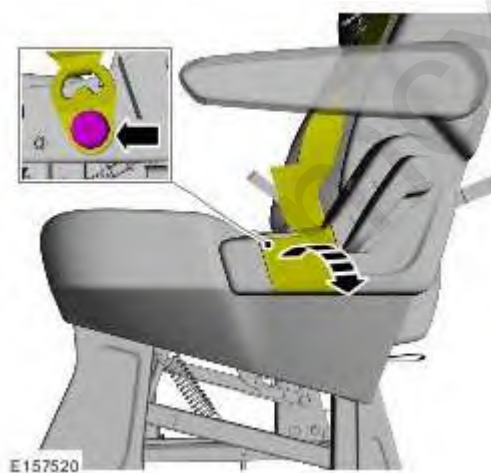


4. Torque: 3 Nm




5.




6. Torque: 3 Nm

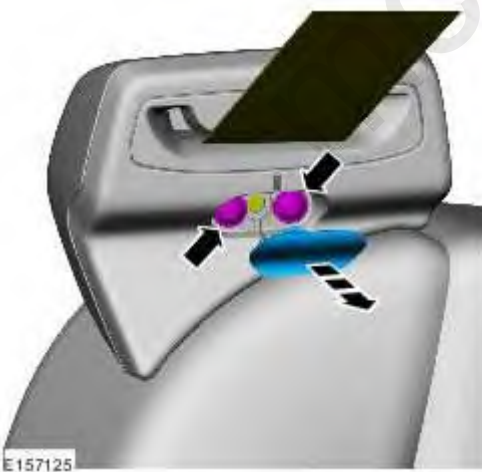


7.

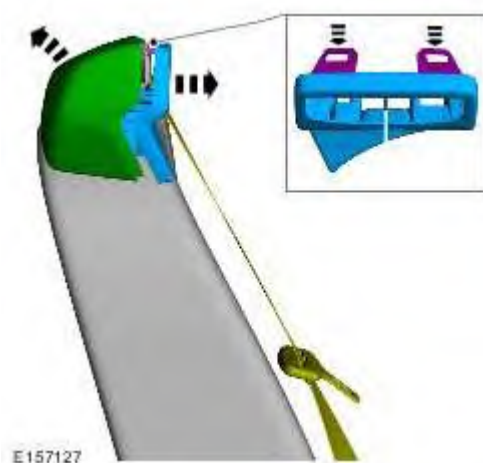


8.

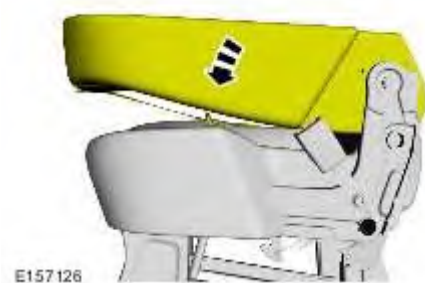


9.

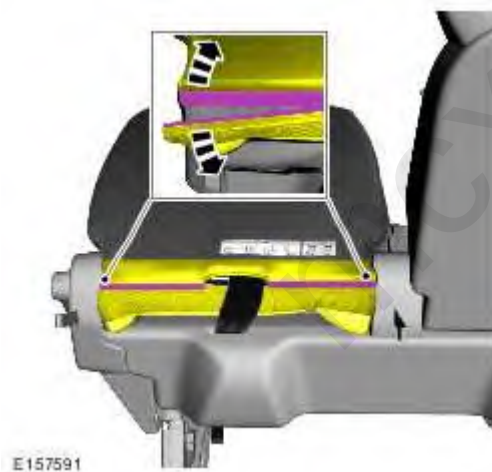

10.

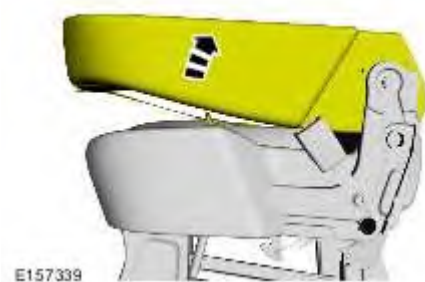

11. Torque: 40 Nm

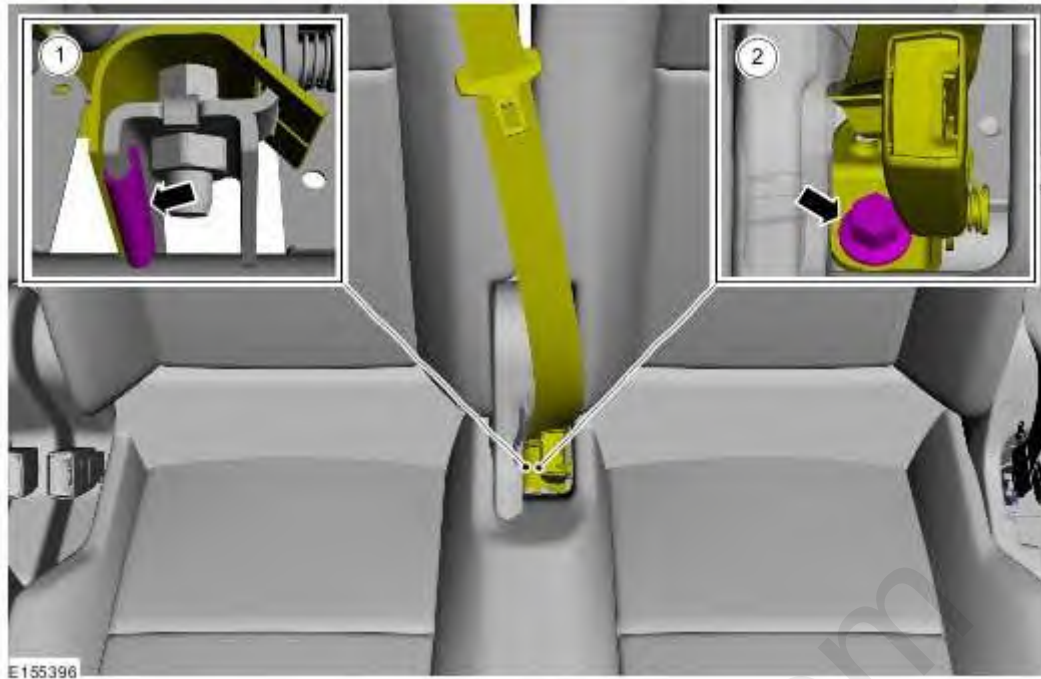


12.



Installation

1. To install, reverse the removal procedure.
2. Use the General Equipment: [Hog Ring Plier](#)

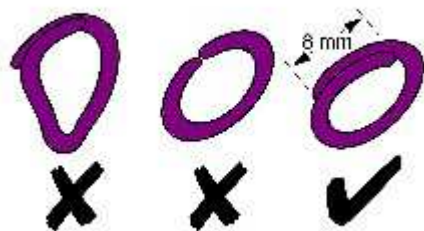

V4001063

mcx30.com