

Removal and Installation


General Equipment

Hog Ring Plier

Removal

NOTE: Removal steps in this procedure may contain installation details.


1. Refer to: [Second Row Seat Head Restraint Guide Sleeve](#) (501-10B Second Row Seats, Removal and Installation).
2. Torque: 3 Nm

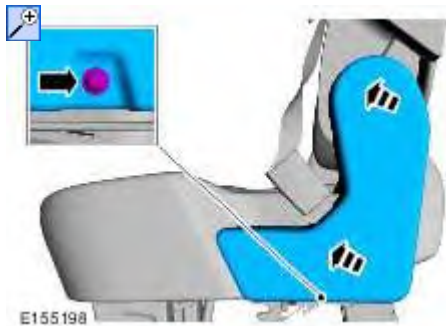

3.




4. Torque: 40 Nm

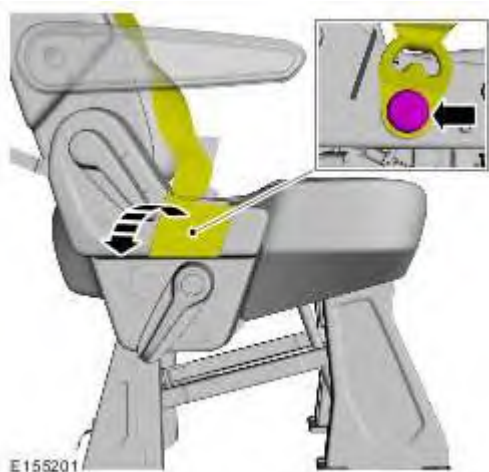


5. Torque: 3 Nm




6. Torque: 3 Nm


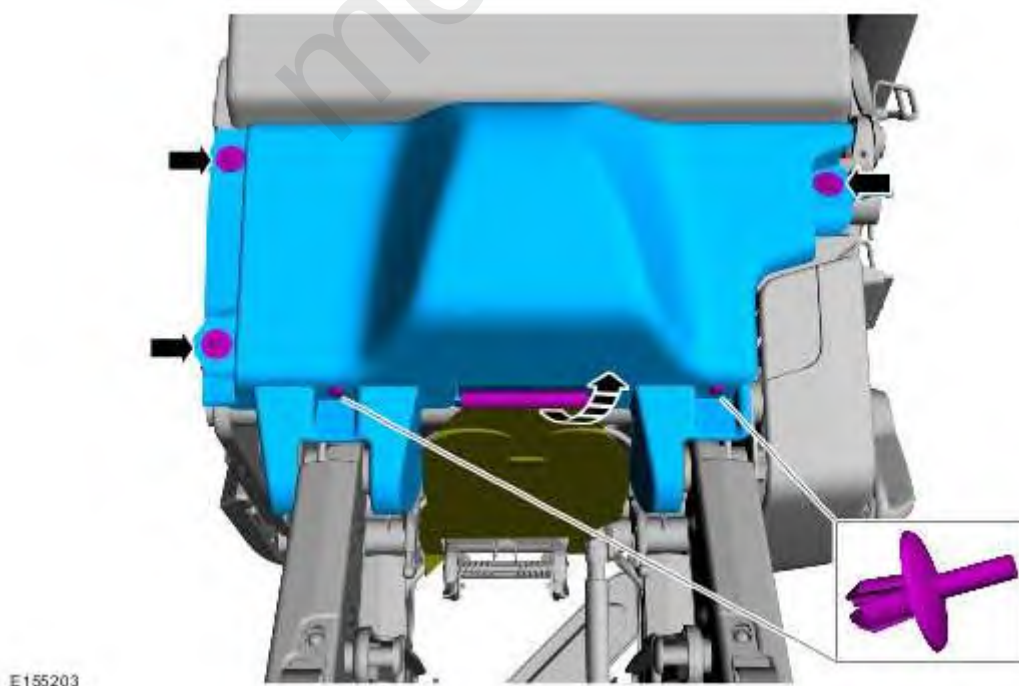


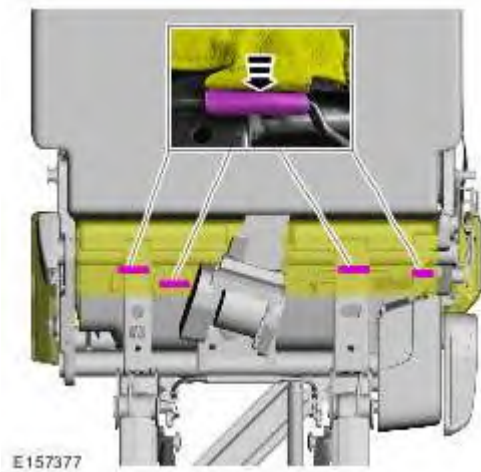

8.

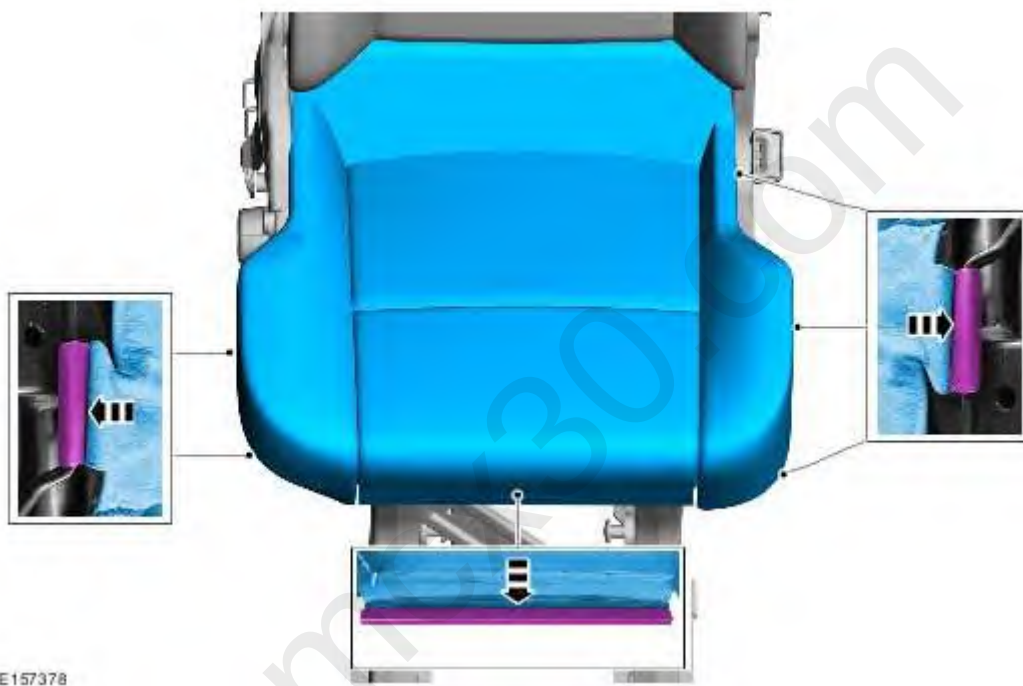


9.

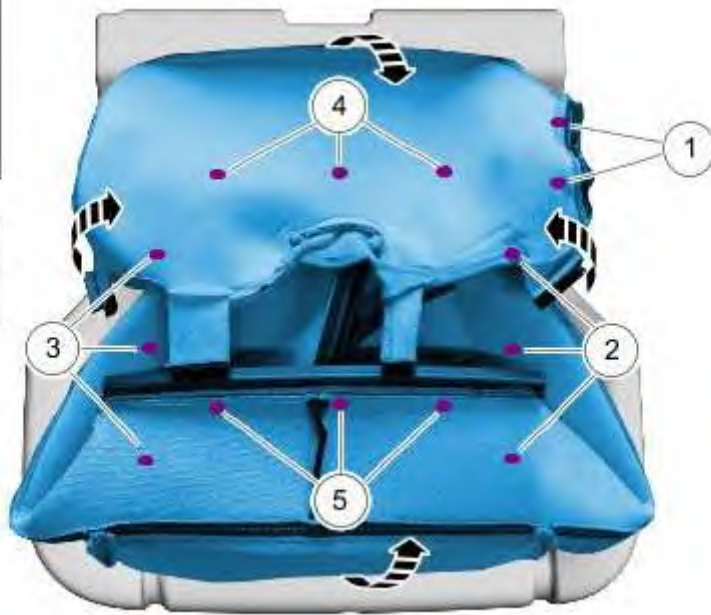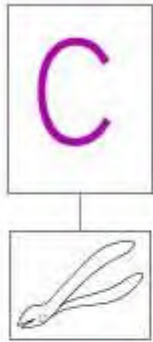

E157453

Installation

1. To install, reverse the removal procedure.
2. Use the General Equipment: [Hog Ring Plier](#)

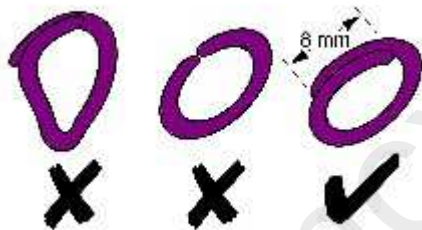

V400 1063