

Removal and Installation

Removal


NOTE: Front latch shown, rear latch similar.

NOTE: Removal steps in this procedure may contain installation details.


1.



2.

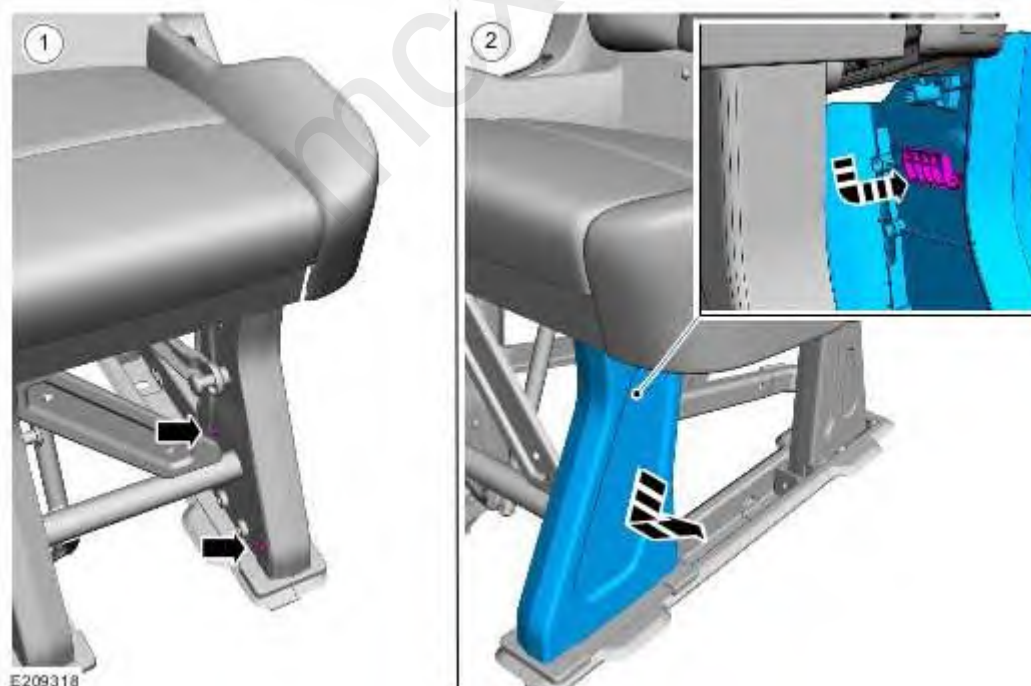


3.

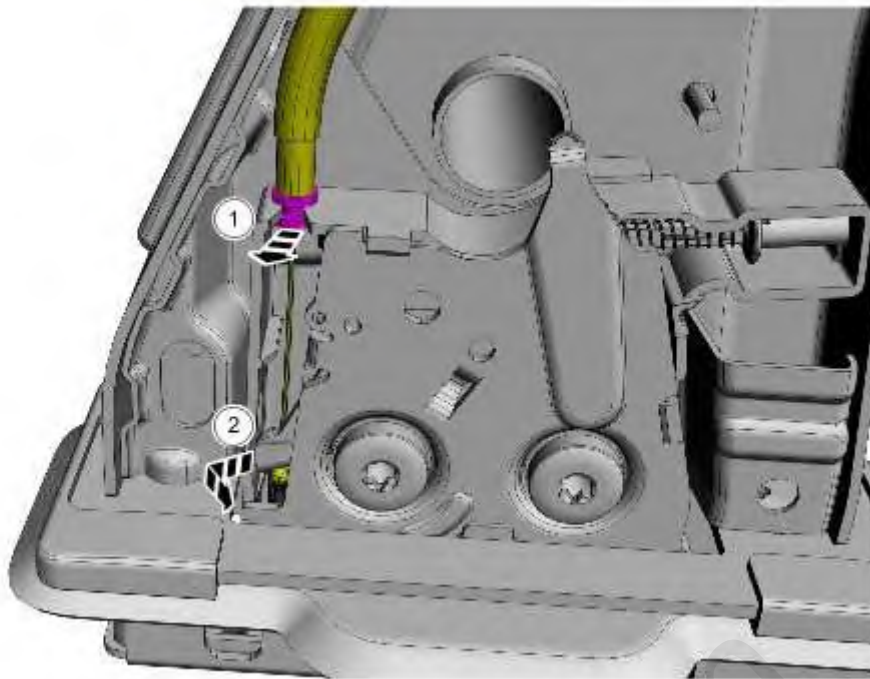

E209319

4. Torque: 65 Nm

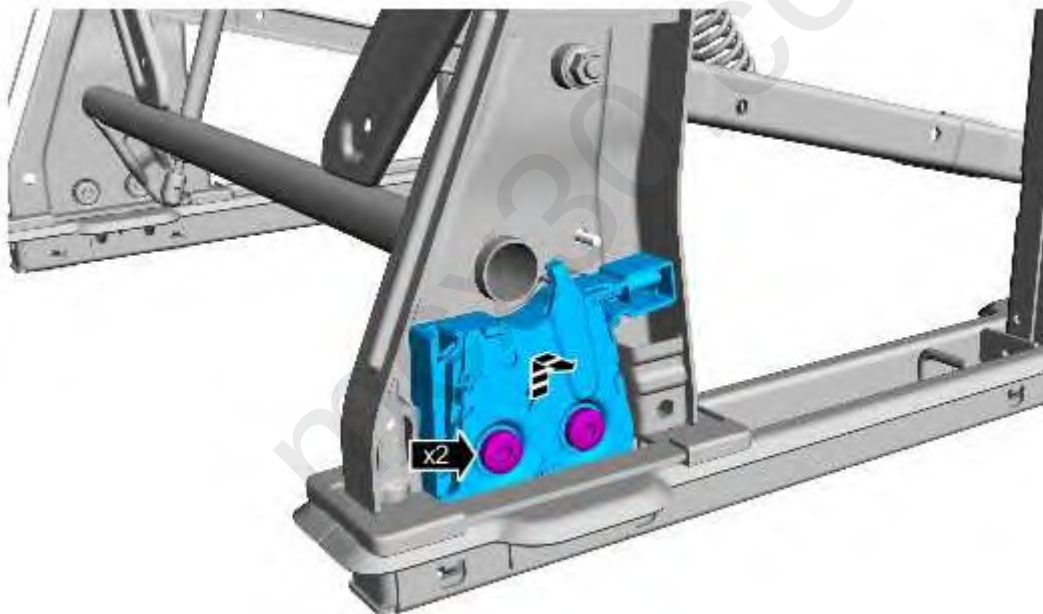


E209320

Installation


NOTE: Front latch shown, rear latch similar.

1. To install, reverse the removal procedure.
2. Fabricate a spacer.

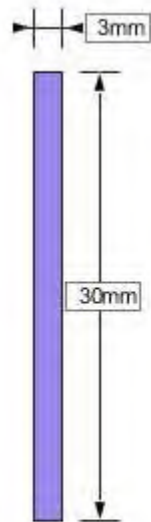

E209429

3.

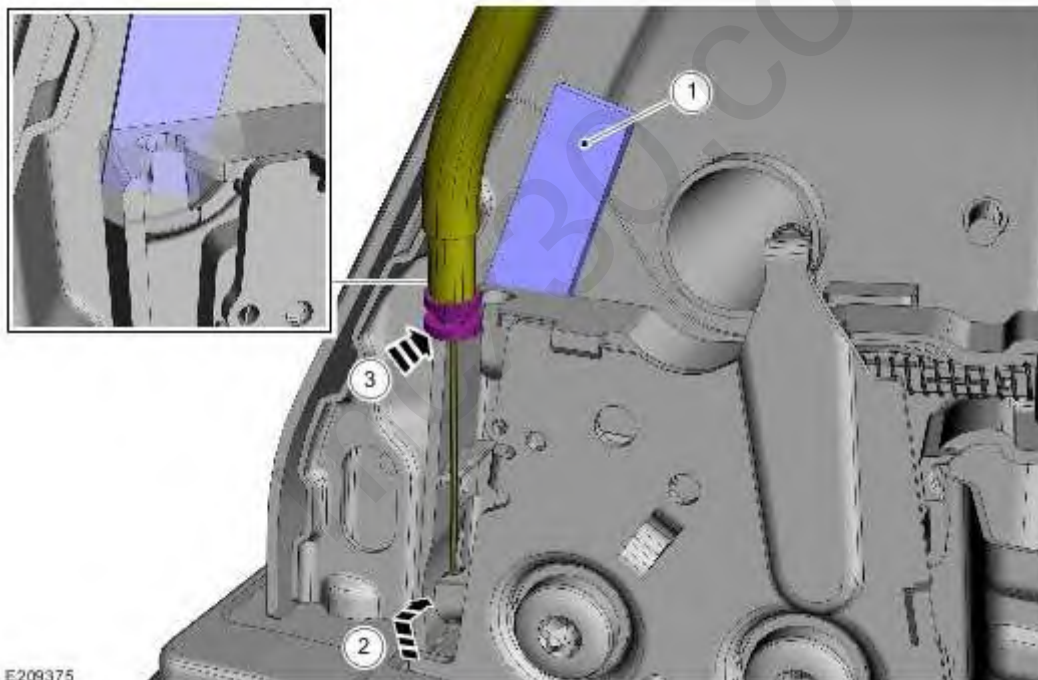

E209375