

Removal and Installation


Removal

NOTE: Removal steps in this procedure may contain installation details.


1.



2. On both sides.

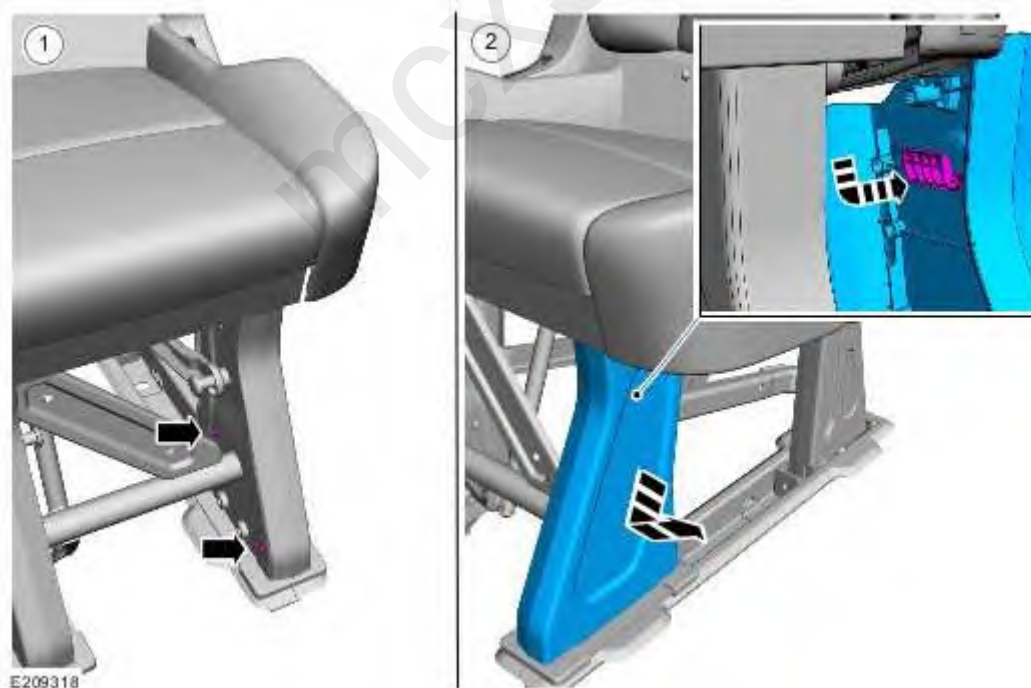

3. On both sides.

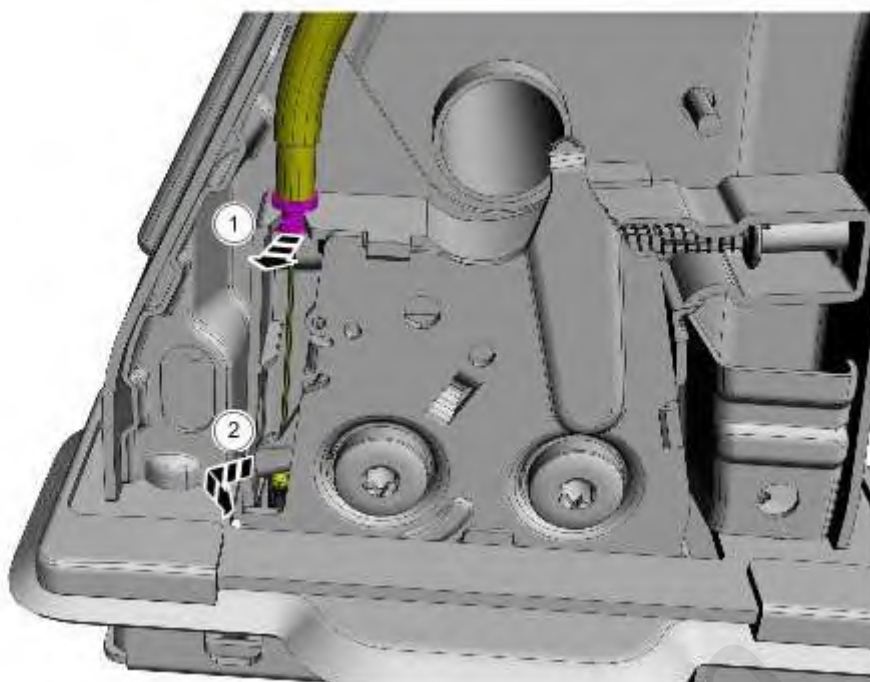


E209319

4.




E209521

5. Torque: 10 Nm

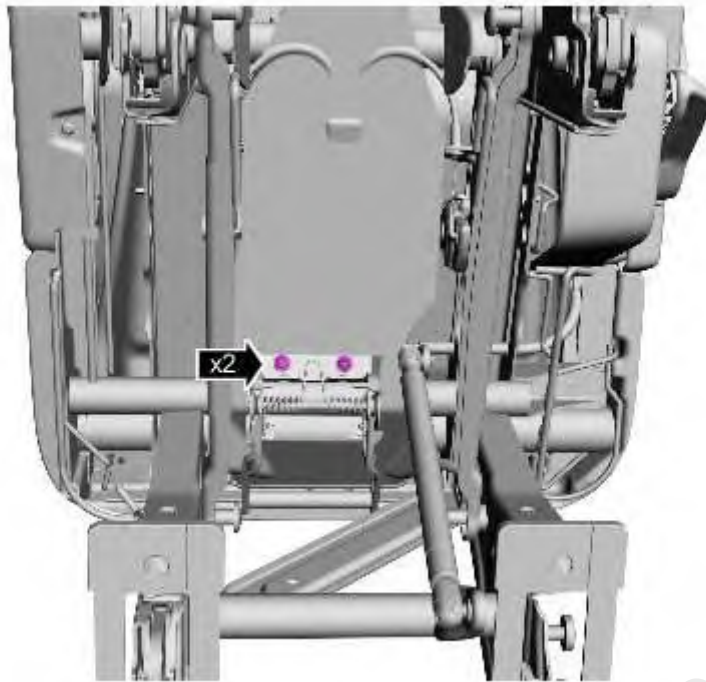

E209522


6.

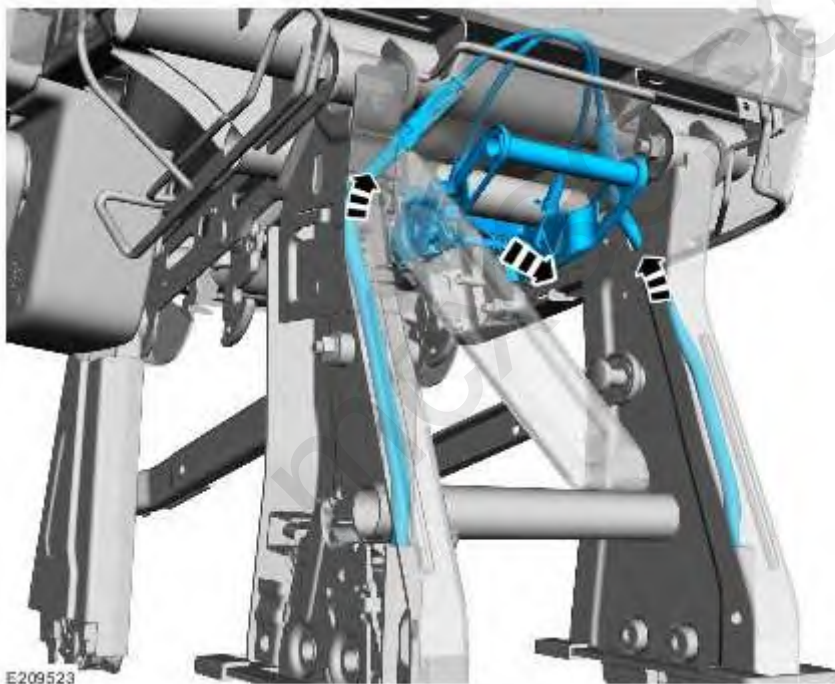


E209523

Installation

1. To install, reverse the removal procedure.
- 2.


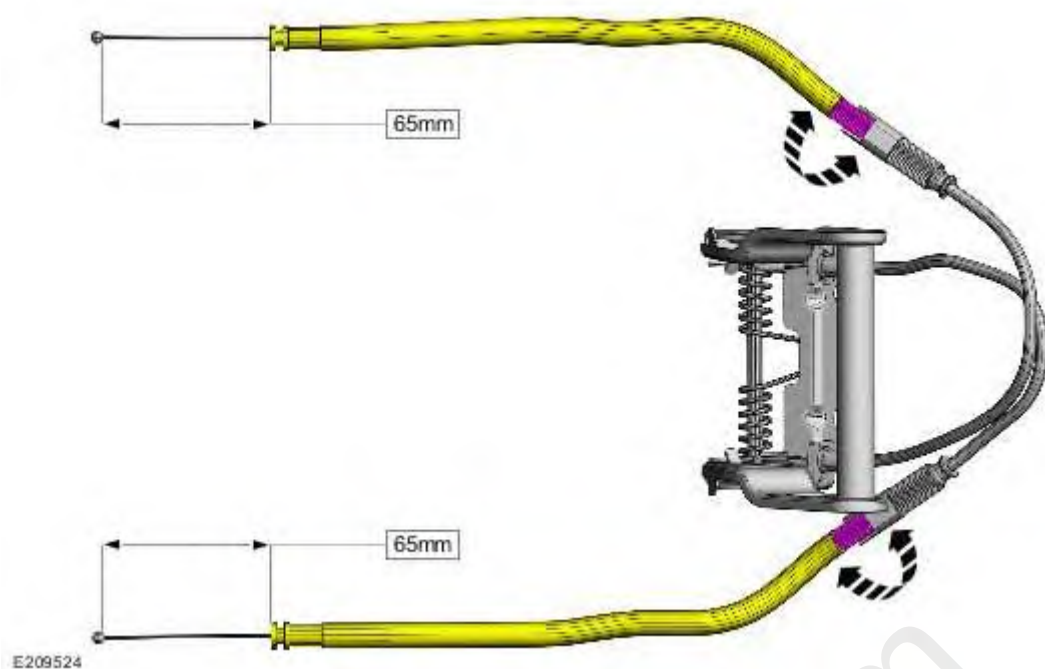


3. Fabricate a spacer.

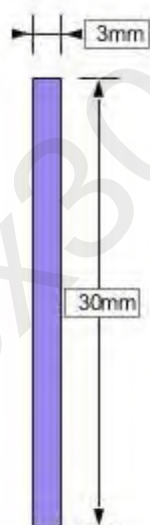

E209429

4. On both sides.

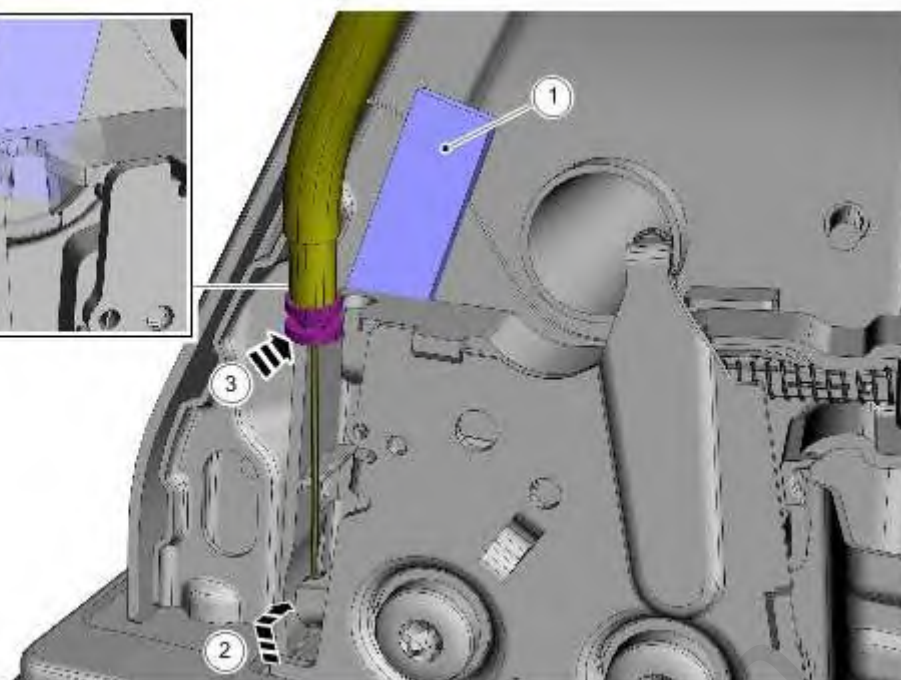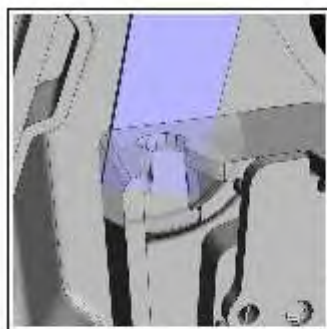

E209375

mcx30.com