

General Procedures

Initialization

1.  **WARNING:** Keep objects and body parts clear of the glass panel when carrying out the initialization procedure. During the initialization procedure, the glass panel closes with high force and cannot detect objects in its path. Failure to follow this instruction may result in serious personal injury.

NOTE: Make sure that the window runs are correctly installed and free of foreign material.

NOTE: If the power to a window regulator motor has been disconnected, it is necessary to initialize that window regulator motor.

NOTE: Wait for a minimum of 1 minute before connecting the battery, fuse or electrical connector.

Start the engine.

2.





3.




E 138691

4.

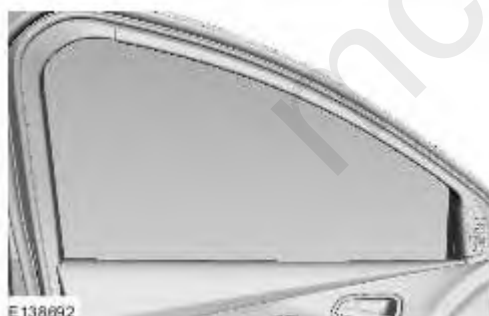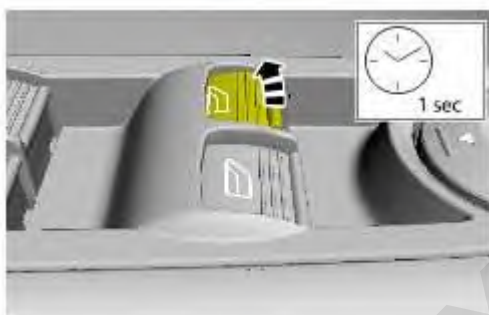

E 138692


5.

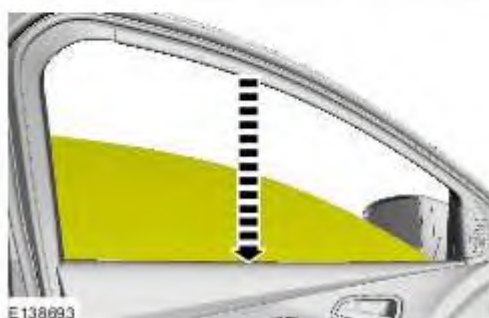

6.




7.

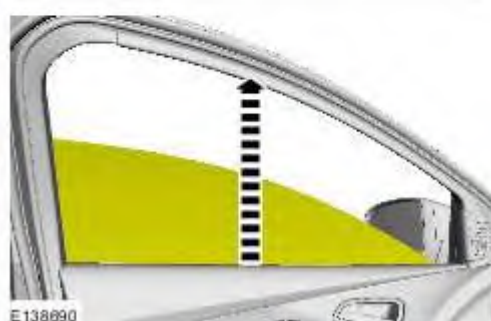

E 138890

8.

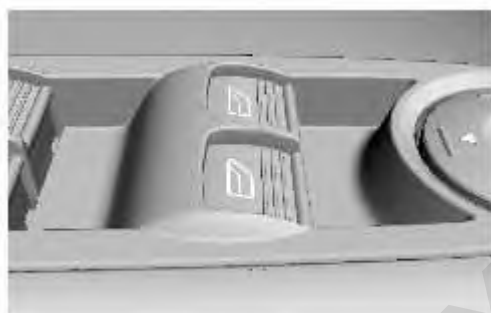

E 138891