


Removal and Installation


Removal


NOTE: Removal steps in this procedure may contain installation details.

1. Refer to: [Front Door Trim Panel](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).
- 2.

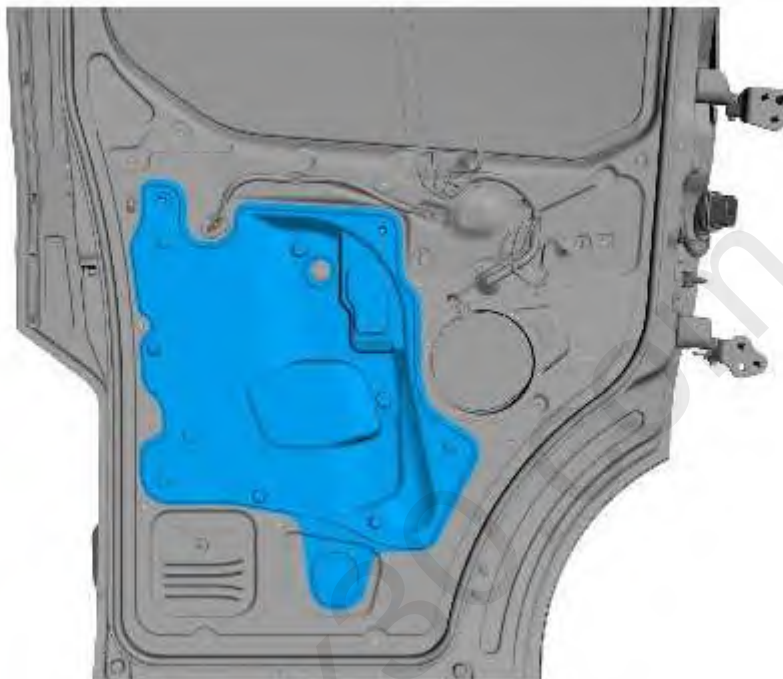


- 3.

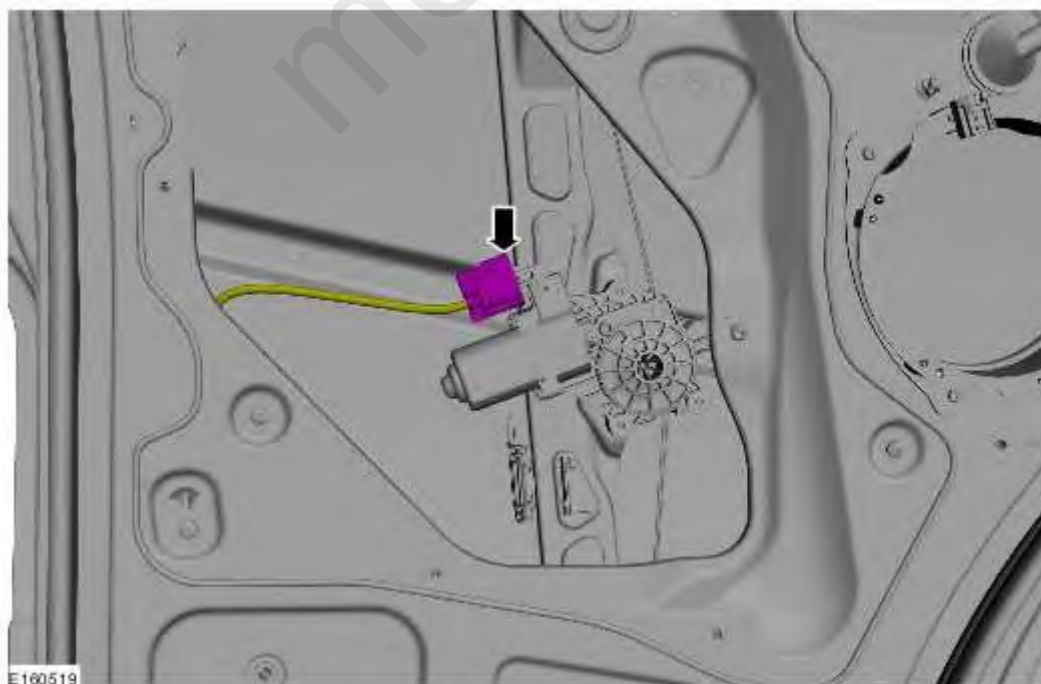

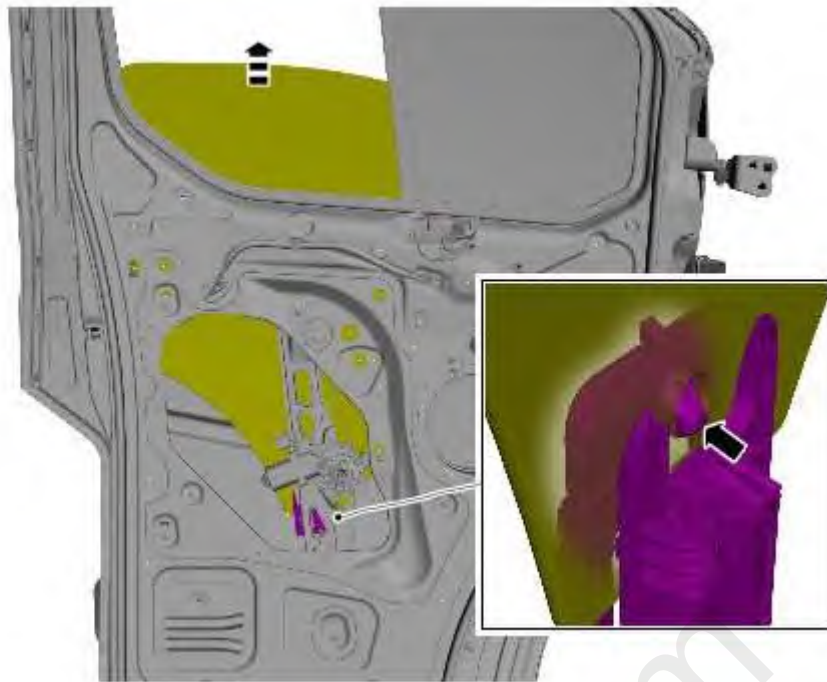


E160520

5.

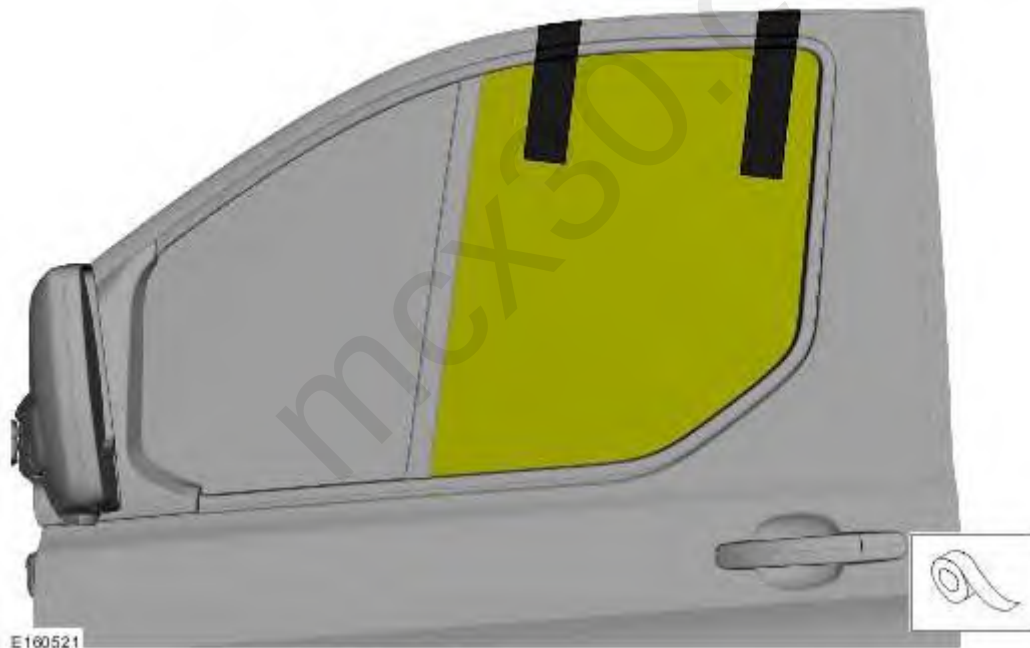

E160521

6. Torque: 7 Nm

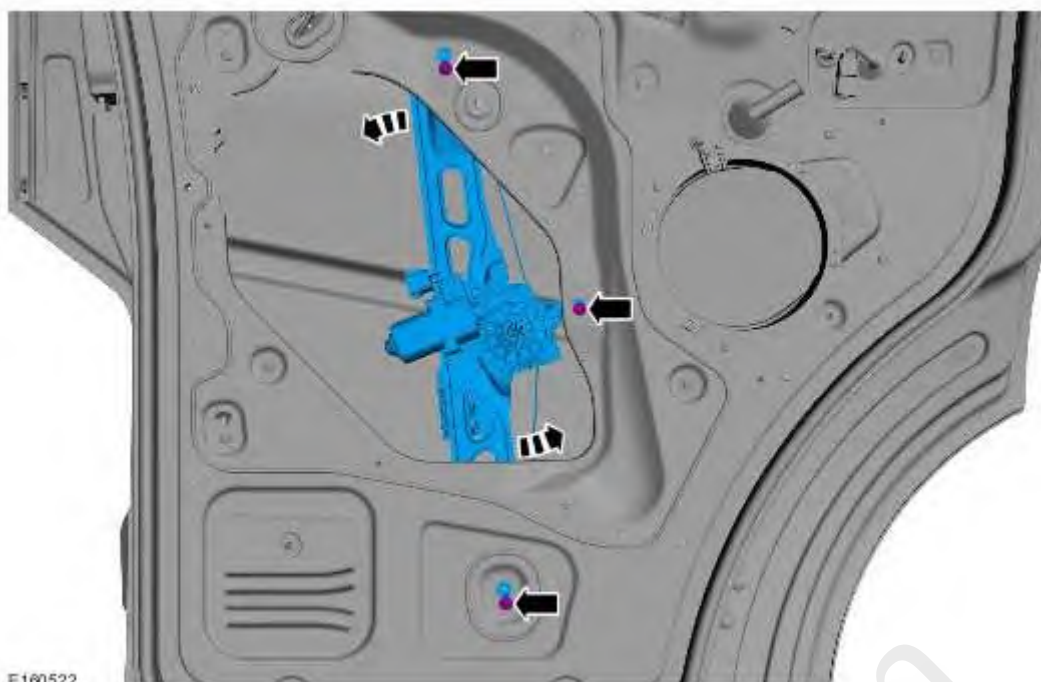

E160522

Installation

1. To install, reverse the removal procedure.