


Removal and Installation


Removal

NOTE: Removal steps in this procedure may contain installation details.


1. Refer to: [Front Door Trim Panel](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).
2. Refer to: [Front Door Window Control Switch](#) (501-11 Glass, Frames and Mechanisms, Removal and Installation).
- 3.

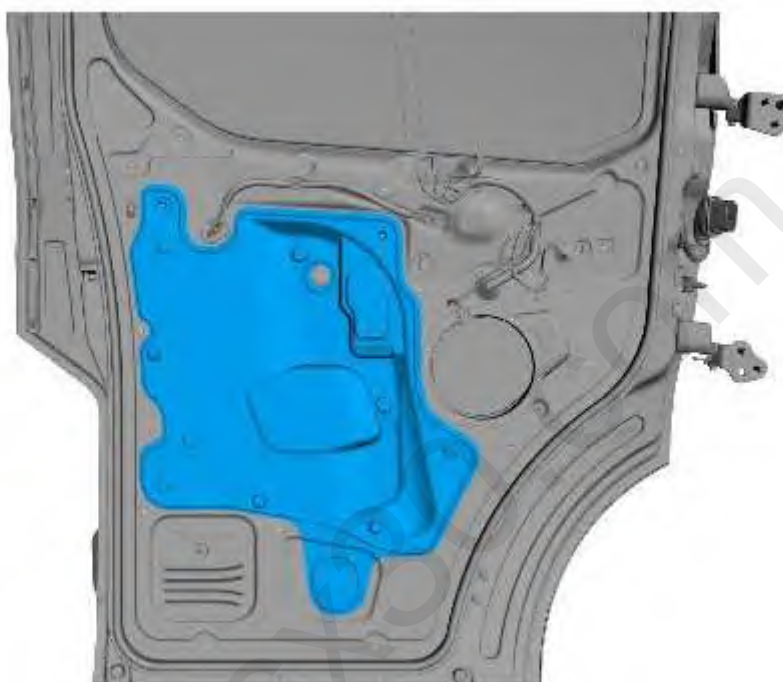


4. Torque: 9 Nm

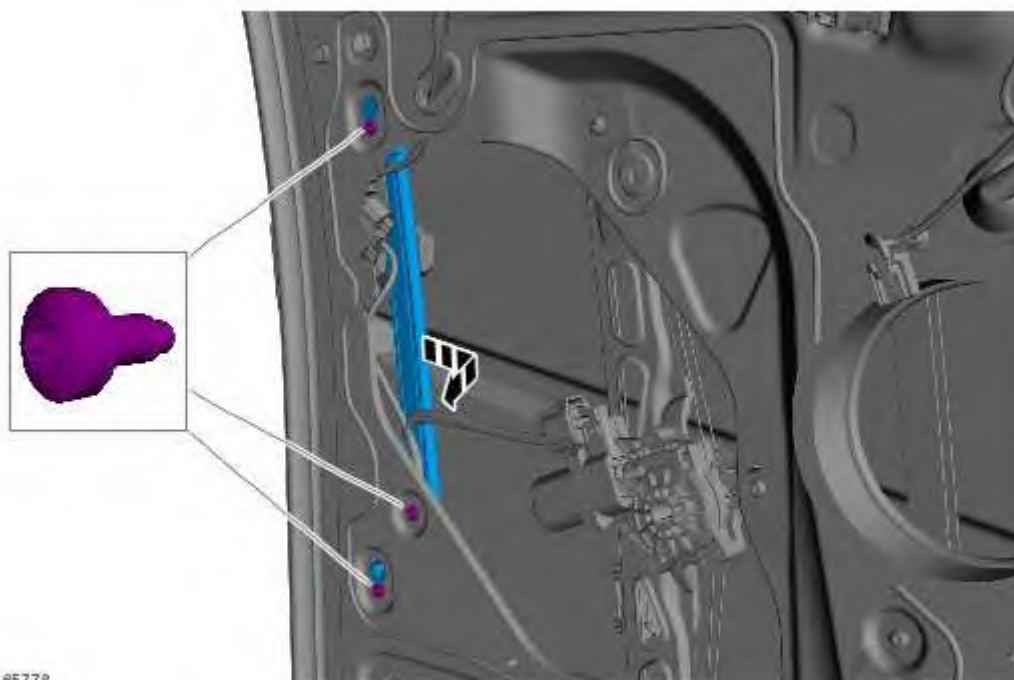


5.

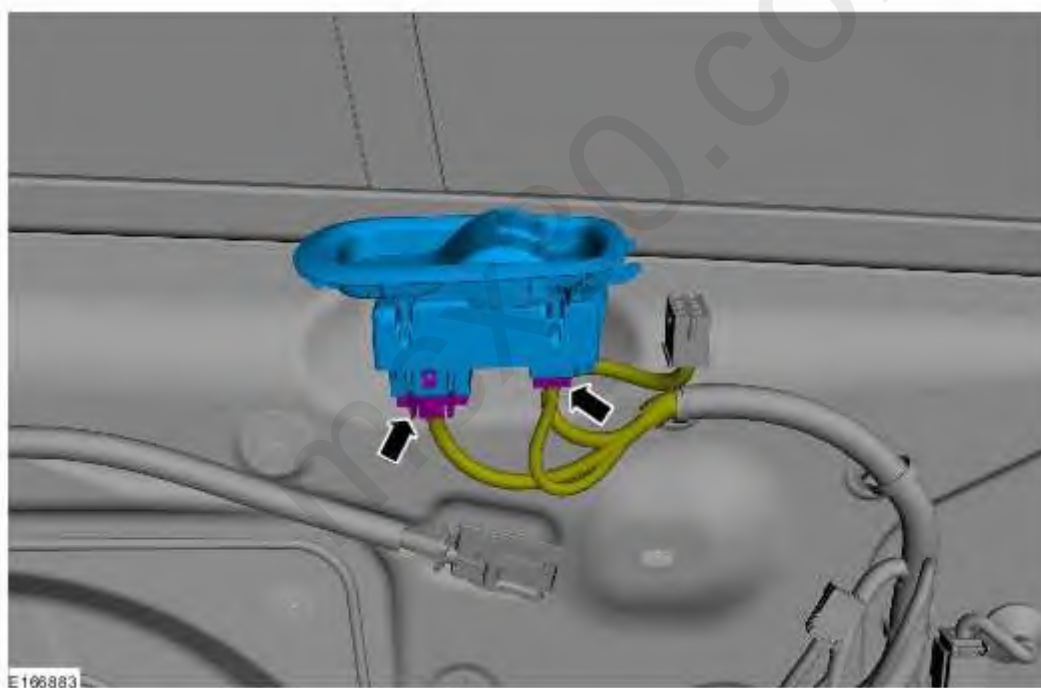

6.

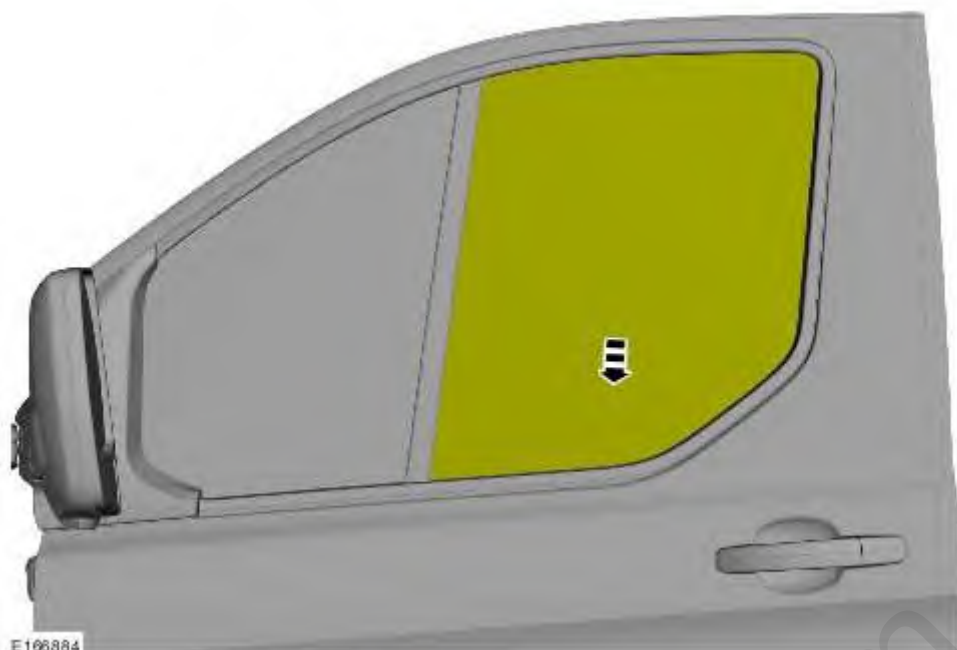


7.

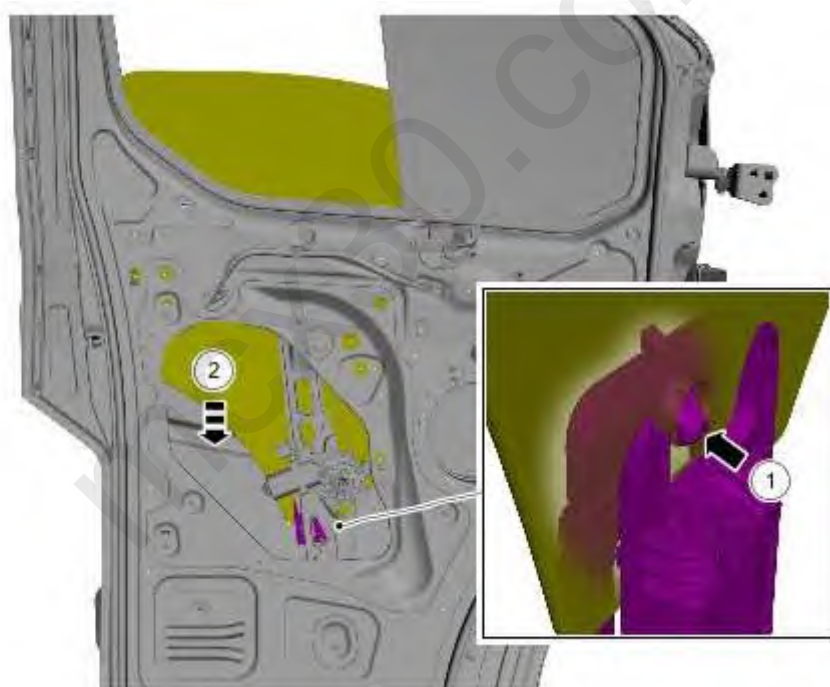


8.

E106976

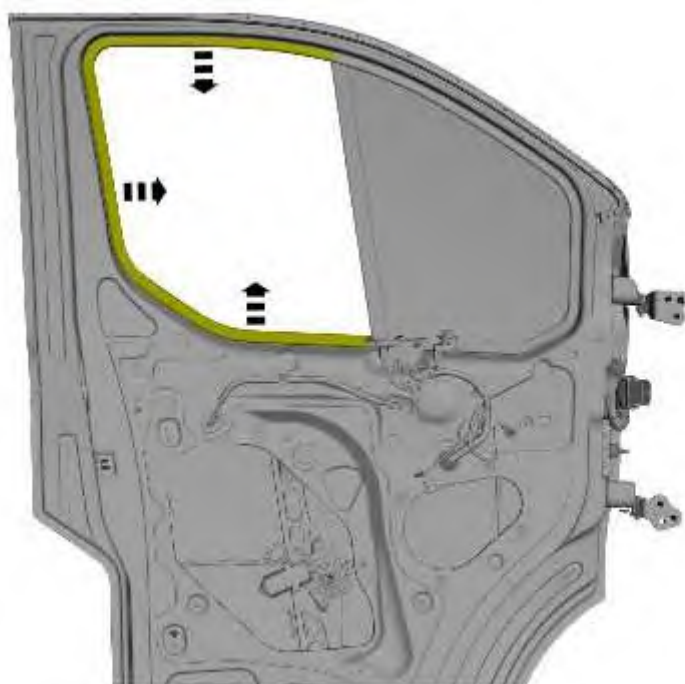


9.

E106885

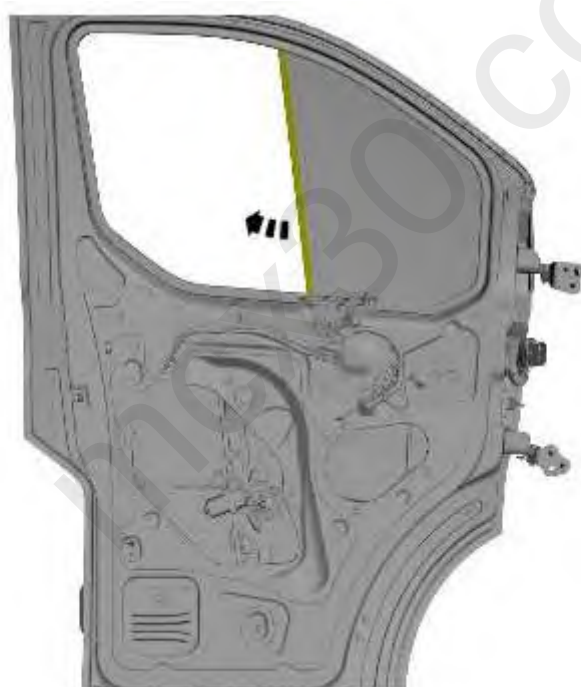


10. Torque: 9 Nm

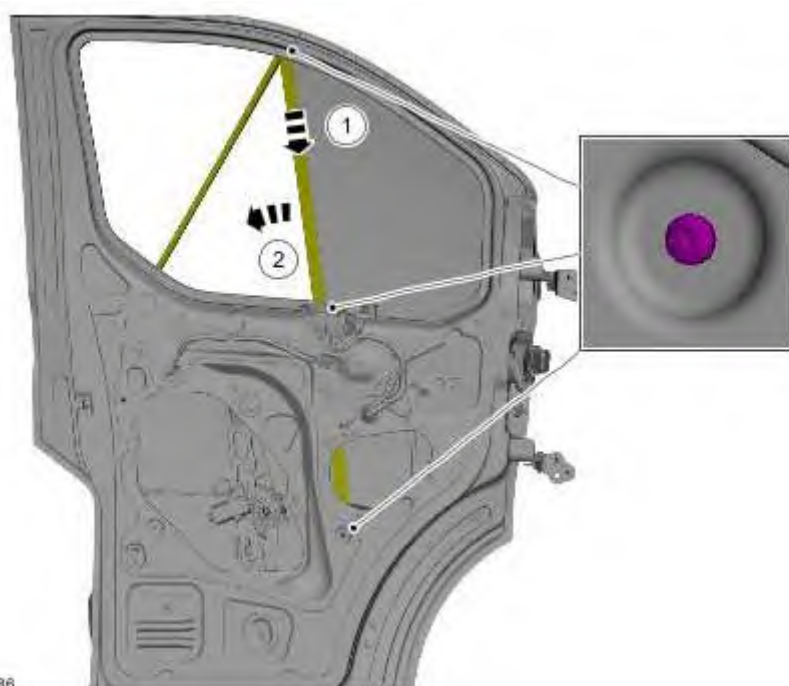


E106886

11.

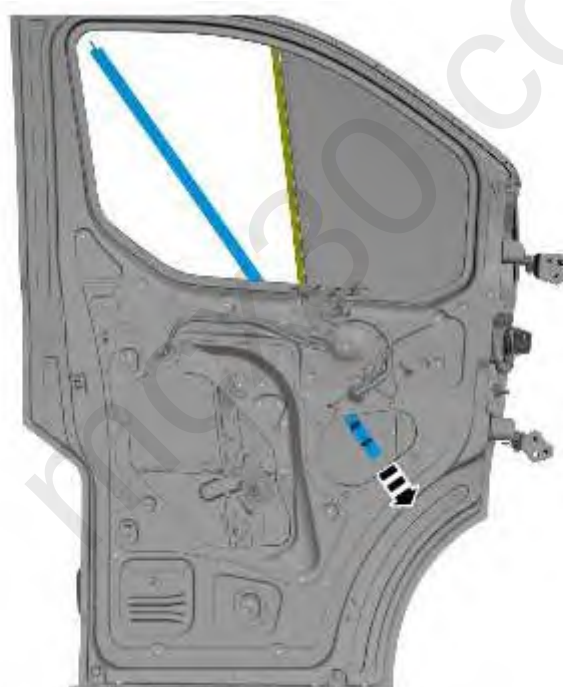

E106887

12.

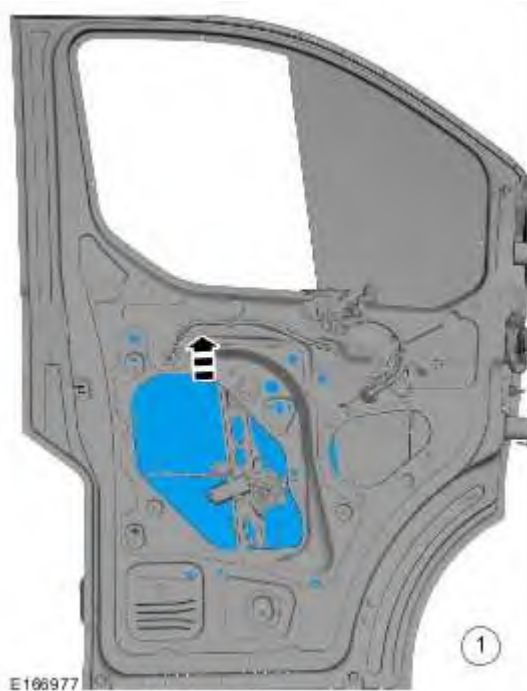

Installation

1. To install, reverse the removal procedure.