

Removal and Installation

General Equipment

Flat Headed Screw Driver


Removal

NOTE: Removal steps in this procedure may contain installation details.

1. On both sides.

Refer to: [A-Pillar Trim Panel](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).


- 2.

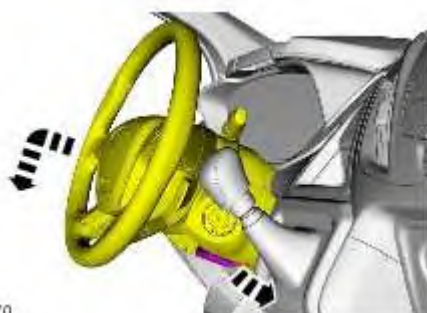

- 3.




- 4.

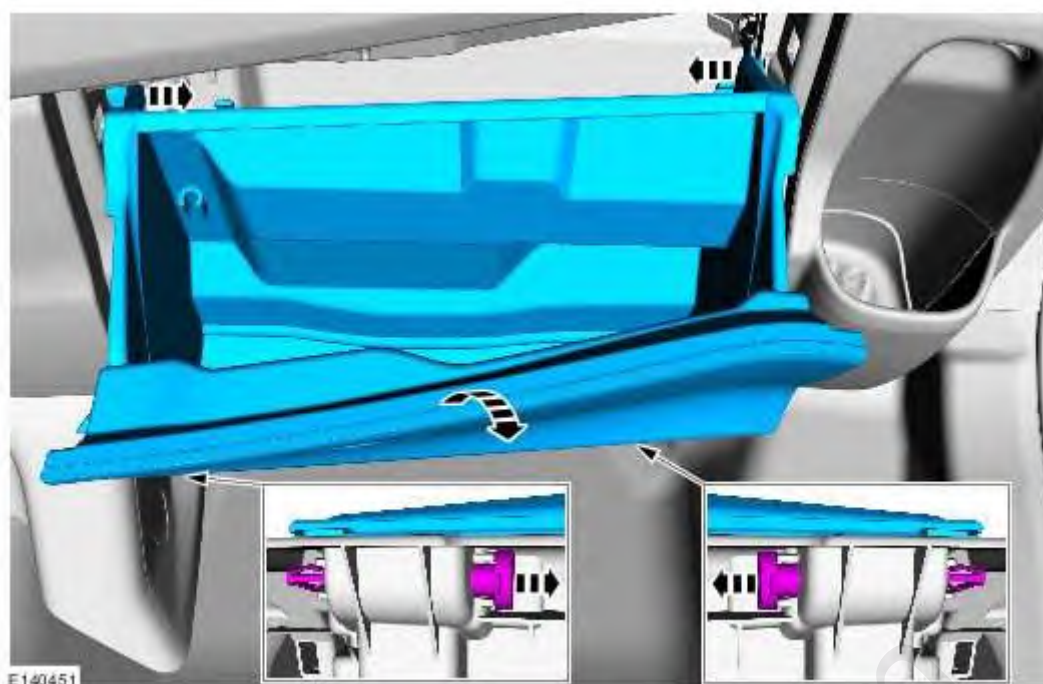


5.



6.

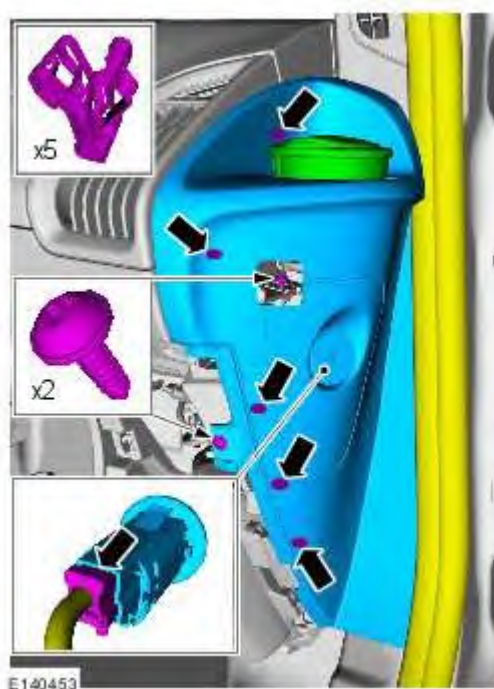



7.

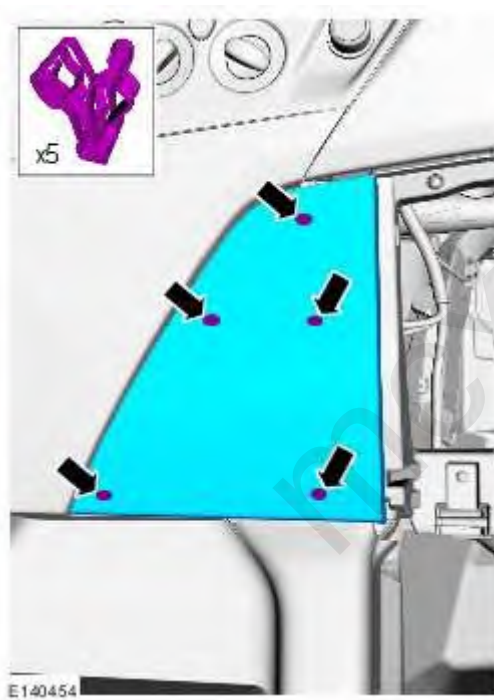

8.



9.

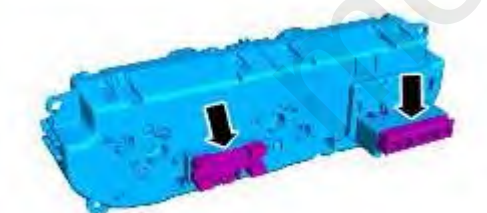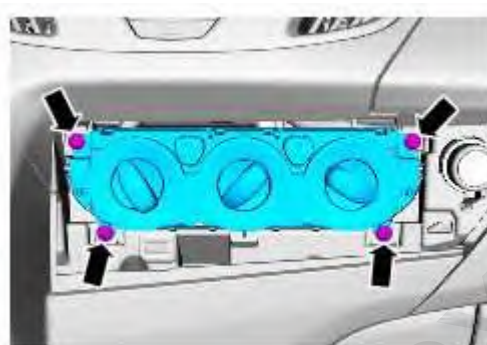

E140558


10.




11.




12.

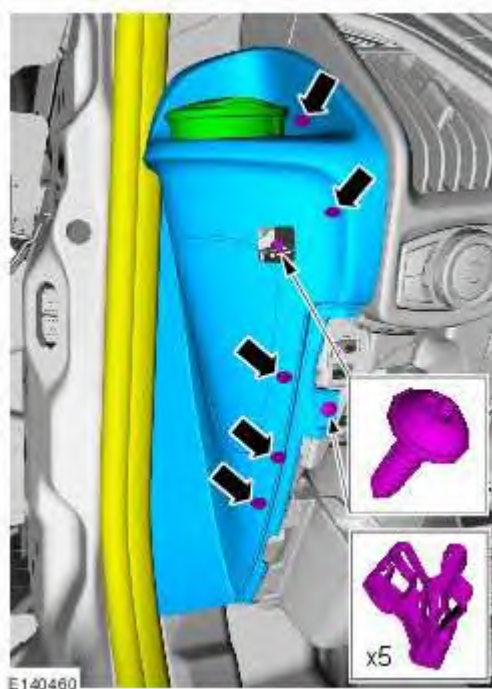


13.

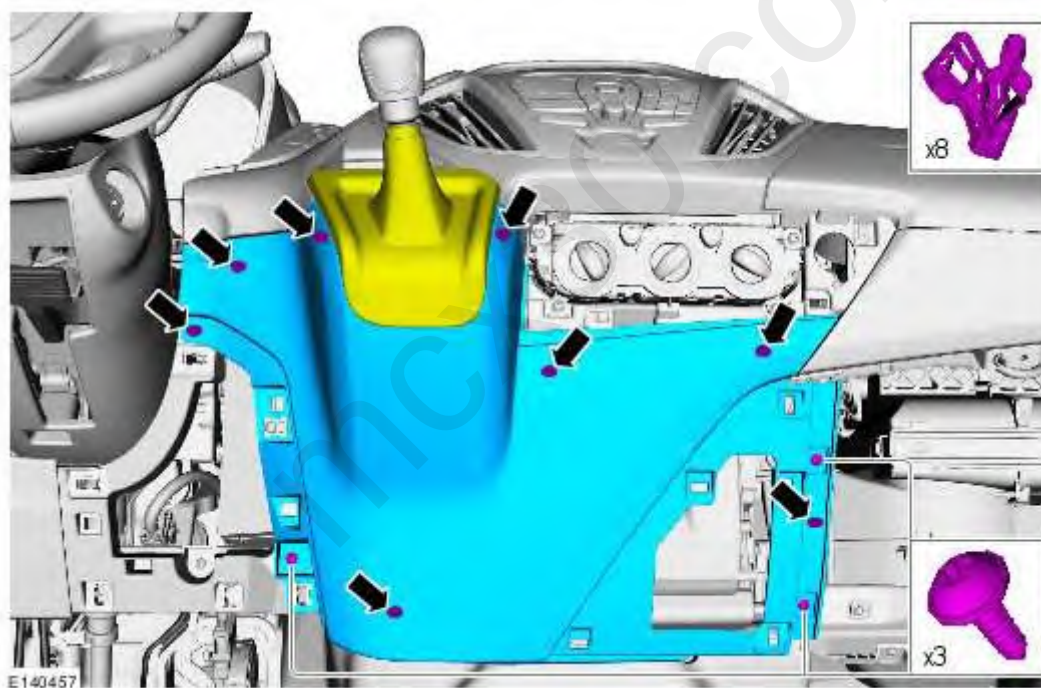


14.

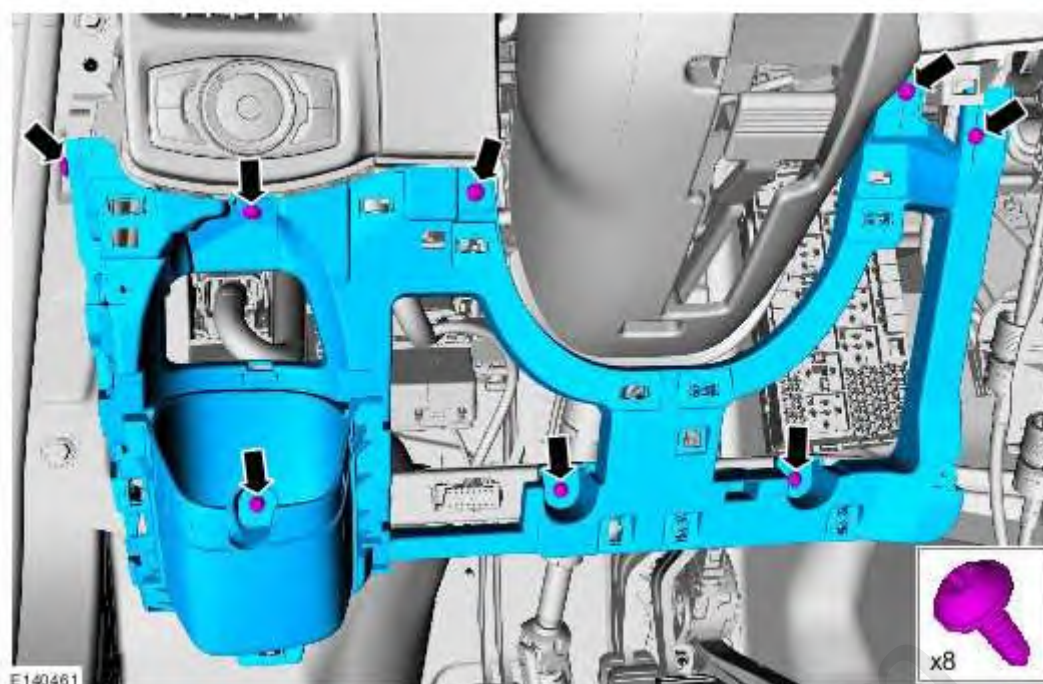


15.

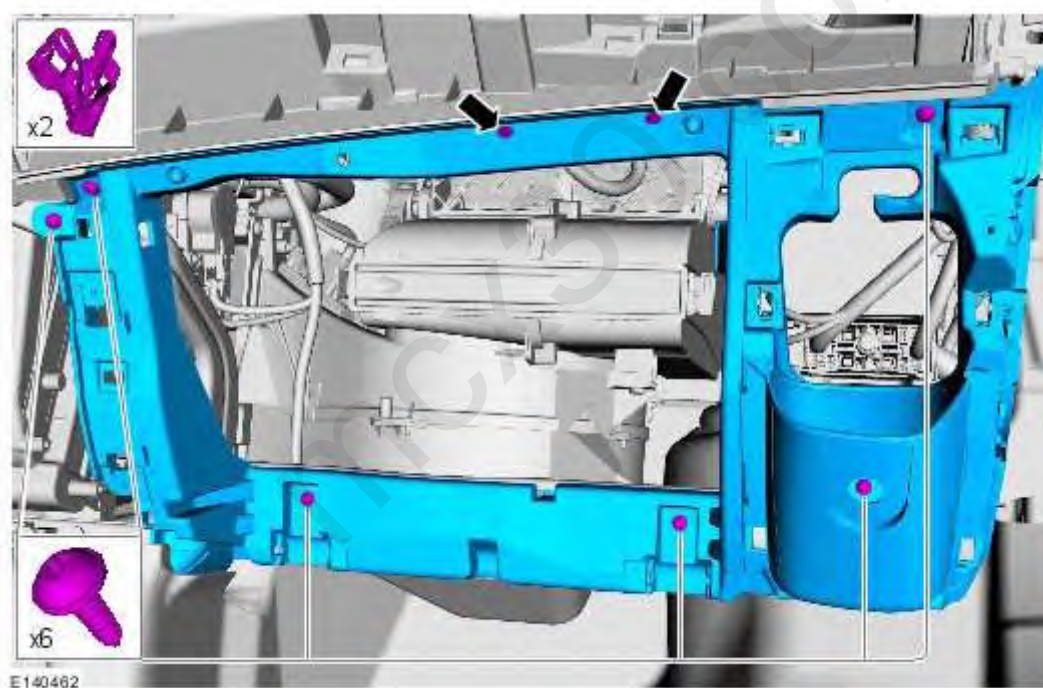

16.

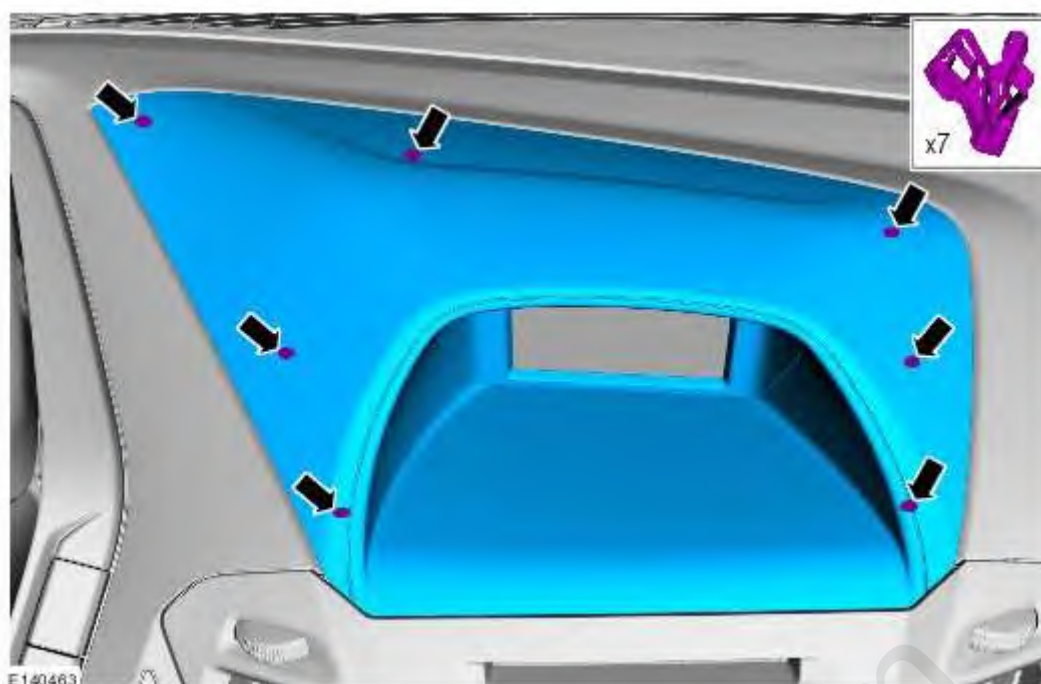


17.

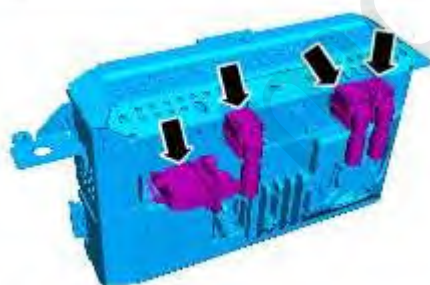

18.




19.

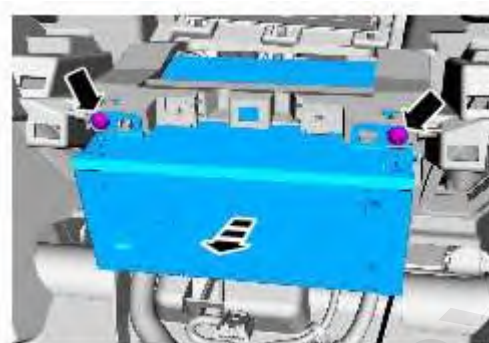


E140628


20.

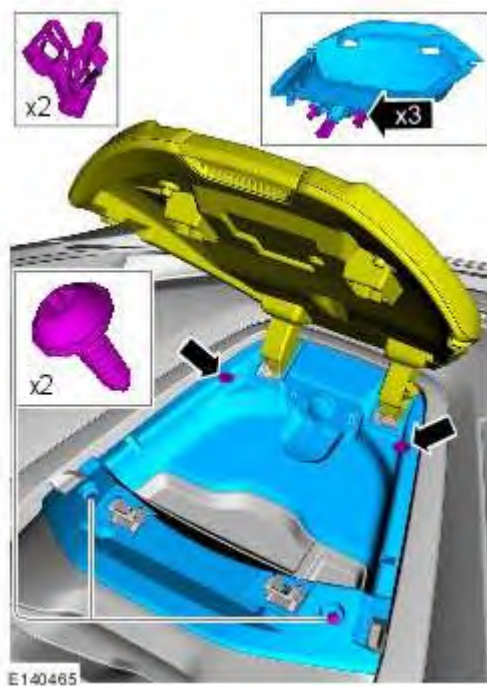

21.

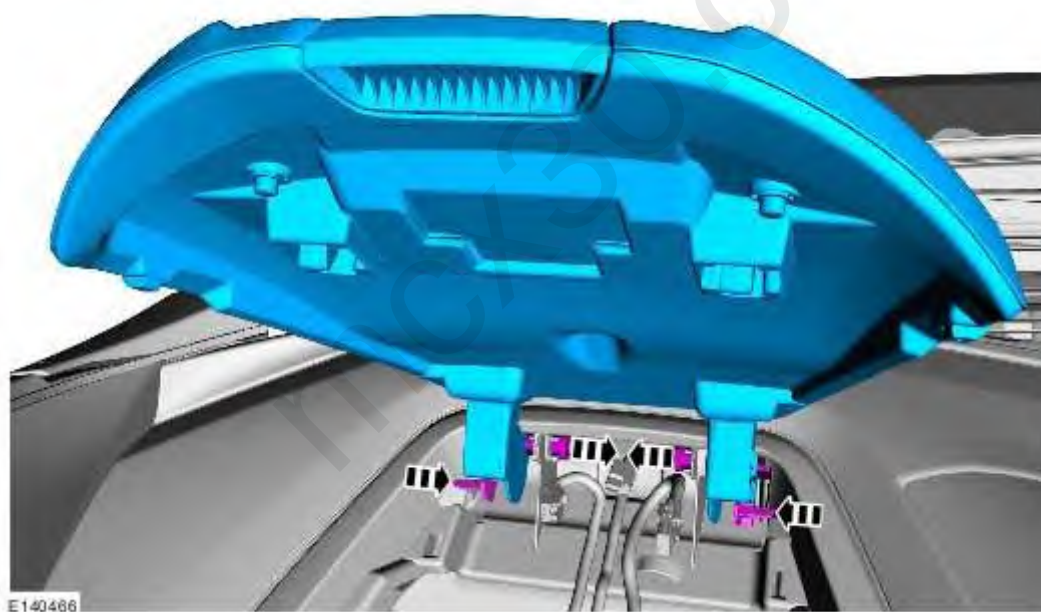


22. Use the General Equipment: [Flat Headed Screw Driver](#)

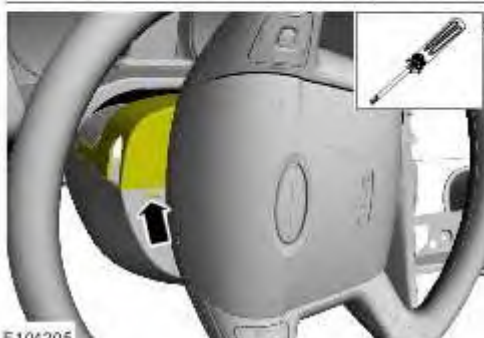


E104205

23.

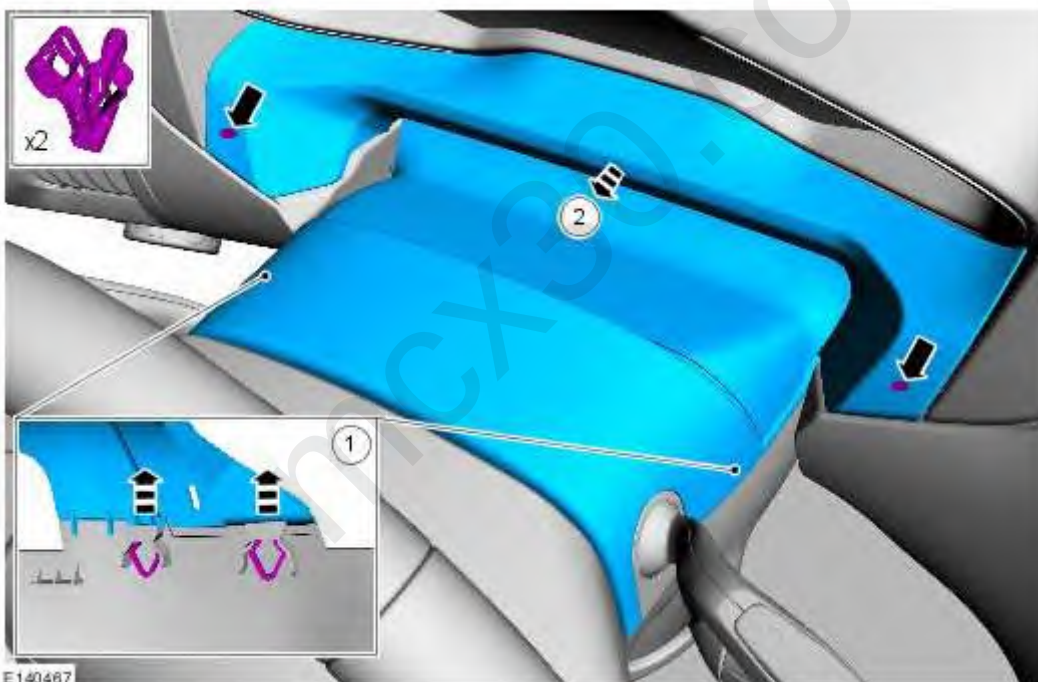


E140487


24.

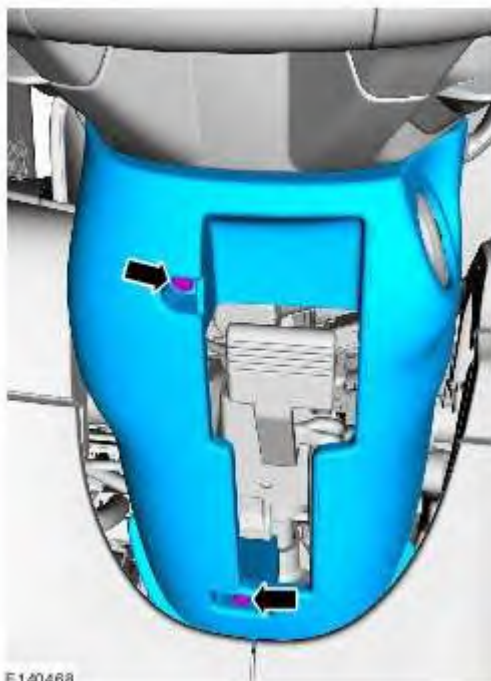


25.

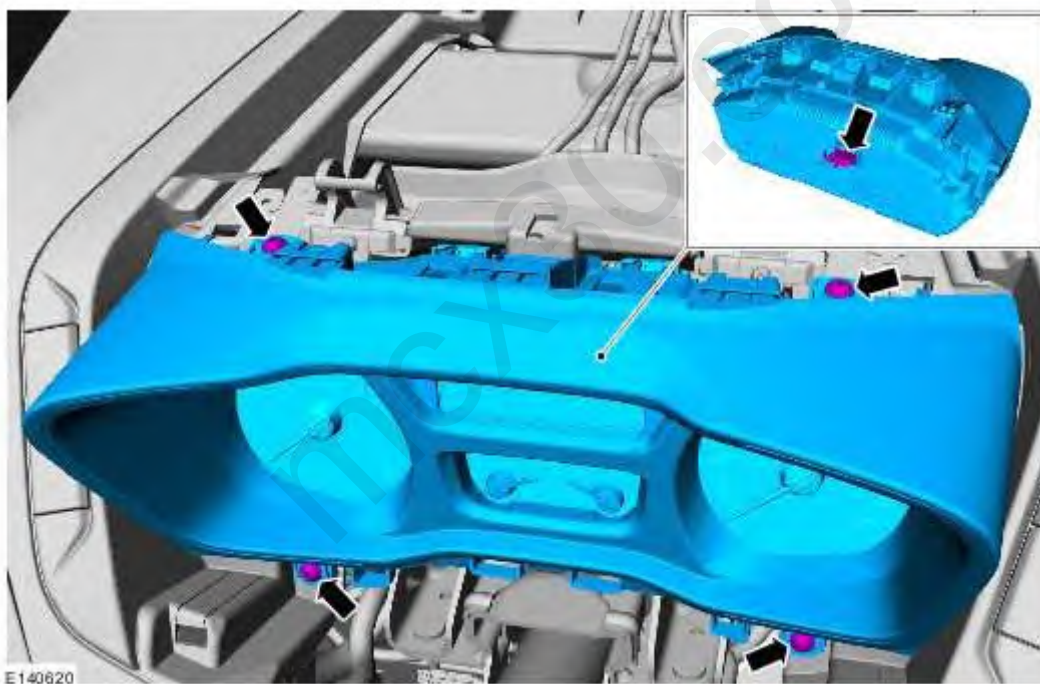


26.

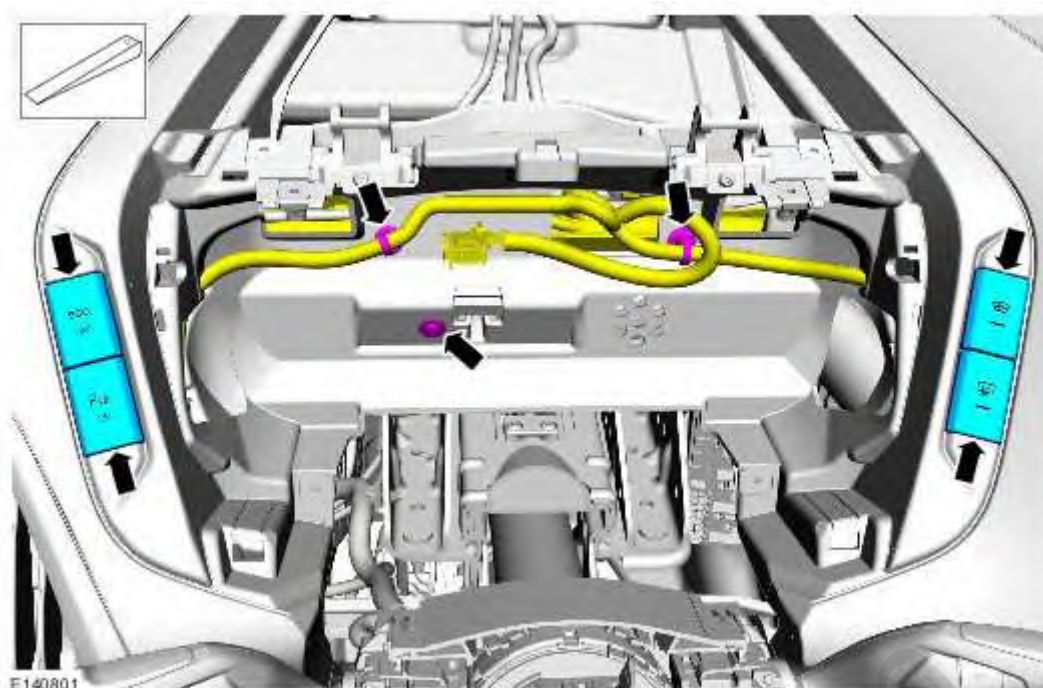

27.

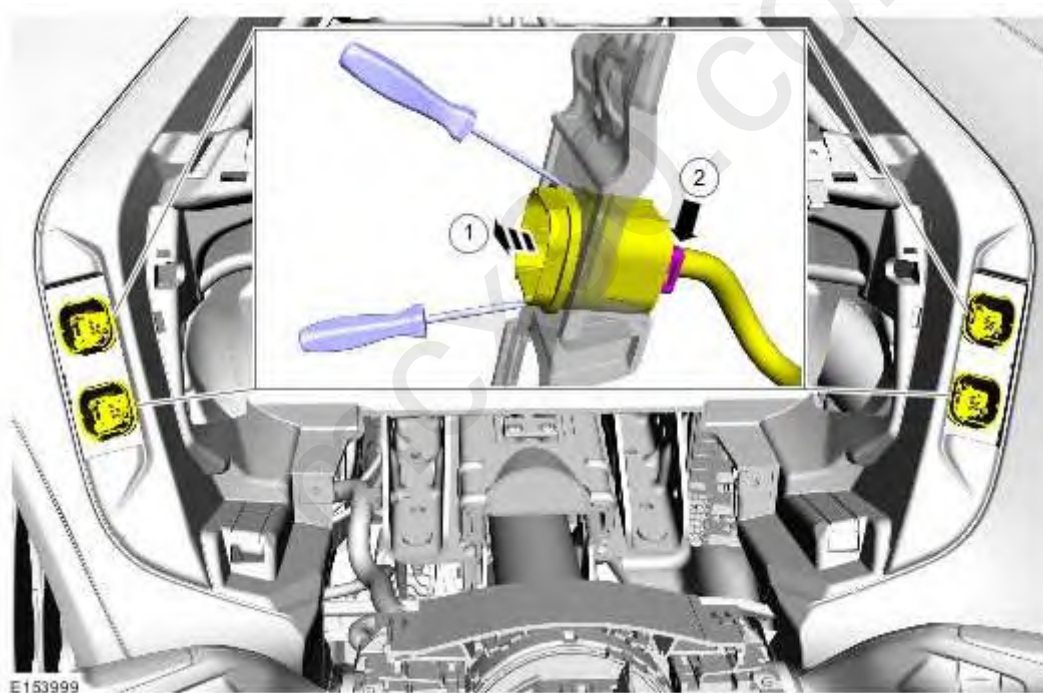


28.

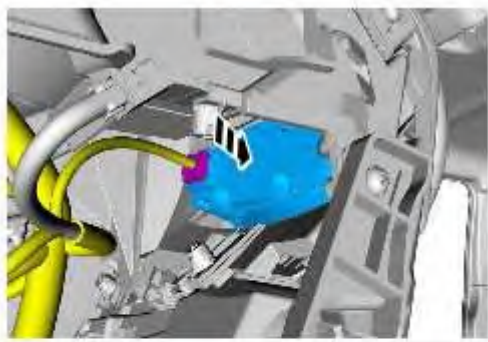


E140778

29.

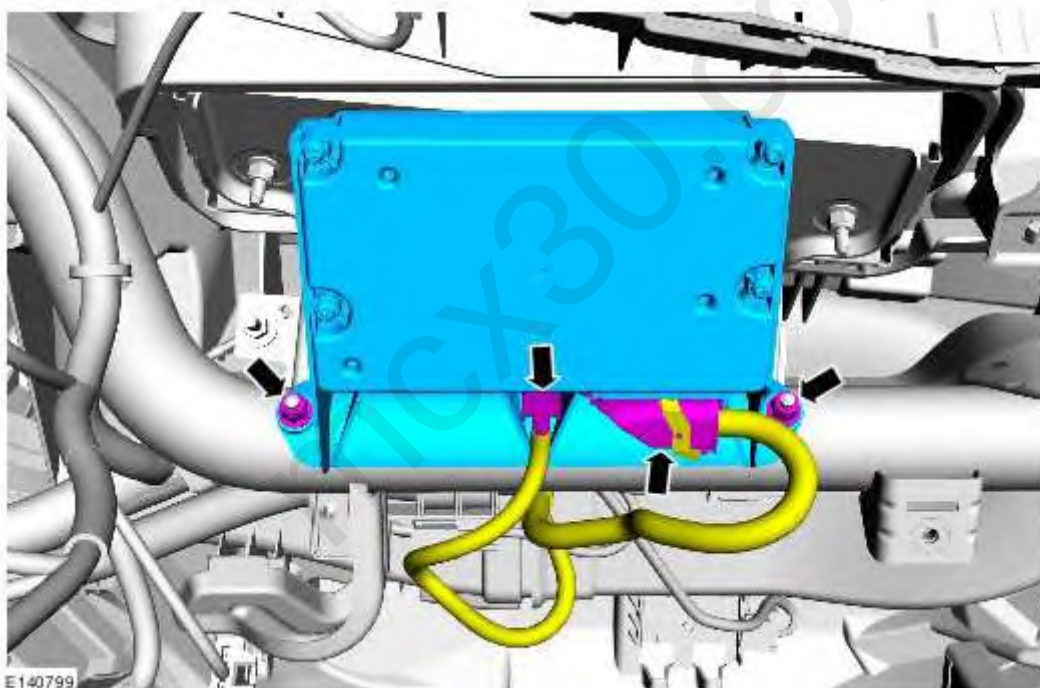


E140799


30. Torque: 25 Nm

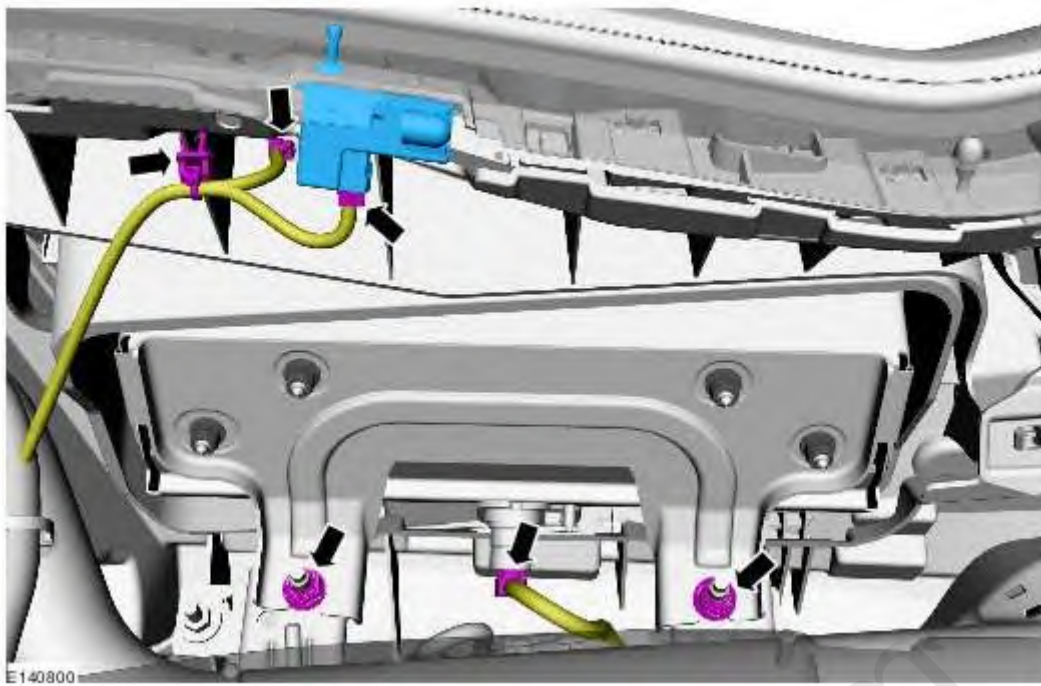

31.

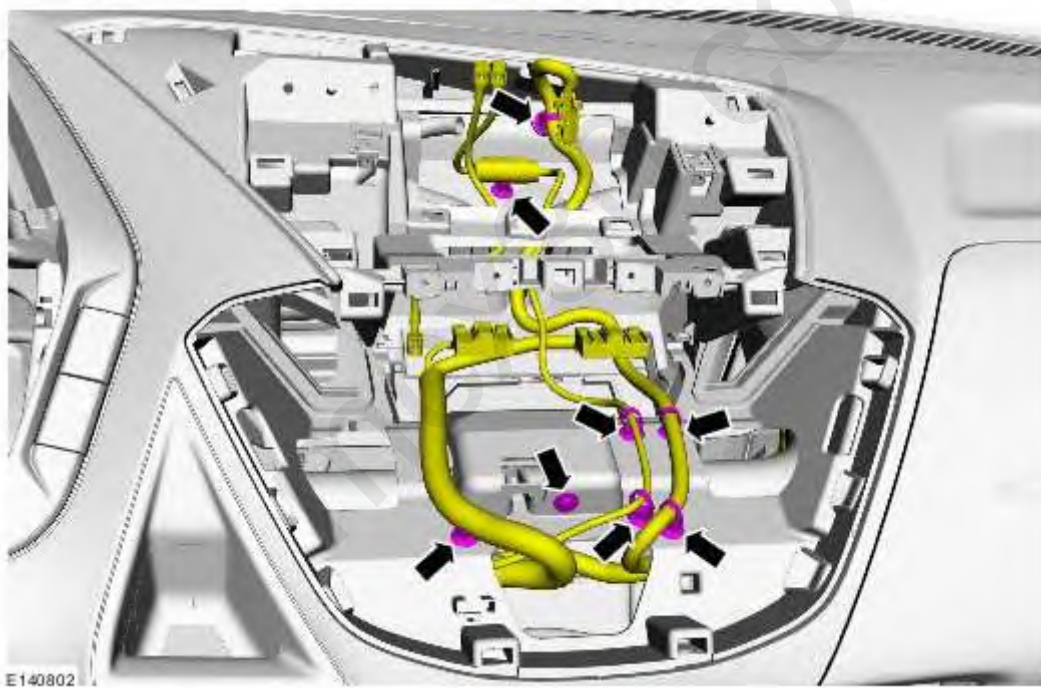

32.

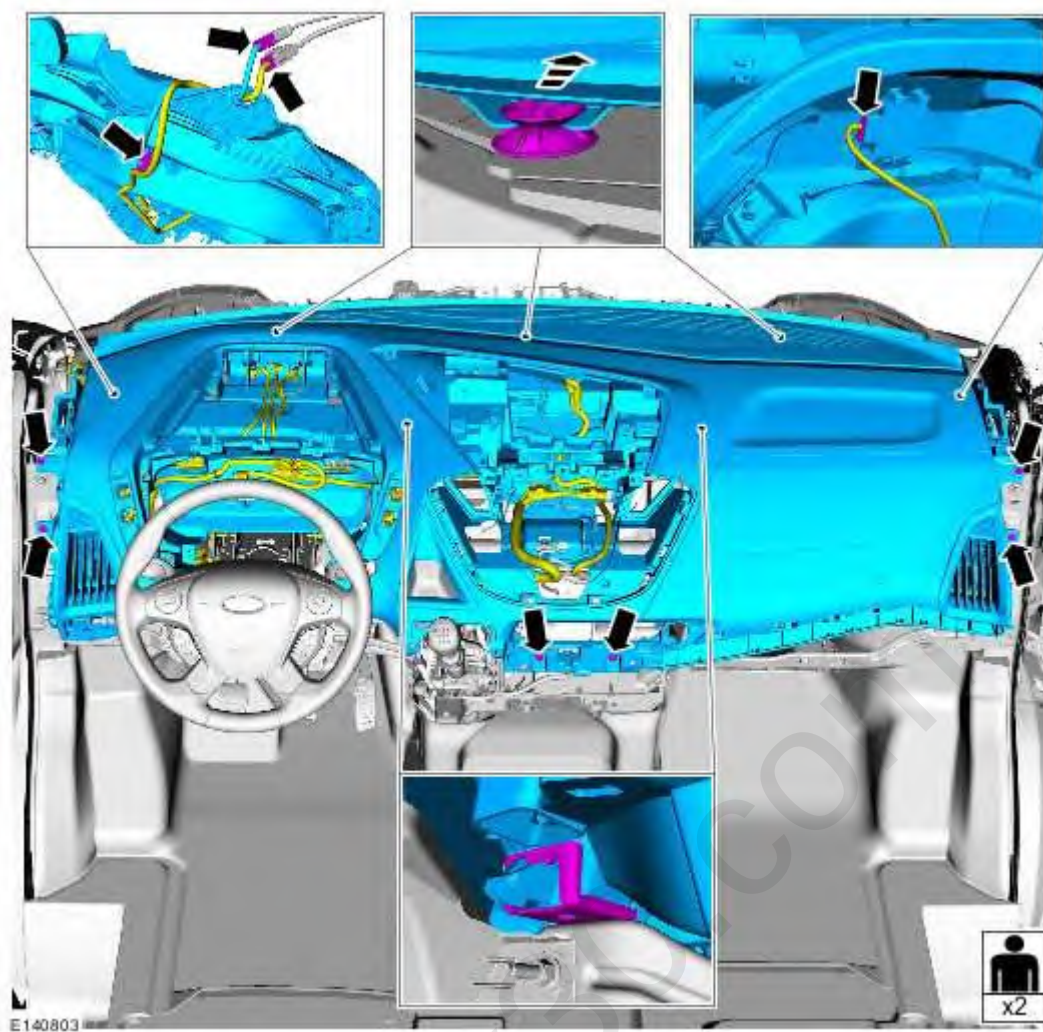

Installation

1. To install, reverse the removal procedure.