

Removal and Installation

Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Refer to: [Instrument Panel Wiring Harness](#) (418-02 Wiring Harnesses, Removal and Installation).
2. NOTE: Note the position of the component before removal.
If equipped.



3.

1.  WARNING: Make sure that a new bolt is installed.



NOTICE: Make sure that the steering column lock is engaged.

NOTE: Make sure that the road wheels are in the straight ahead position.


Torque: 28 Nm

2.  WARNING: Make sure that new nuts are installed.


Torque: 25 Nm




4. 1. On both sides.

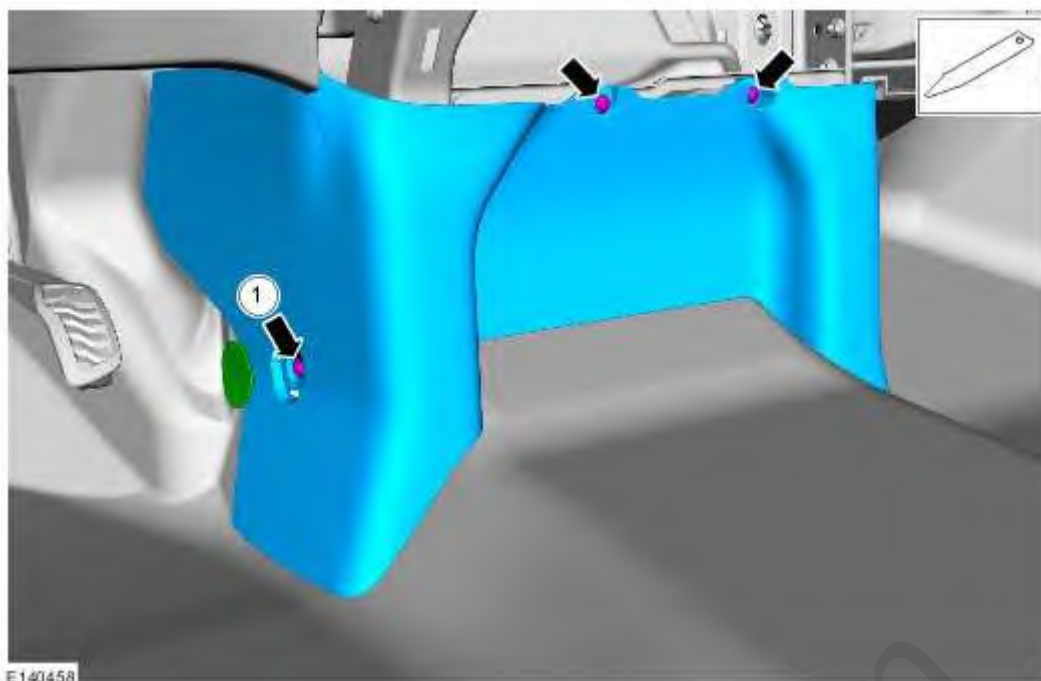

5. Torque: 9 Nm

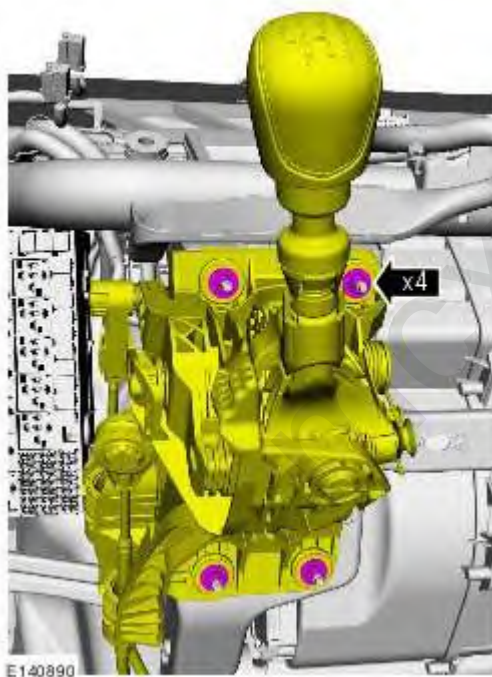


6. Torque: 25 Nm

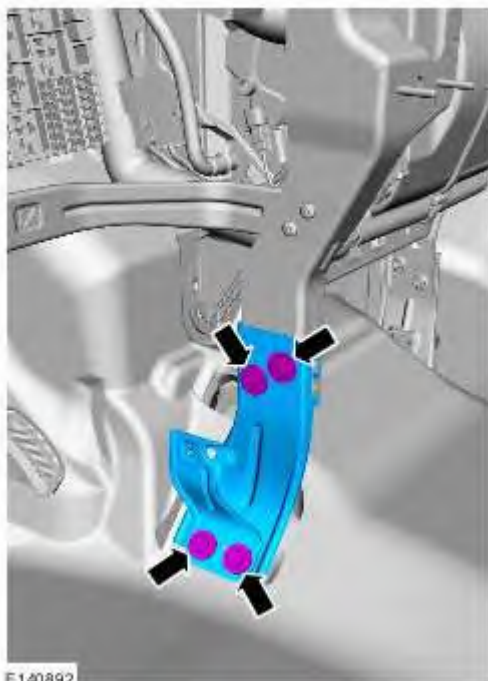

E140892

7. Torque: 25 Nm

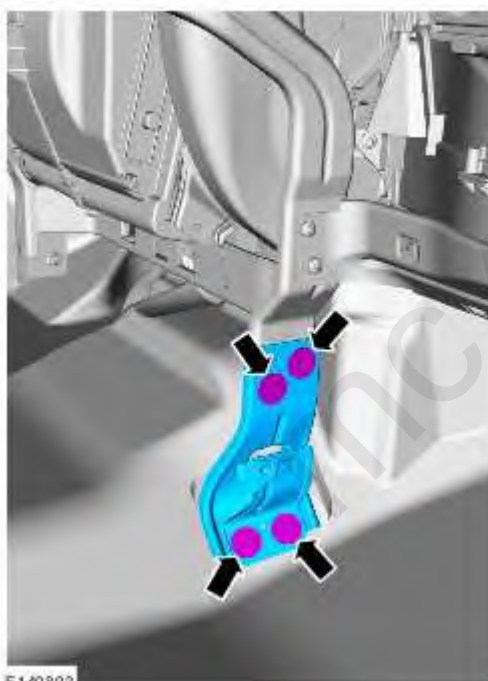

E140893

8. Torque: 10 Nm



9. On both sides.

Refer to: [Front Door](#) (501-03 Body Closures, Removal and Installation).


10. On both sides.




11. On both sides.

Torque: 40 Nm

E140895

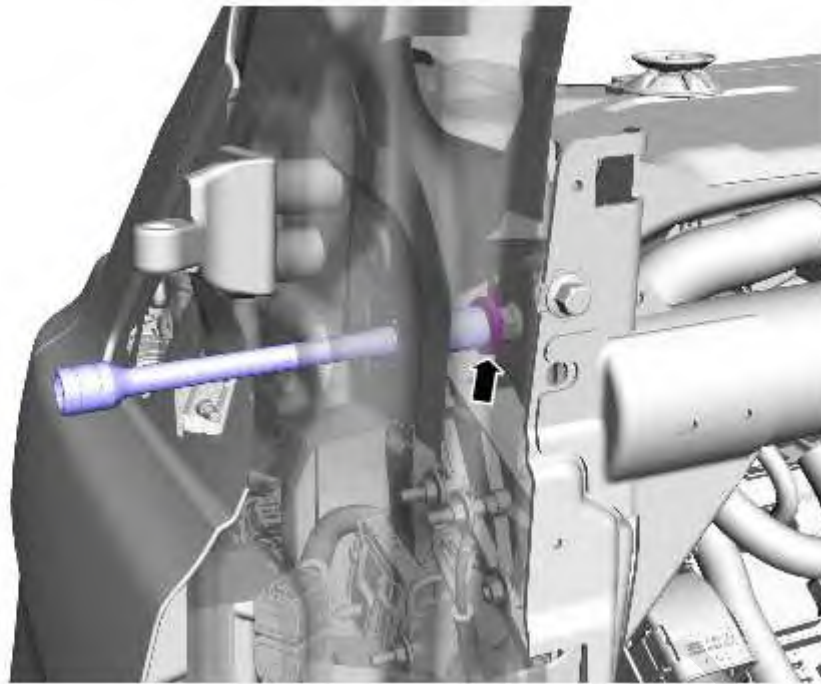

12. Torque: 25 Nm

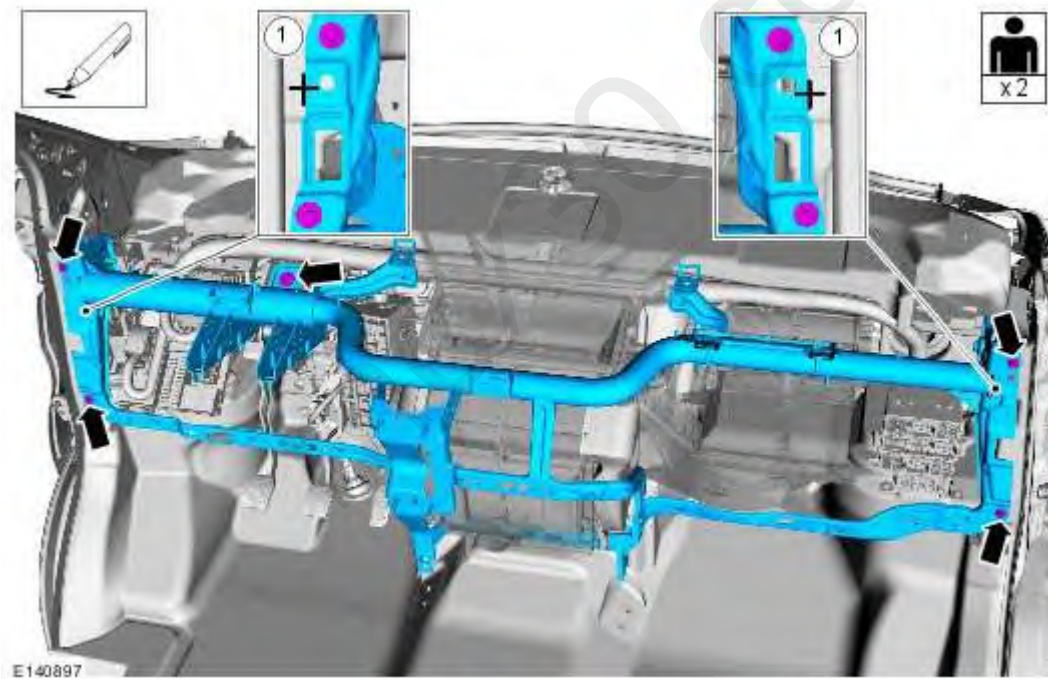

E140897

Installation

1. To install, reverse the removal procedure.