



Removal and Installation

Removal

1. **NOTE:** Removal steps in this procedure may contain installation details.
Refer to: [Liftgate Trim Panel](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).
- 2.

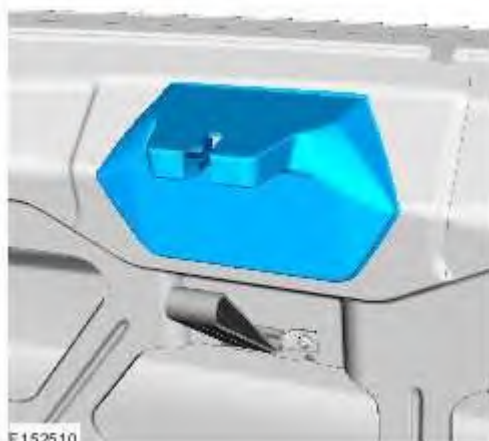

3. **Torque:** 11 Nm

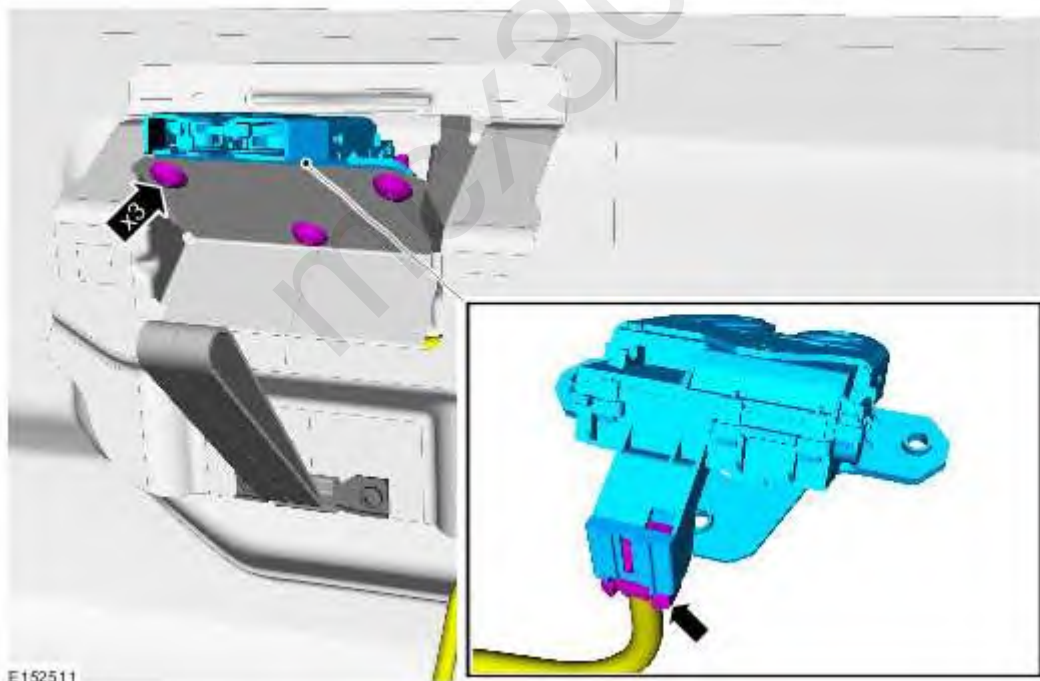

Installation

1. To install, reverse the removal procedure.