



Removal and Installation

Removal


1. Refer to: [Hood Lock Cylinder](#) (501-14 Handles, Locks, Latches and Entry Systems, Removal and Installation).
- 2.

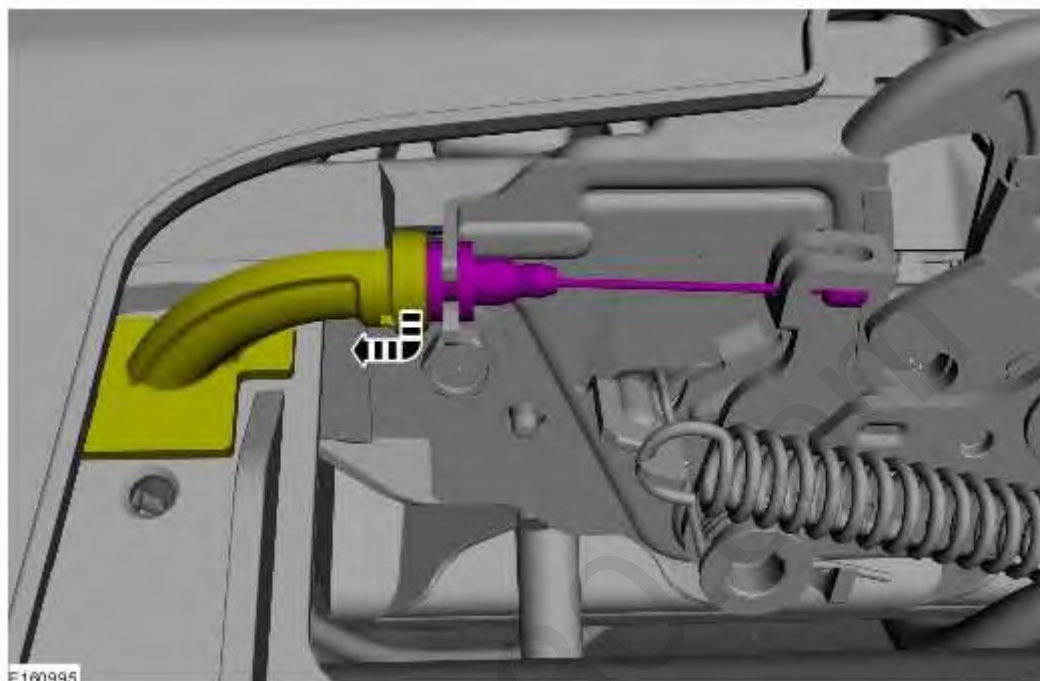

- 3.

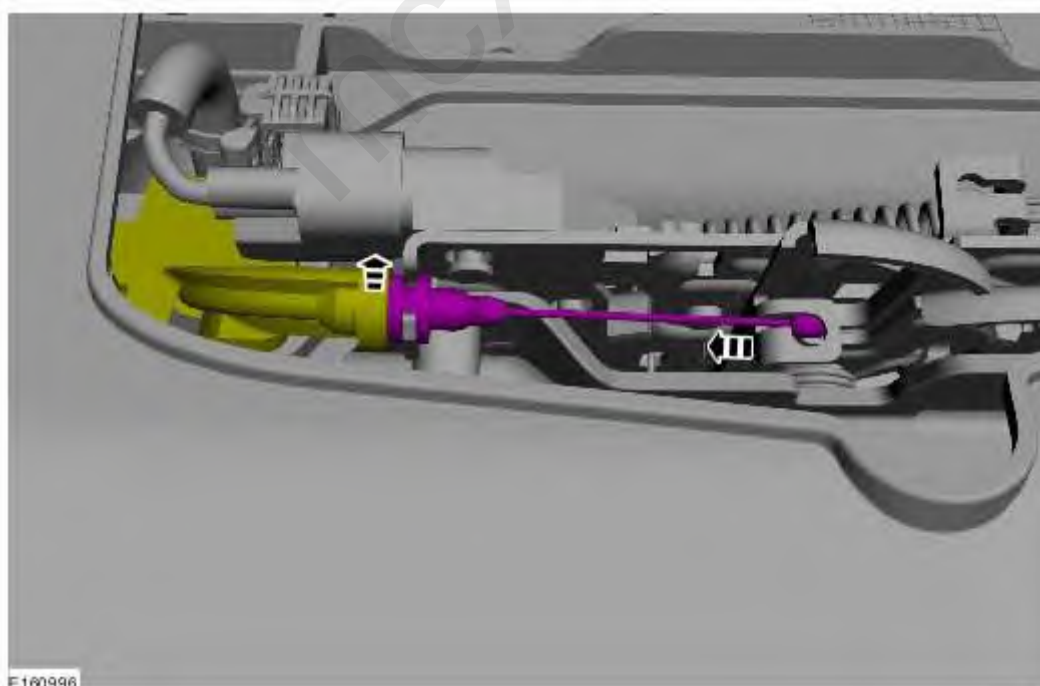

- 4.

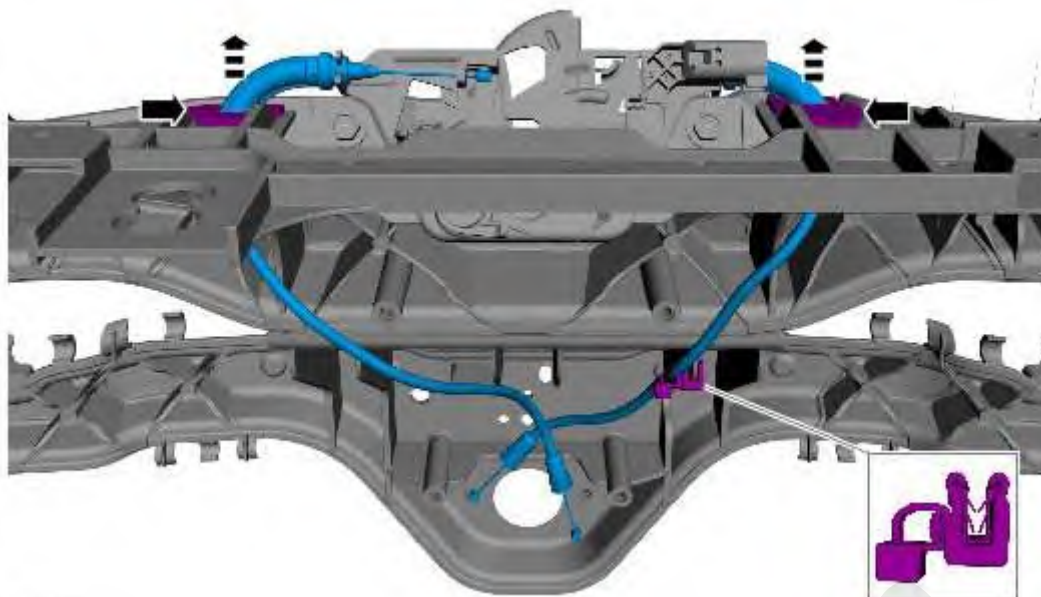

Installation

1. To install, reverse the removal procedure.