


Removal and Installation

Removal


NOTE: The service component has been revised and a GSB has been published with instructions.

NOTE: Removal steps in this procedure may contain installation details.


1.

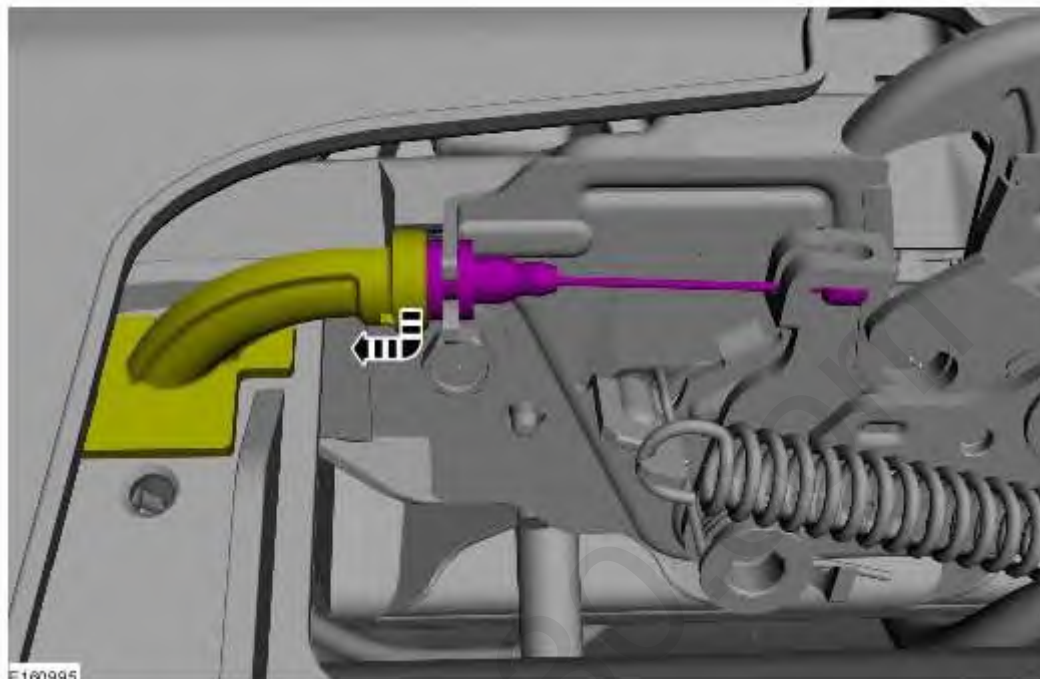


2.

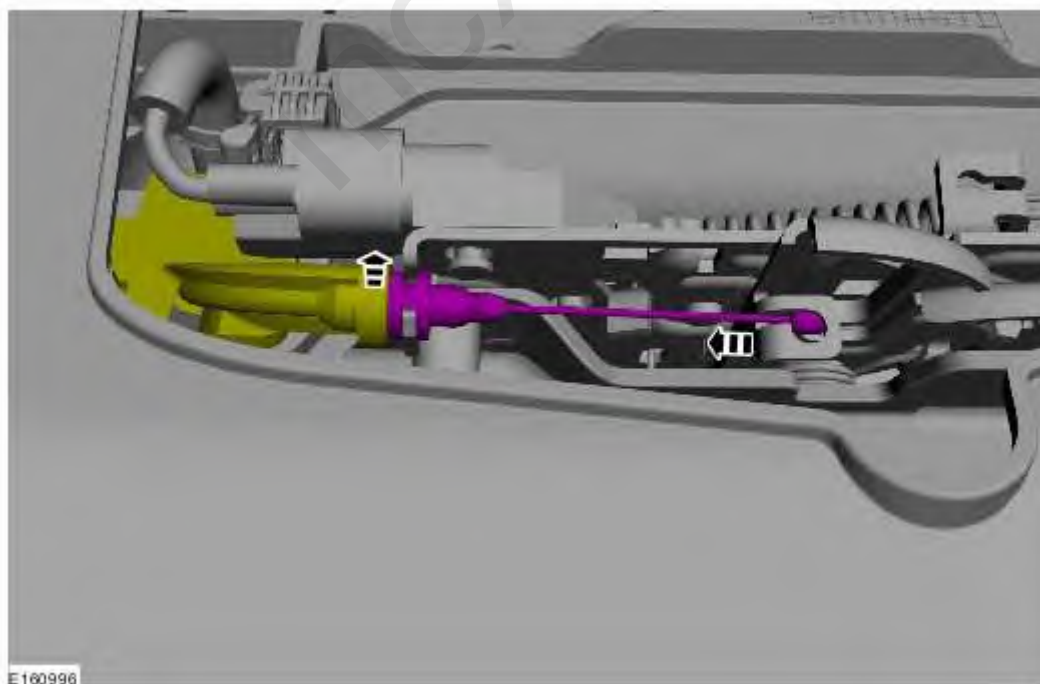

3. If equipped.

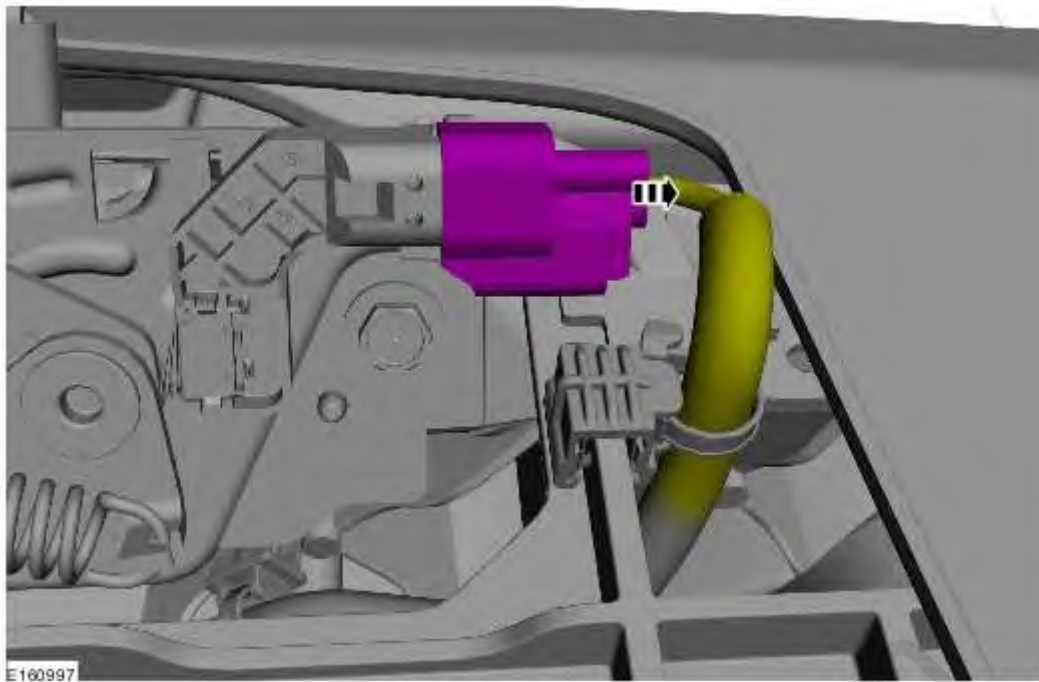

4. Torque: 6 Nm

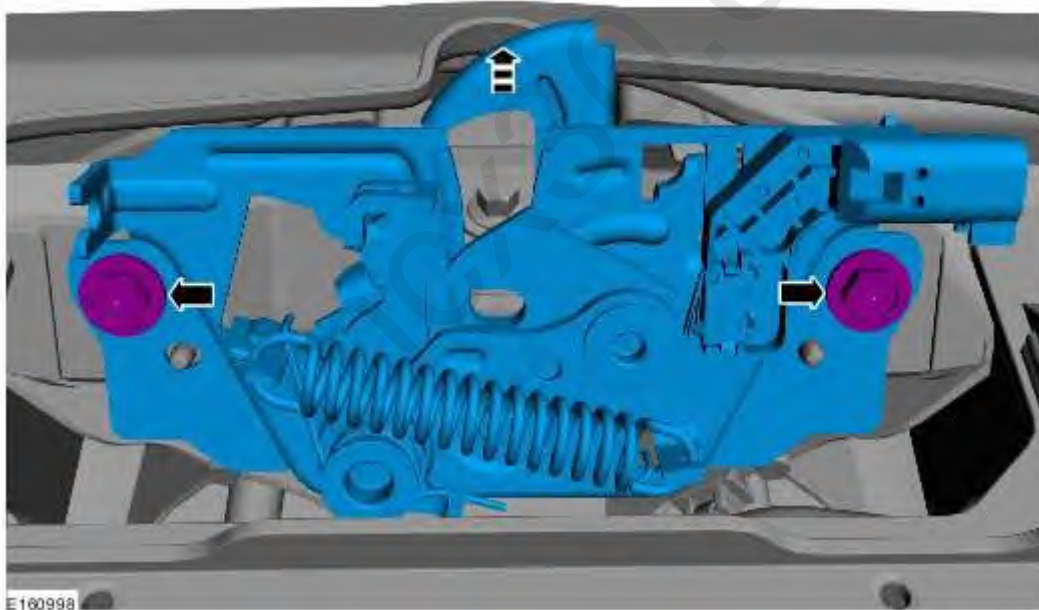

Installation

1. To install, reverse the removal procedure.