


Removal and Installation

Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Torque: 1 Nm

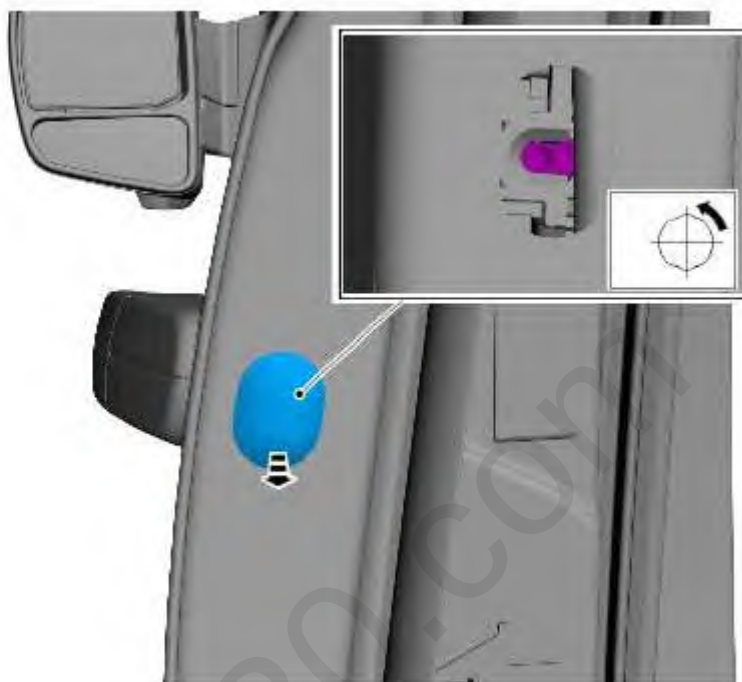

E160794

- 2.



E160795

- 3.



E160796

Installation

1. To install, reverse the removal procedure.