


Removal and Installation

Removal


NOTE: Removal steps in this procedure may contain installation details.

1. Refer to: [Front Door Trim Panel](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).
2. Refer to: [Front Door Lock Cylinder](#) (501-14 Handles, Locks, Latches and Entry Systems, Removal and Installation).
3. Refer to: [Exterior Front Door Handle](#) (501-14 Handles, Locks, Latches and Entry Systems, Removal and Installation).
4. *Torque: 9 Nm*

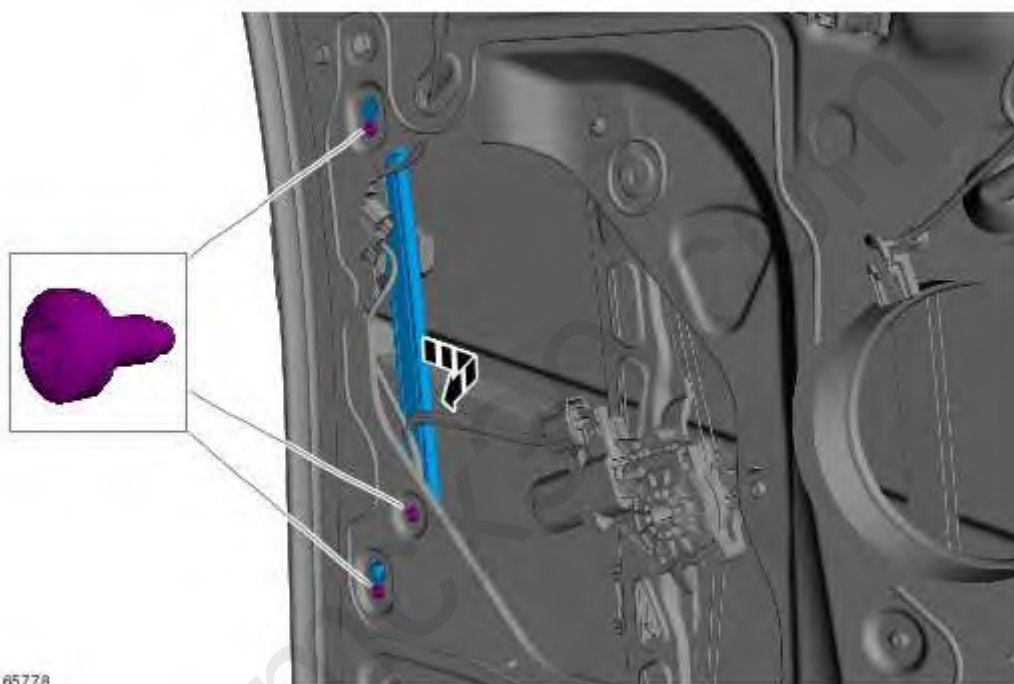

E165778


5.

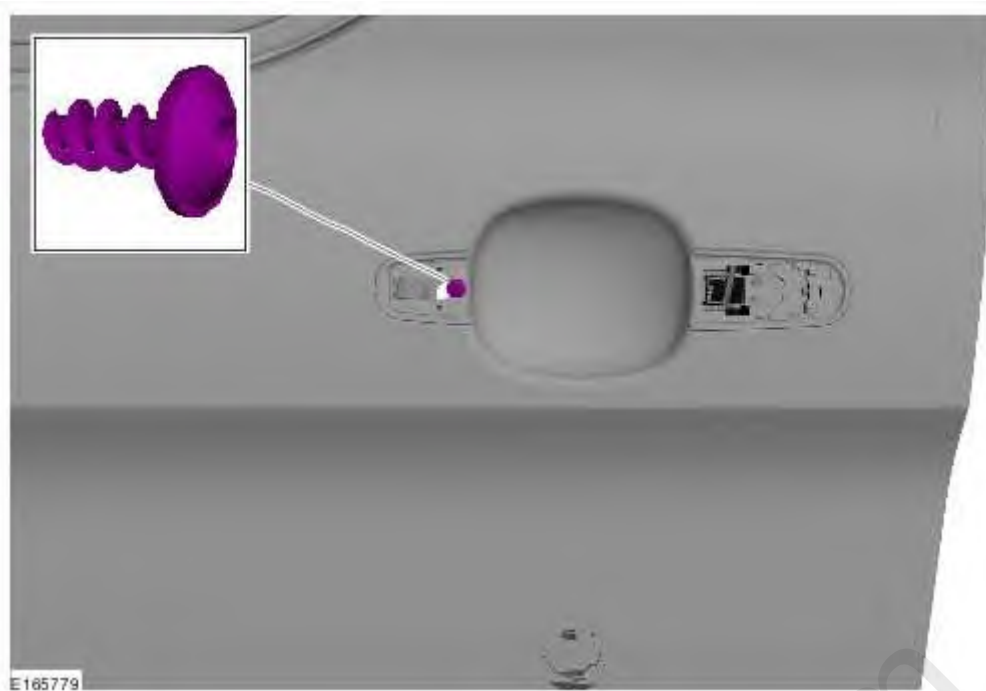

6. Torque: 8 Nm




7.

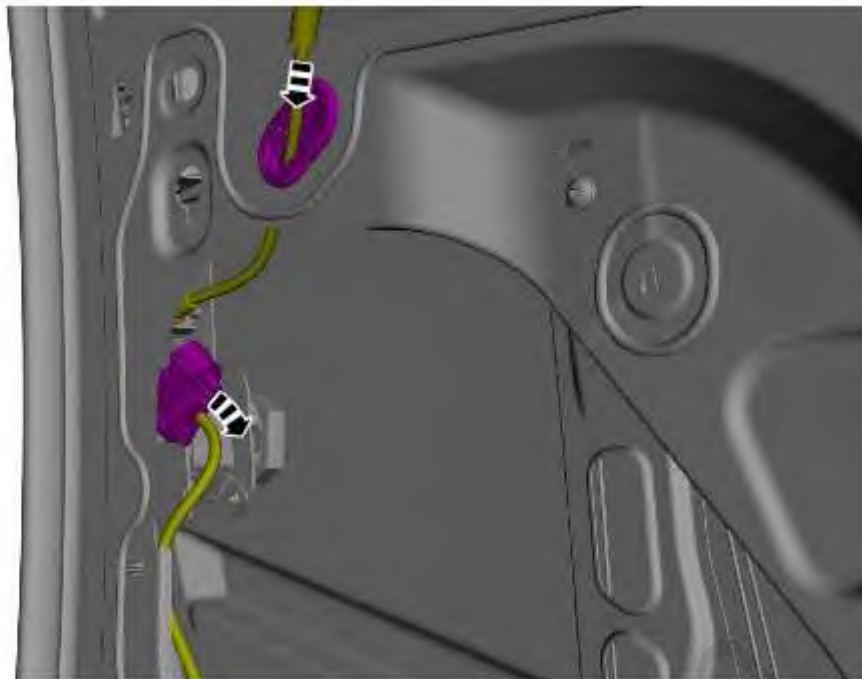

E165781


8.

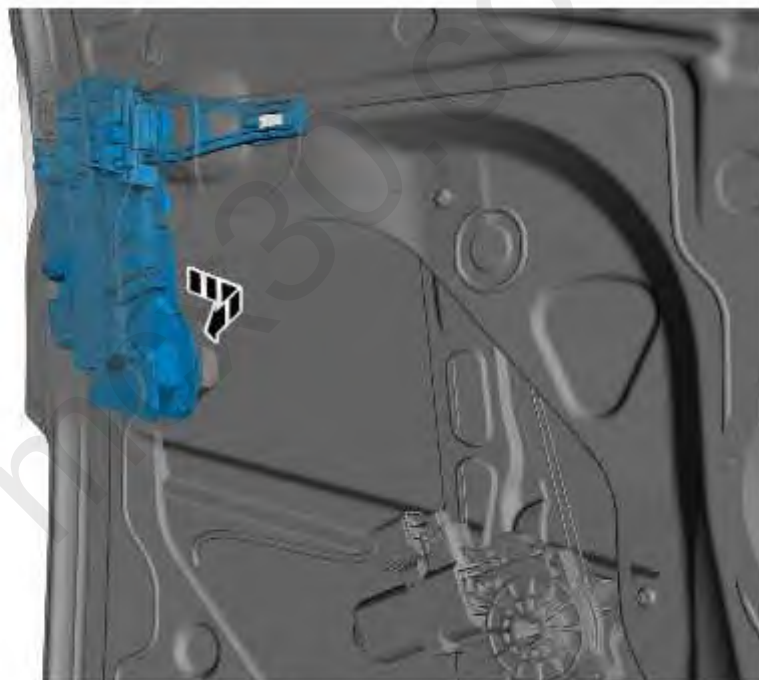


E165782

NOTE: The following steps are only necessary when installing a new component.

9.

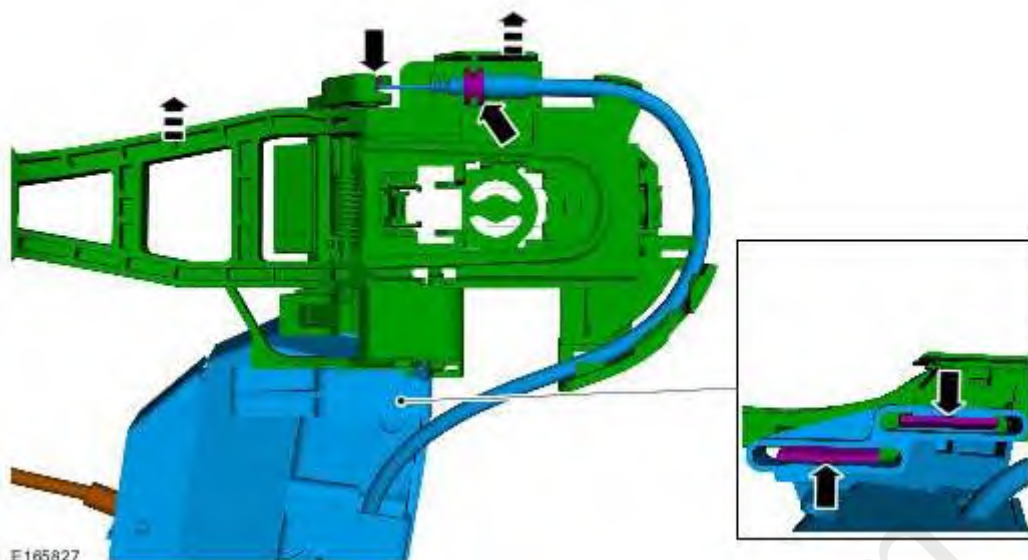

10.

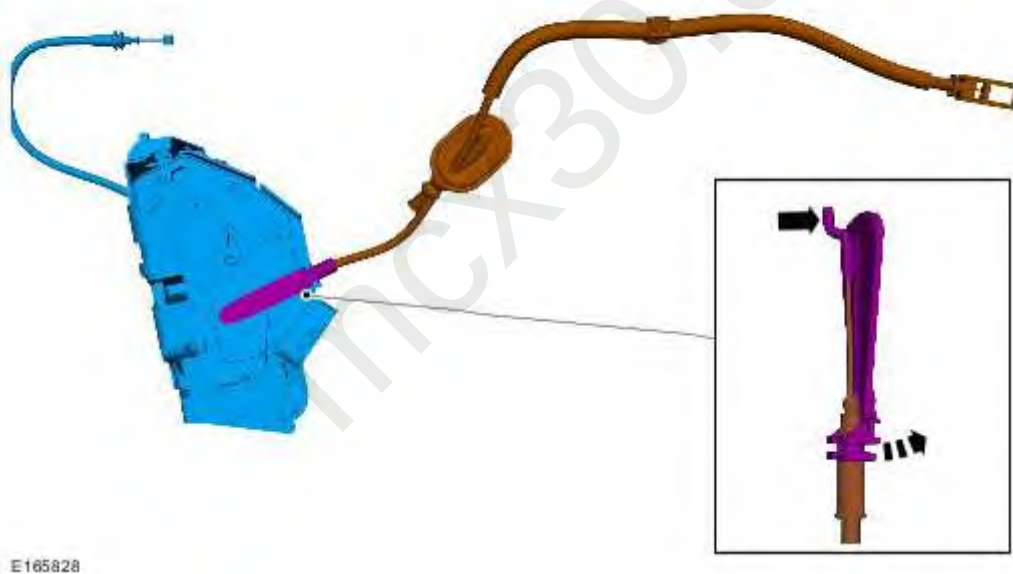

Installation

1. To install, reverse the removal procedure.