


Removal and Installation

Removal


NOTE: Removal steps in this procedure may contain installation details.

1.

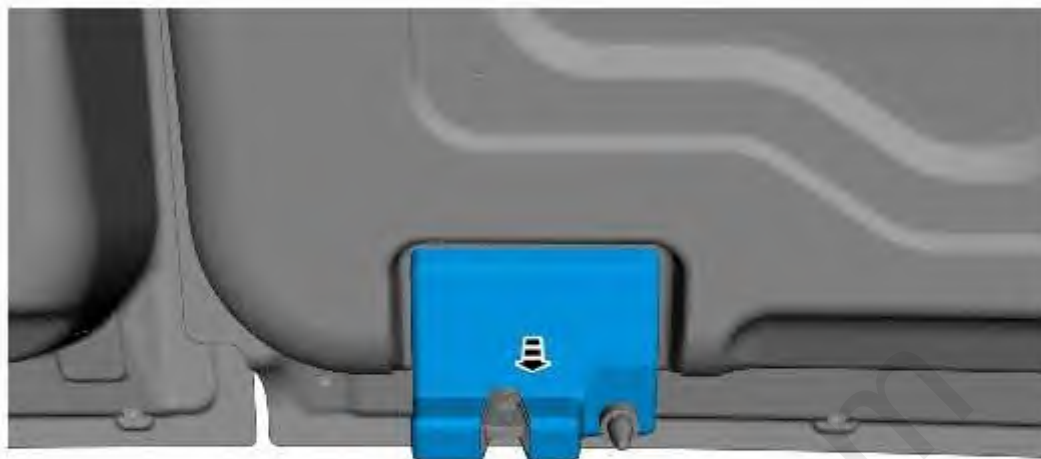


E185440

2. Torque: 12 Nm

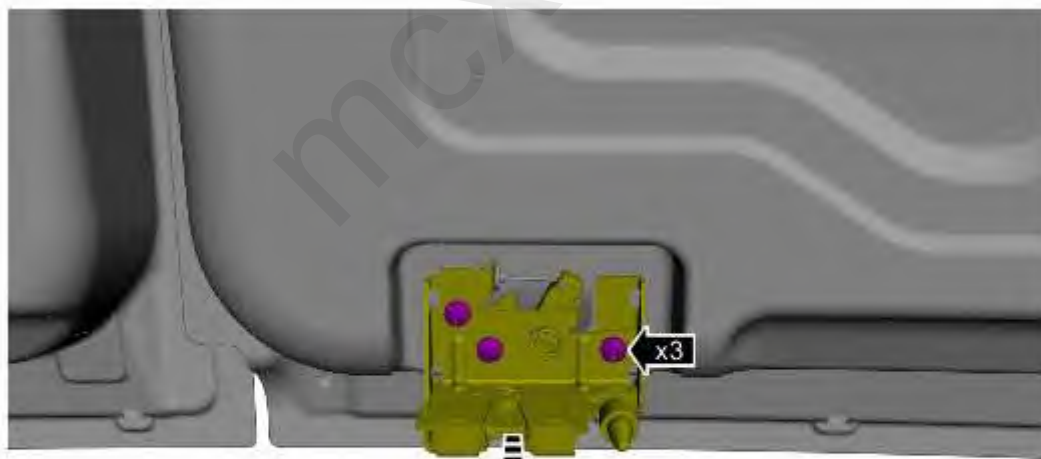

E185441

3.

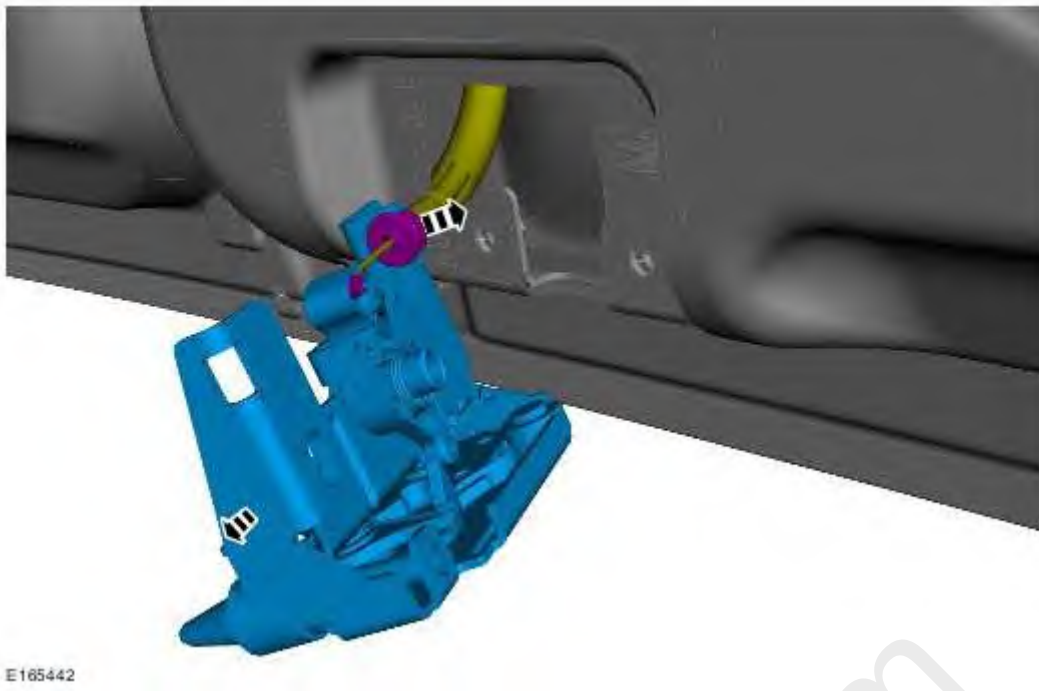

Installation

1. To install, reverse the removal procedure.