

Removal and Installation


Removal

NOTE: Removal steps in this procedure may contain installation details.


1.



2. Torque: 12 Nm

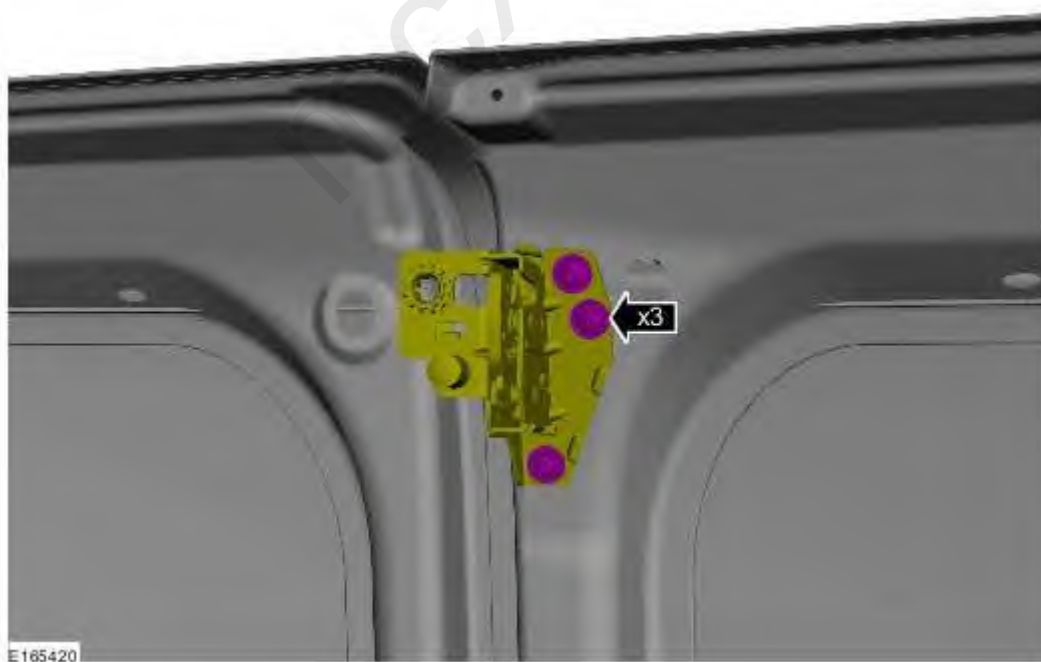

3.

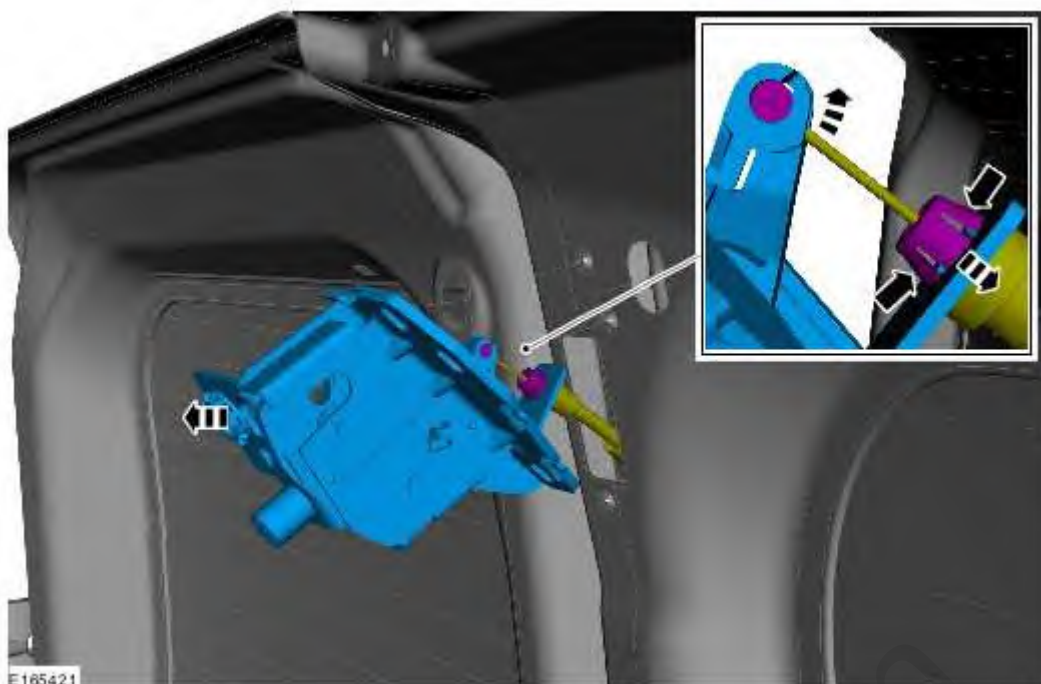

Installation

1. To install, reverse the removal procedure.