

Removal and Installation


Removal


NOTE: Removal steps in this procedure may contain installation details.

1. Refer to: [Sliding Door Trim Panel](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).
2. Torque: 8 Nm




3.

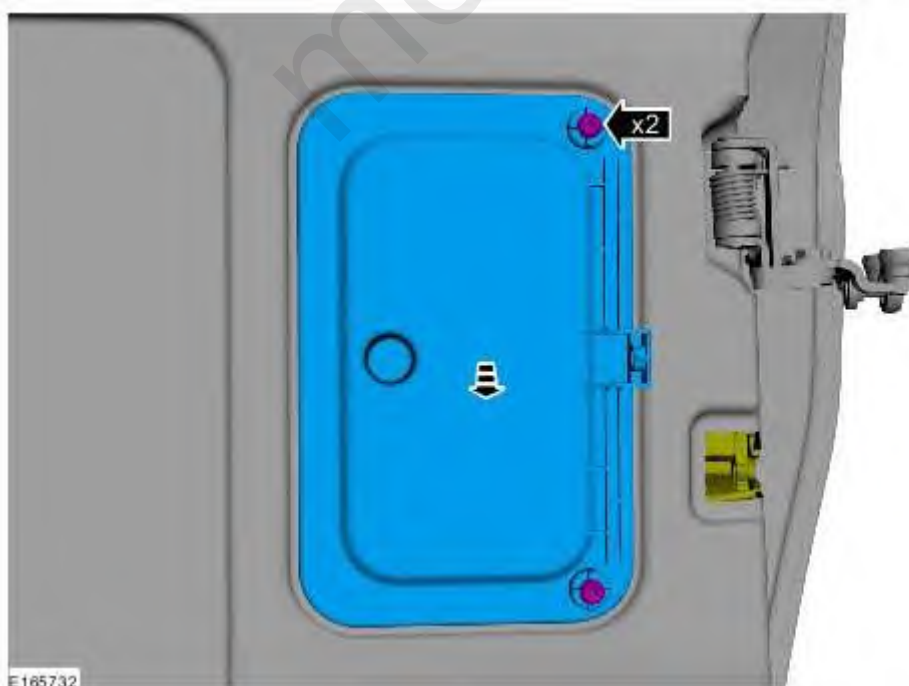


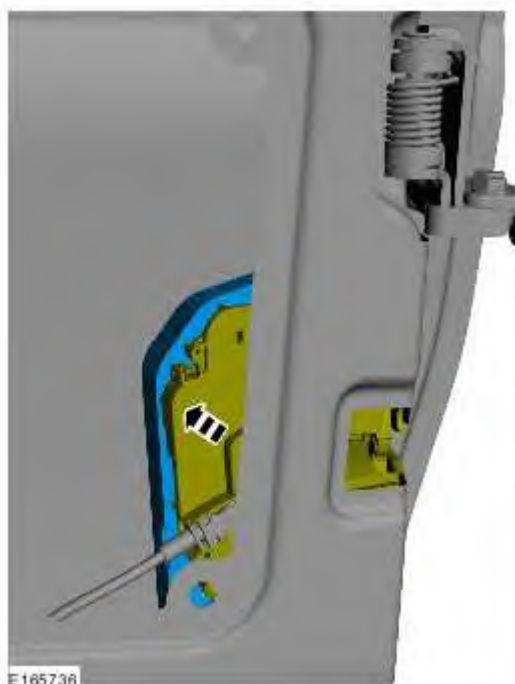


5.

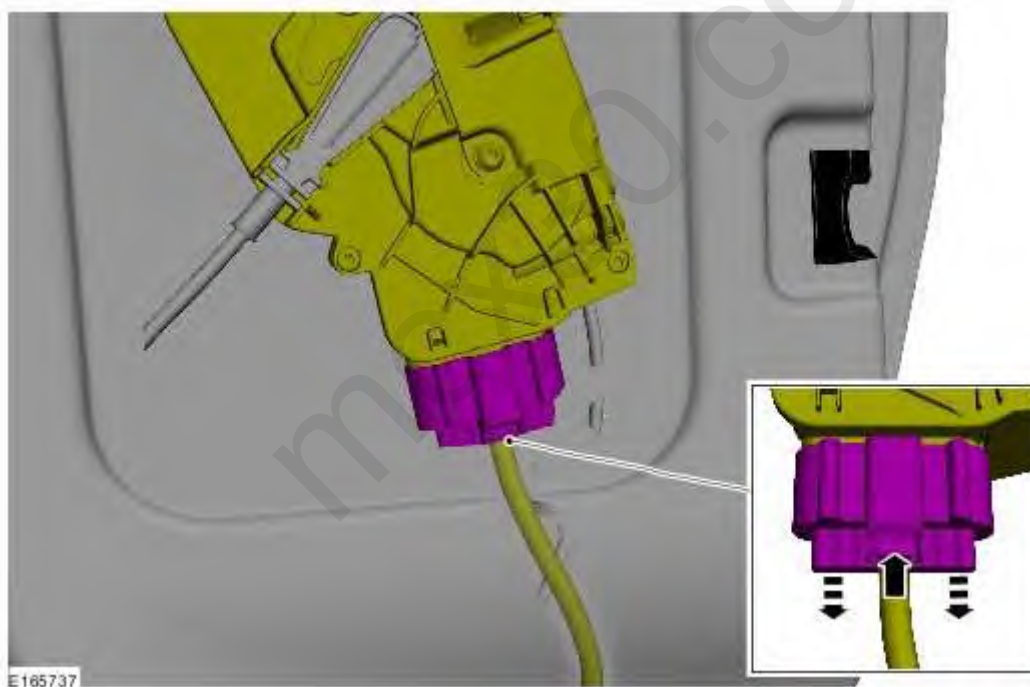

6.

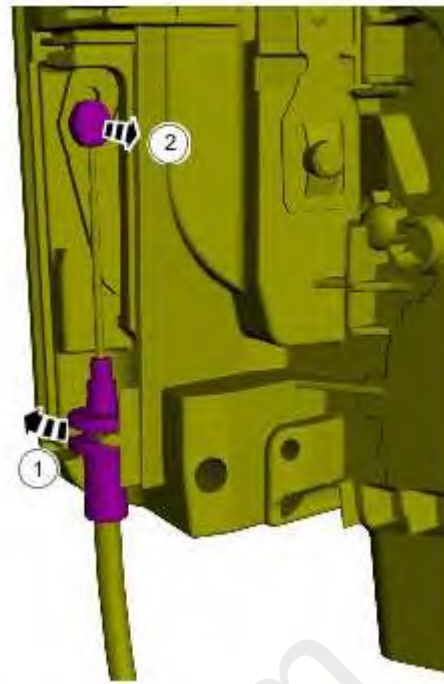

7.

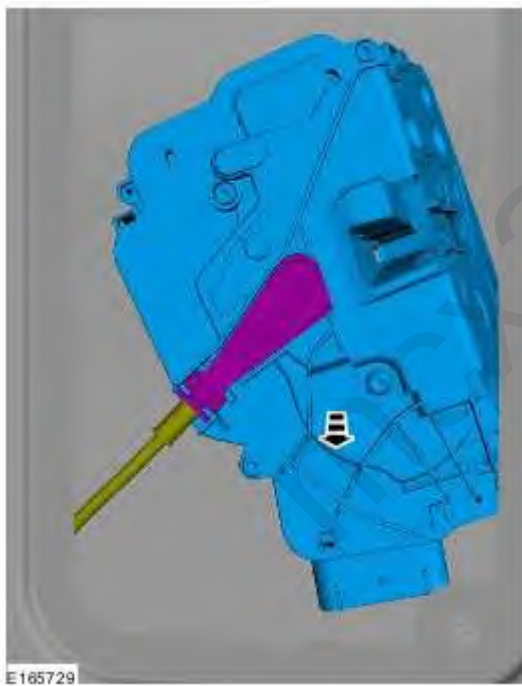

Installation

1. To install, reverse the removal procedure.