


Disassembly and Assembly

Materials

Name	Specification
Grease - Electrical Contact	WSB-M1C239-A


Disassembly

1. Refer to: [Ignition Lock Cylinder](#) (501-14 Handles, Locks, Latches and Entry Systems, Removal and Installation).
- 2.

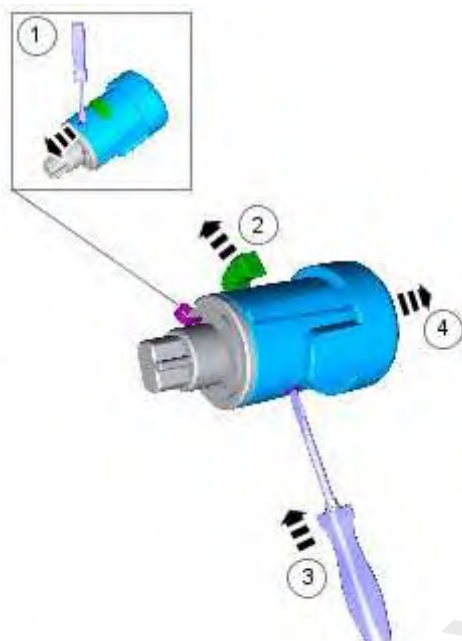


E70122

- 3.

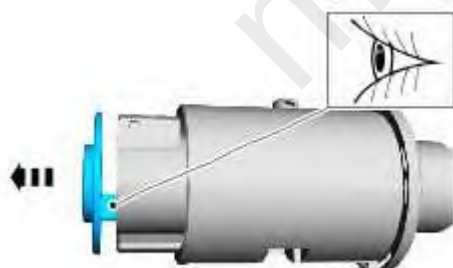

E167276

- 4.

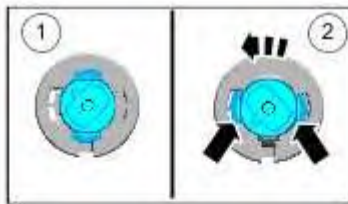

E167275

5.




E167232

6.



E167277

7.  **NOTICE:** Note the position of the components before removal.

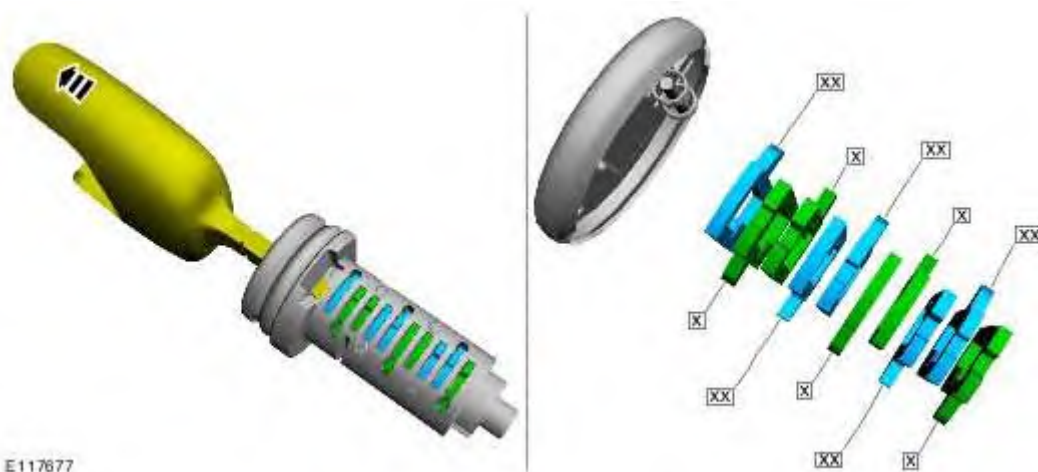


8. **NOTE:** Make sure to read the key code from the key entry to the end of the lock barrel in sequence.

1. **Key code**




Assembly

9. **NOTICE:** Make sure that the components are installed to the position noted before removal.
The digit numbering starts allways with a 2 digit and follows the sequence as shown.

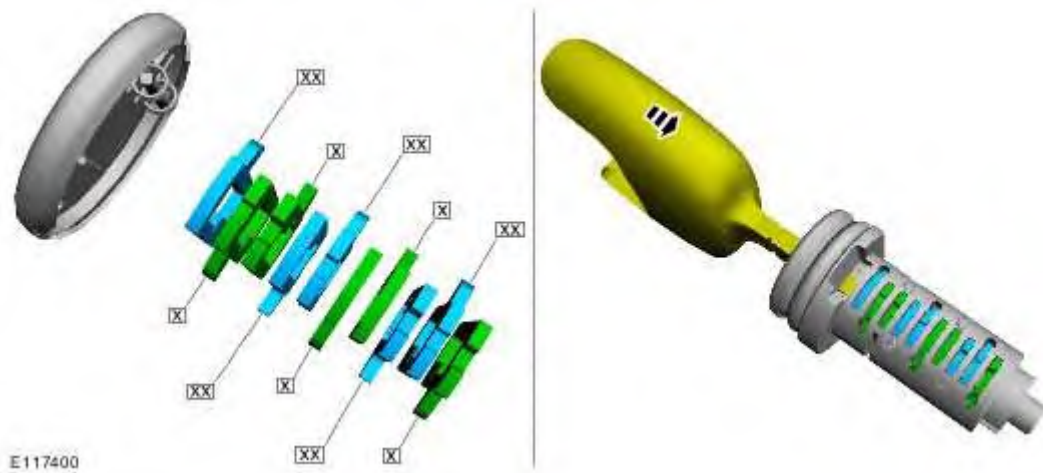


10. Material: WSB-M1C239-A (Grease - Electrical Contact)

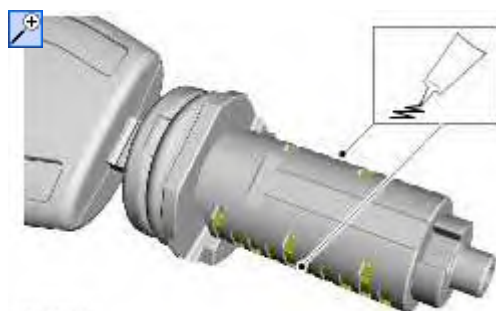


11.



12.

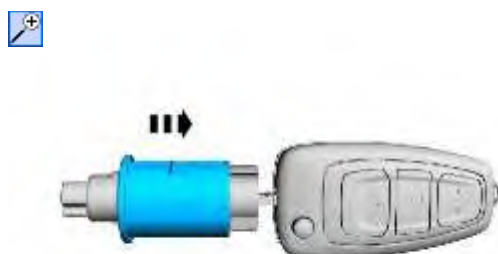


13.

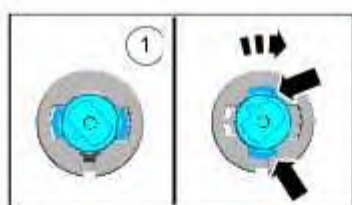



E167294

14.


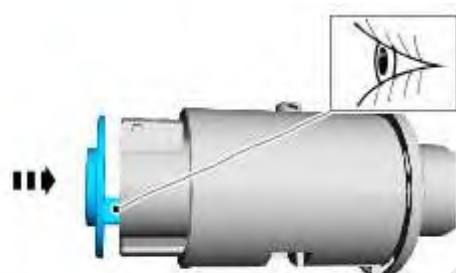


E167293

15.

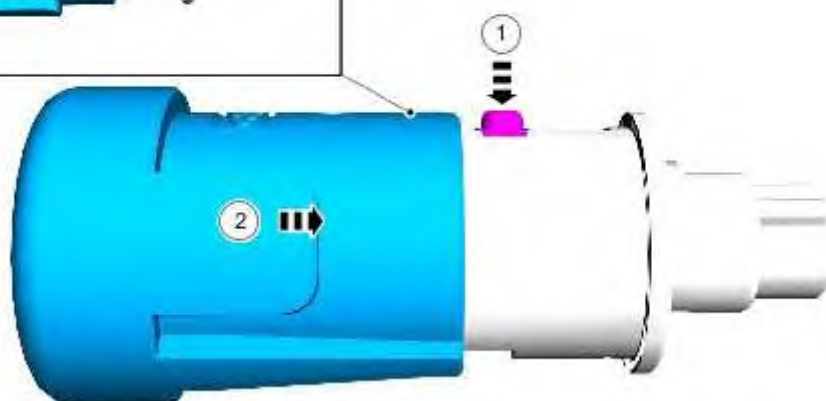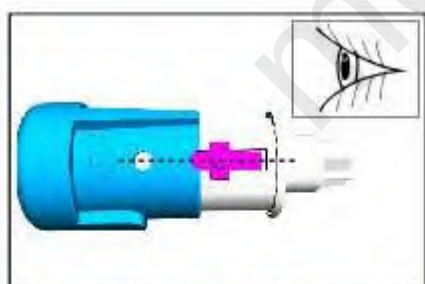

E167284

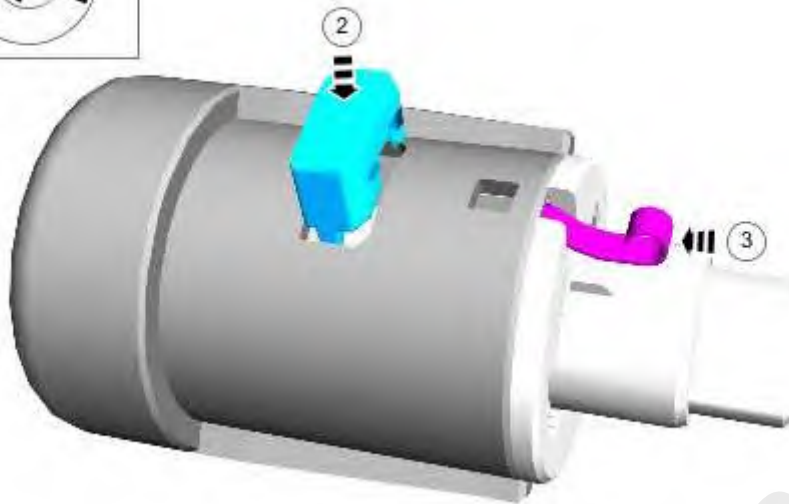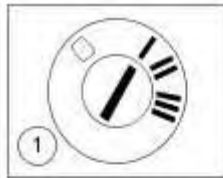

E167286

17. Refer to: [Ignition Lock Cylinder](#) (501-14 Handles, Locks, Latches and Entry Systems, Removal and Installation).