

Disassembly and Assembly**General Equipment**

2 mm Punch

Materials

Name	Specification
Multi-Purpose Grease	WSD-M1C234-A

Disassembly

1. Refer to: [Hood Lock Cylinder](#) (501-14 Handles, Locks, Latches and Entry Systems, Removal and Installation).
- 2.



E183647

3. NOTE: This step requires considerable force.



E183649

4.



E176525

5.



E176526

6. Use the General Equipment: [2 mm Punch](#)




E183648

7.




E117681

8.  NOTICE: Note the position of the components before removal.

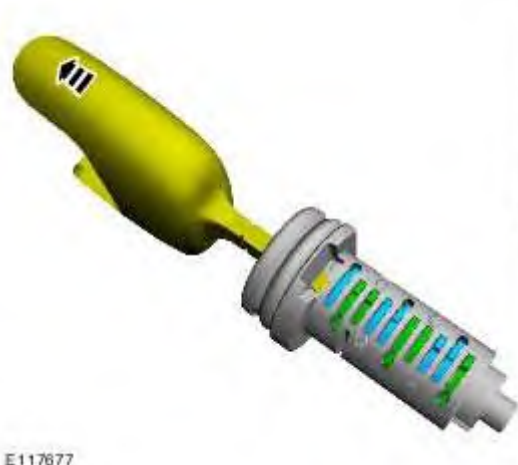

E117677

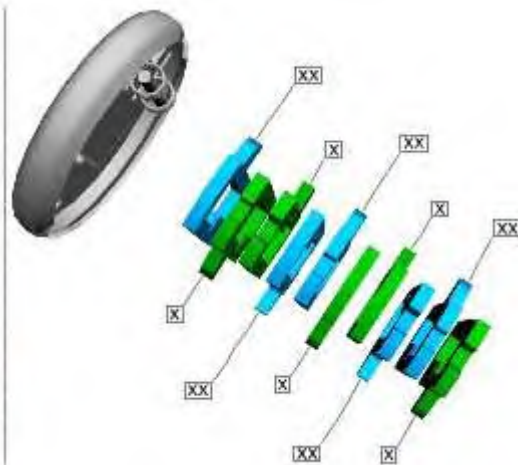

9. NOTE: Make sure to read the key code from the key entry to the end of the lock barrel in sequence.


1. **Key code**



E183103


Assembly

10.  NOTICE: Make sure that the components are installed to the position noted before removal.

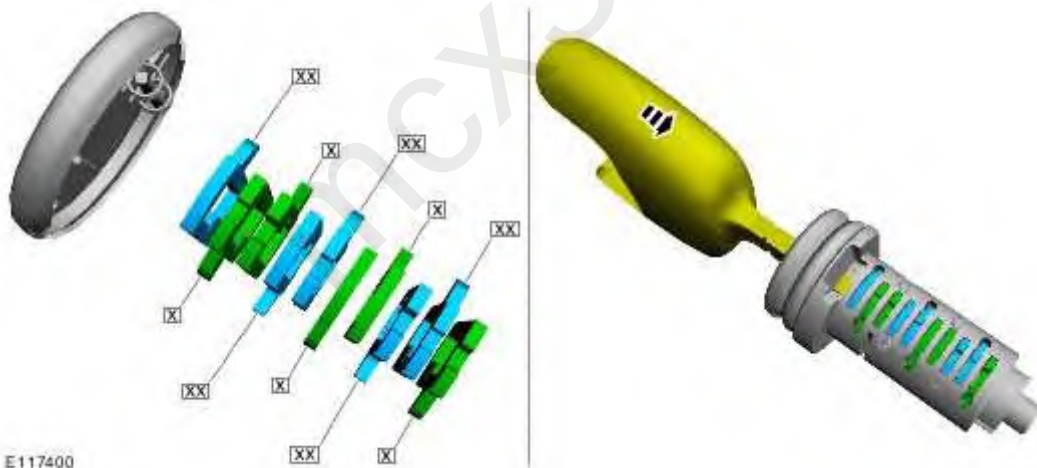


E117400

11. Material: [WSD-M1C234-A \(Multi-Purpose Grease\)](#)

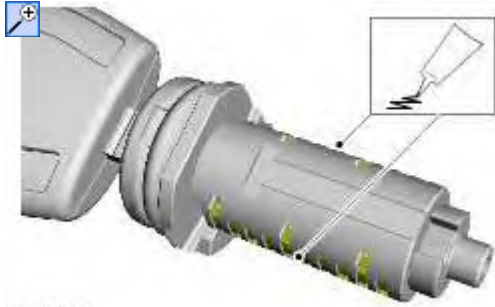

E135222

12.

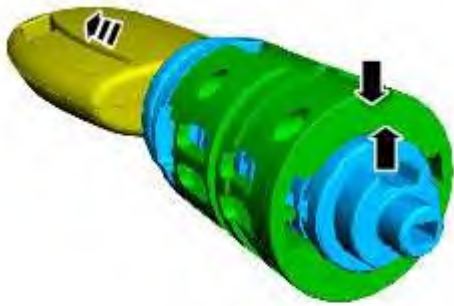

E117404

13. Use the General Equipment: [2 mm Punch](#)



E183648

14. NOTE: The component can only be installed in 1 position.



E176526

15. NOTE: The component can only be installed in 1 position.




E176525

16. NOTE: This step requires considerable force.



E183678

- 17.

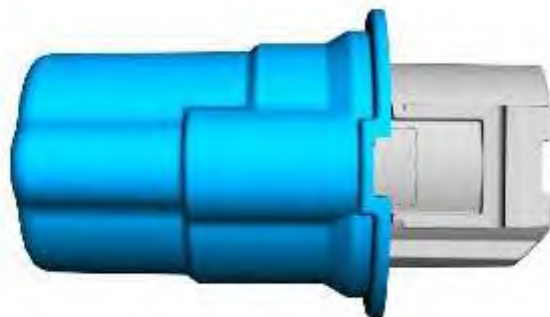

E183647

18. Refer to: [Hood Lock Cylinder](#) (501-14 Handles, Locks, Latches and Entry Systems, Removal and Installation).