

Removal and Installation

General Equipment

Two Leg Puller

Removal


1.  **NOTICE:** Make sure that the motor is in the park position.
NOTE: Removal steps in this procedure may contain installation details.

Use the General Equipment: [Two Leg Puller](#)

Torque: 15 Nm



2. Refer to: [Liftgate Trim Panel](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).
3. Torque: 8 Nm

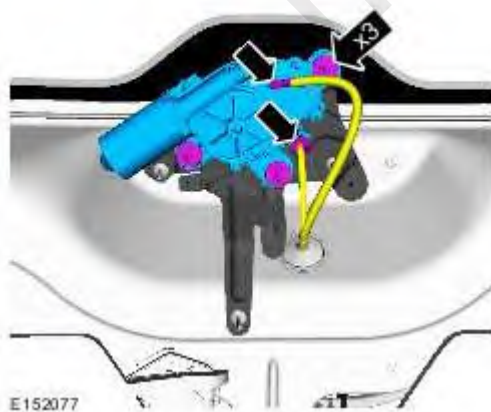

Installation

1. To install, reverse the removal procedure.