


Removal and Installation

Removal

1. NOTE: Be prepared to collect escaping fluid.

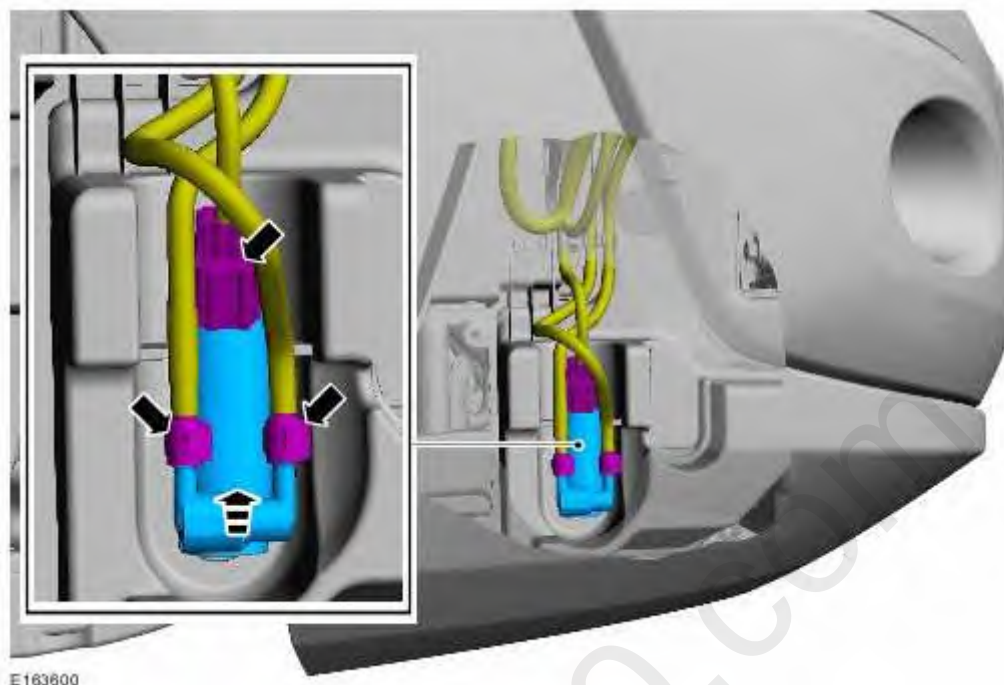

Installation

1. To install, reverse the removal procedure.