



Removal and Installation


Removal

1. Refer to: [Headlamp Assembly](#) (417-01 Exterior Lighting, Removal and Installation).
Refer to: [Jacking and Lifting](#) (100-02 Jacking and Lifting, Description and Operation).
Refer to: [Windshield Washer Pump](#) (501-16 Wipers and Washers, Removal and Installation).
2. **NOTE:** Be prepared to collect escaping fluid.

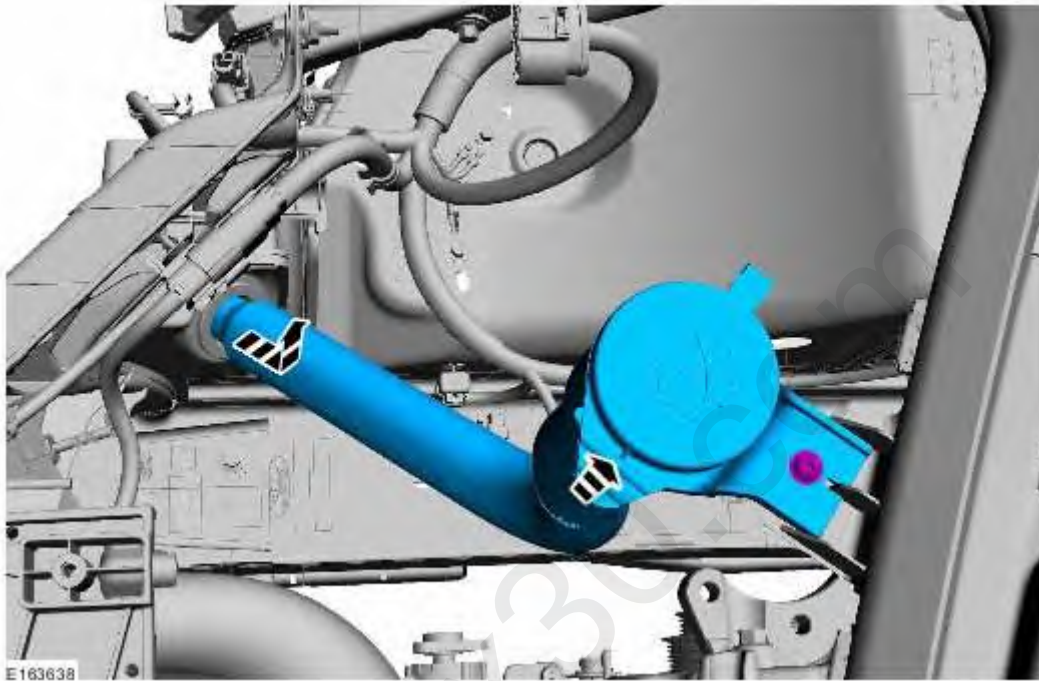


3.

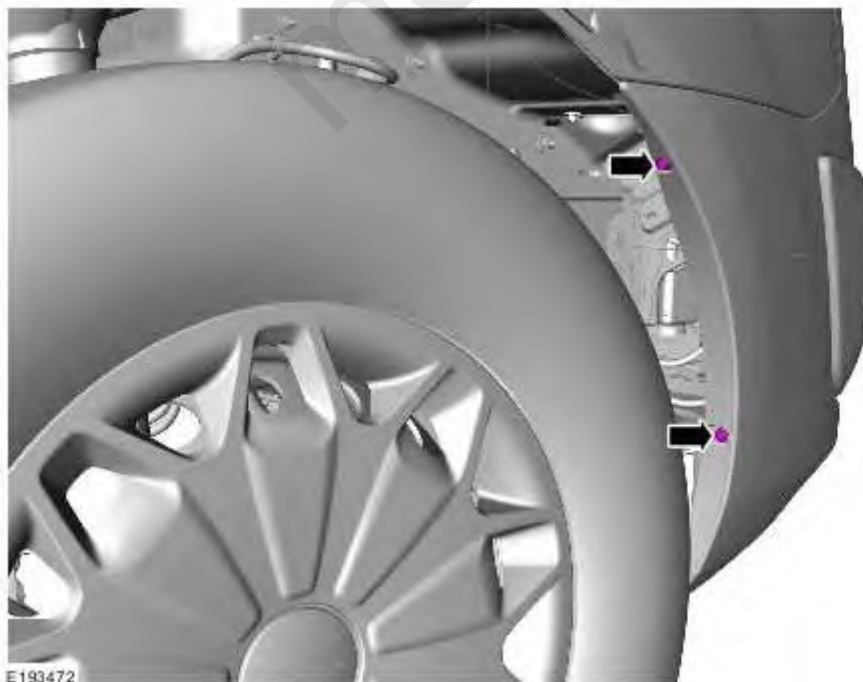


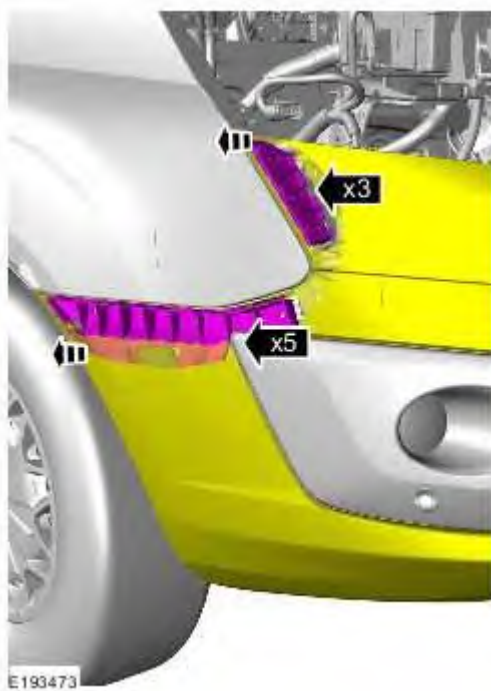

5. If equipped.

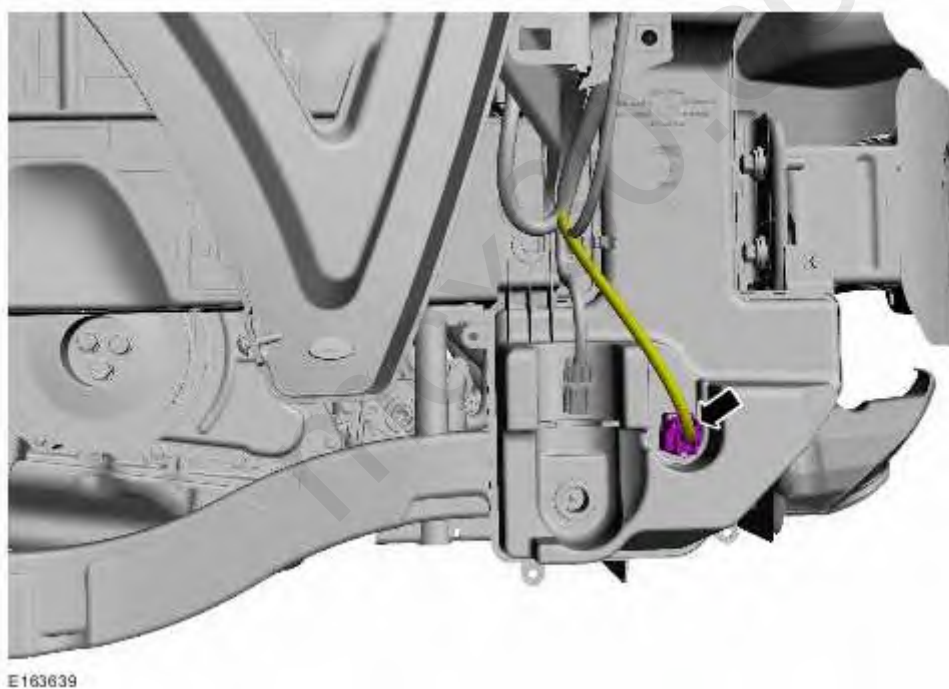


6.

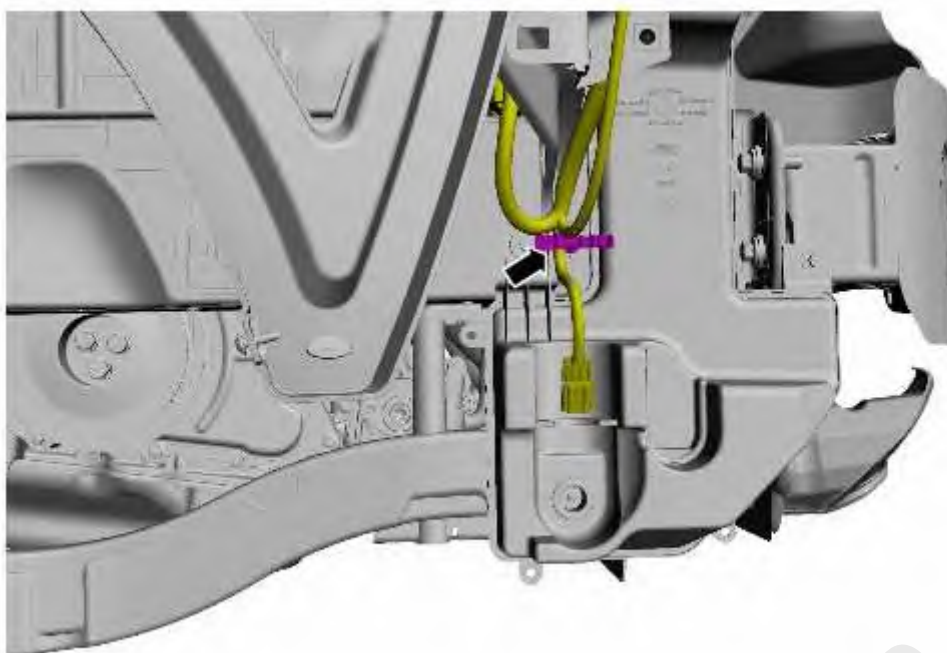


E163640

7.

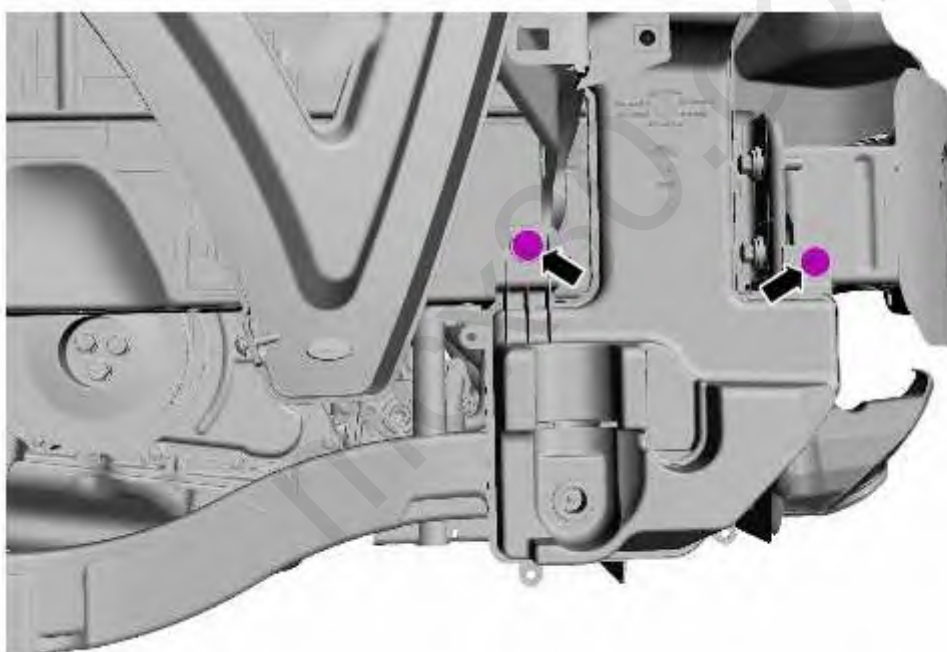


E163641

8.

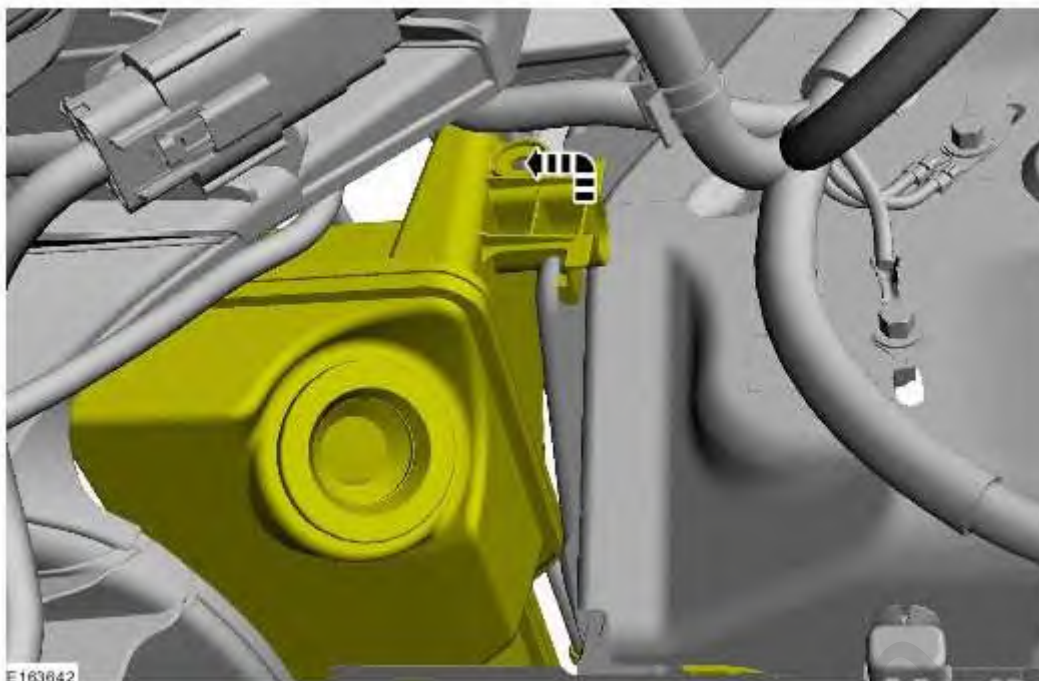

9.

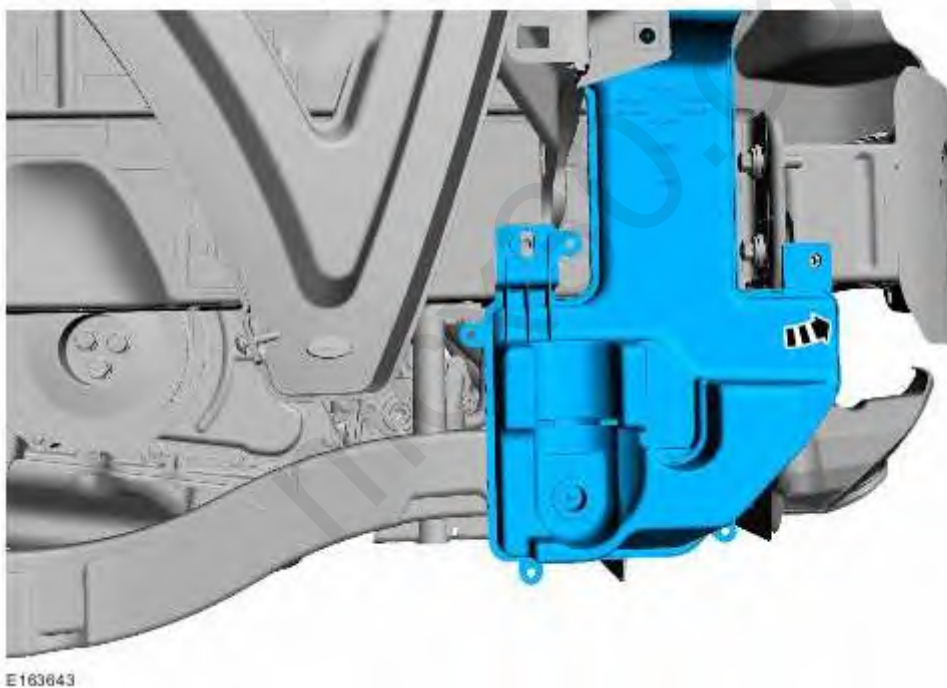

Installation

1. To install, reverse the removal procedure.