

Removal and Installation

Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Refer to: [Rear Bumper Cover](#) (501-19 Bumpers, Removal and Installation).
2. Torque: 20 Nm



E160870

NOTE: The component can be reused unless it has been subjected to abnormal mechanical stress, damage or oil contamination.

3.
 1. Torque: 105 Nm
 2. Torque: 30 Nm



Installation

1. To install, reverse the removal procedure.