


Removal and Installation


Removal

1. Refer to: [Jacking and Lifting](#) (100-02 Jacking and Lifting, Description and Operation).
Refer to: [Headlamp Assembly](#) (417-01 Exterior Lighting, Removal and Installation).
2. *Torque: 6 Nm*

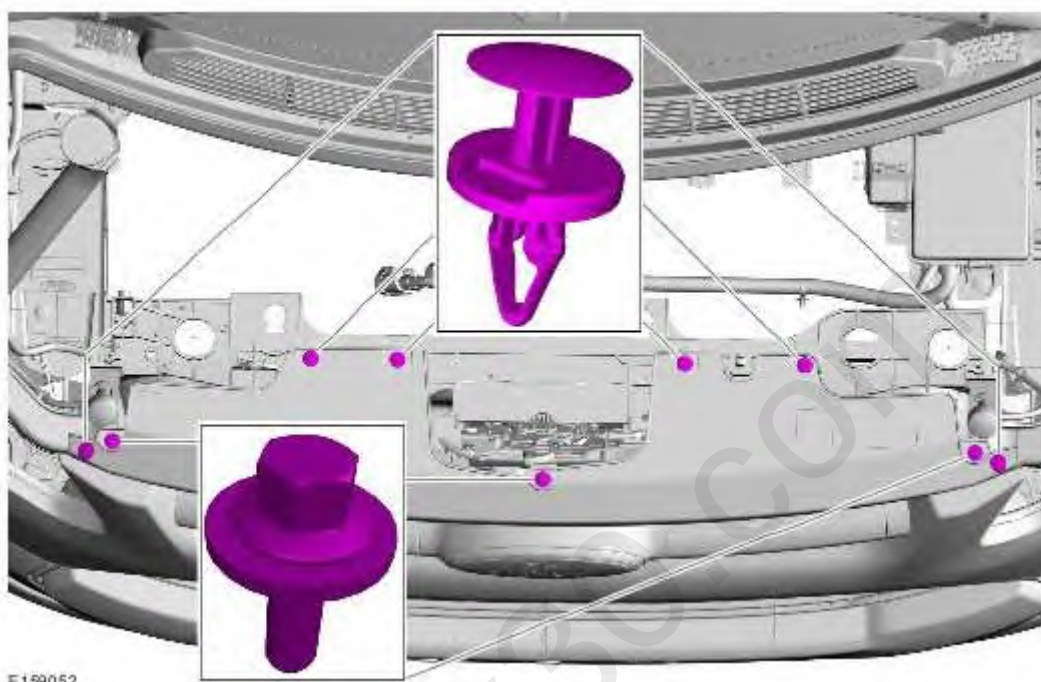

E159052


3. On both sides.

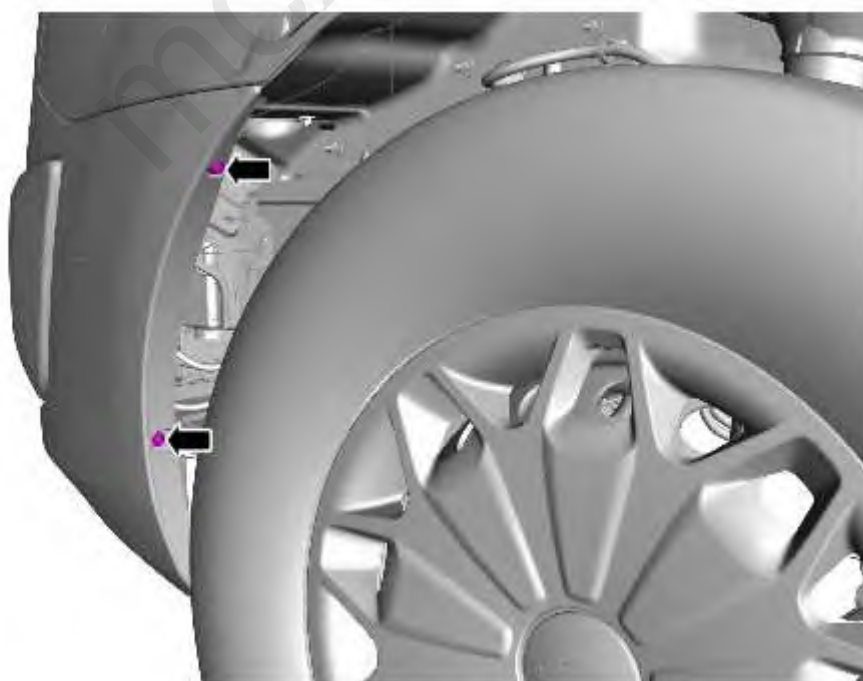

E159056

Vehicles with front fog lamps


4. On both sides.

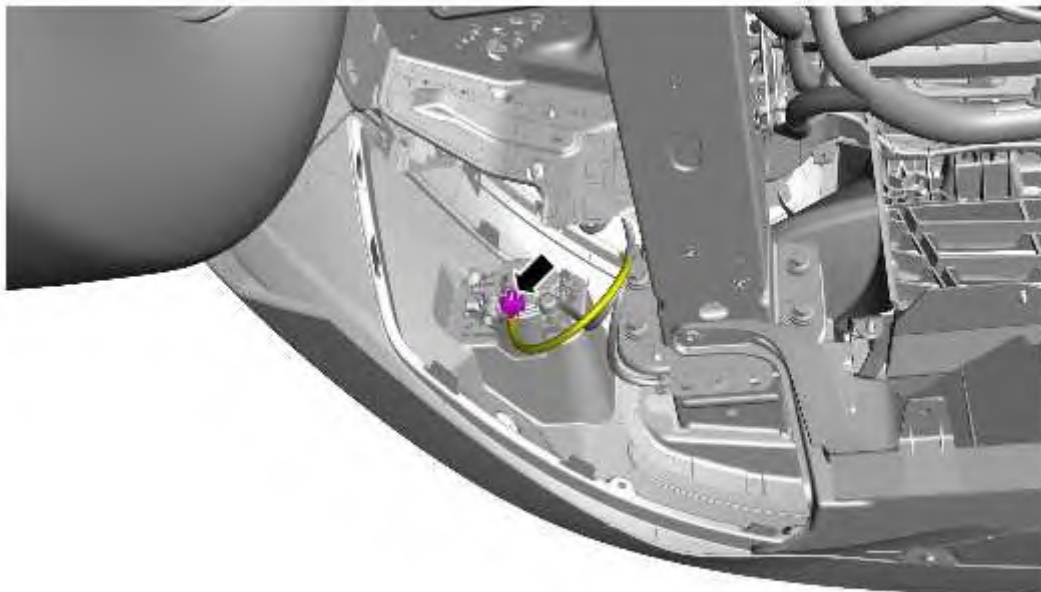

E199058

Vehicles with parking aid


5.

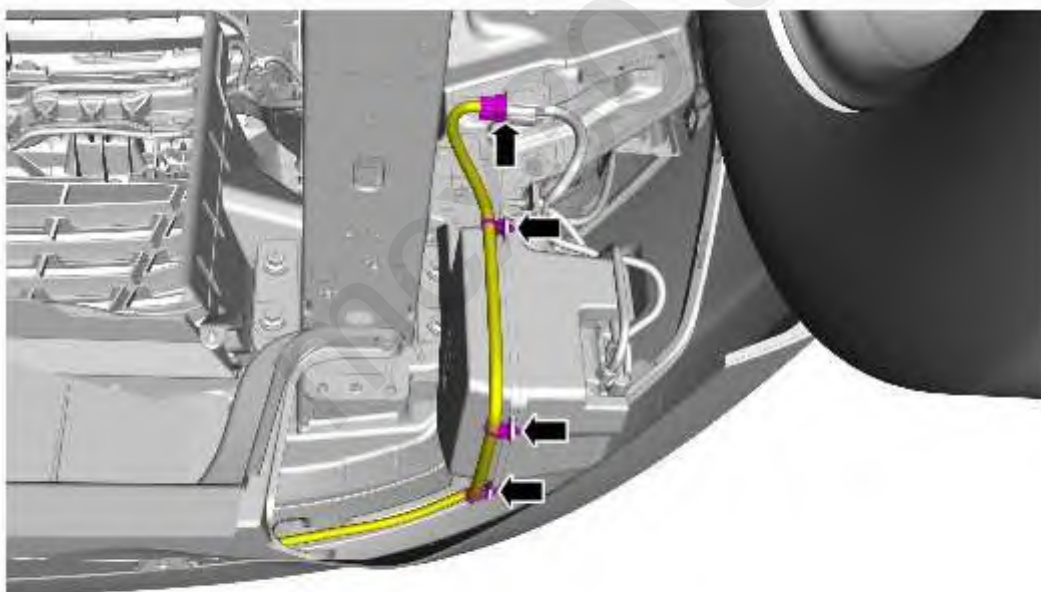

E199057

All vehicles

6.

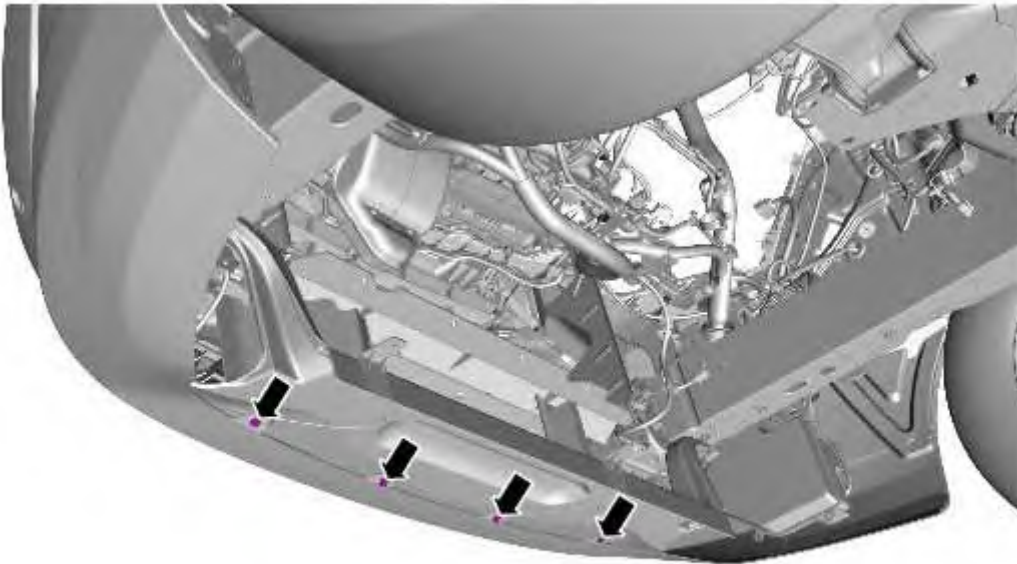


E159059

7. Torque: 30 Nm




E159053

8. On both sides.

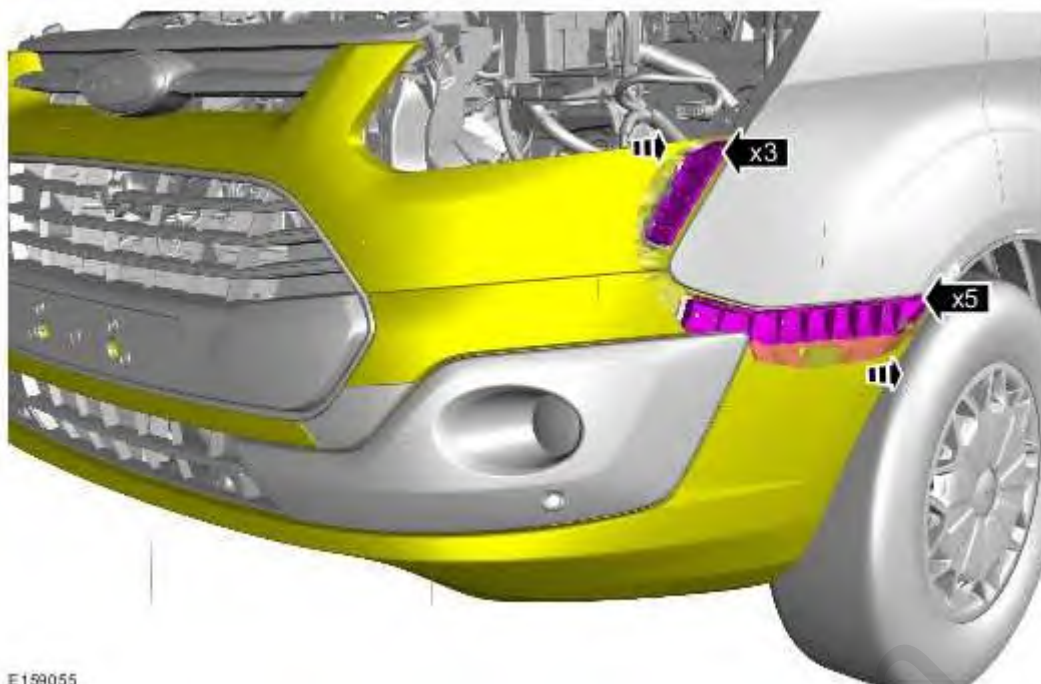

E159055

9.

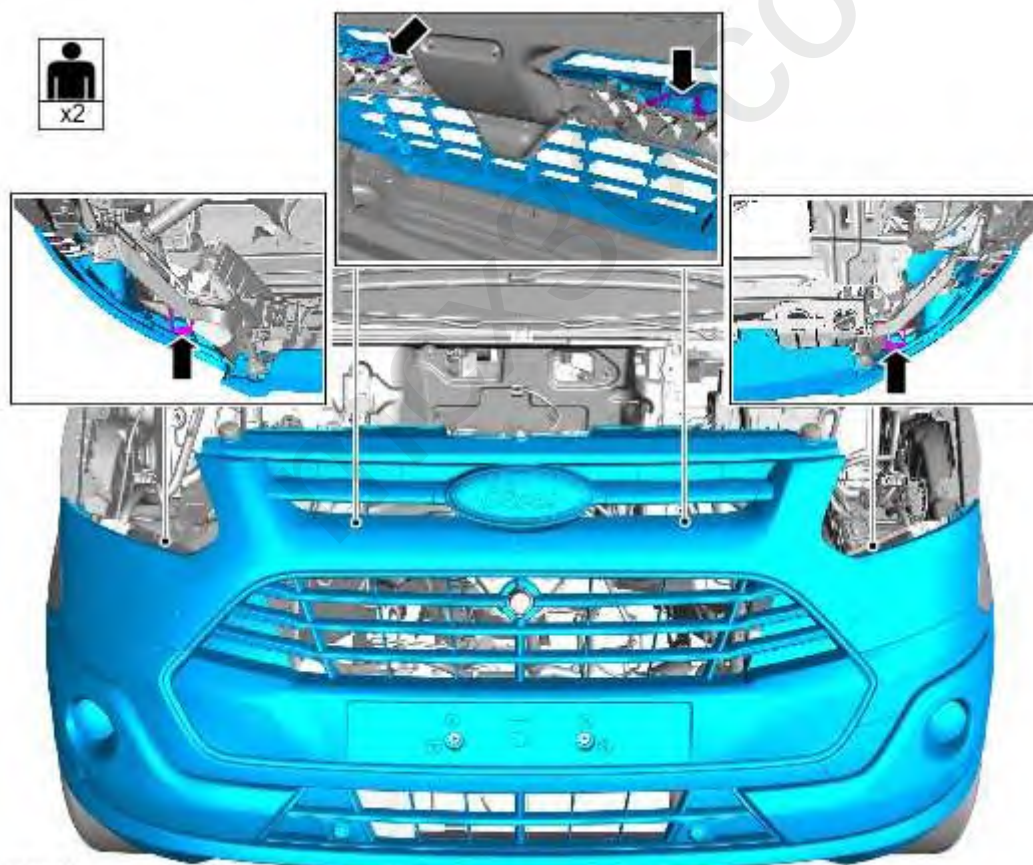

E159054

Installation

1. To install, reverse the removal procedure.