

Removal and Installation


General Equipment

Blind Rivet Gun

Removal


NOTE: Removal steps in this procedure may contain installation details.

1.

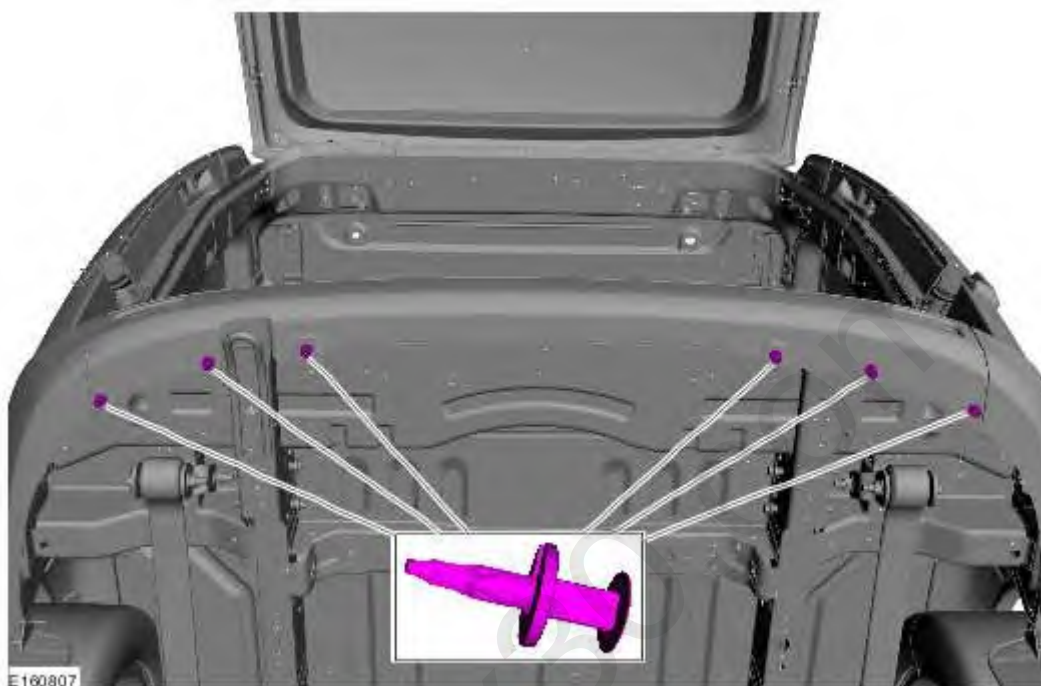

Vehicles with parking aid


2. Torque: 3 Nm

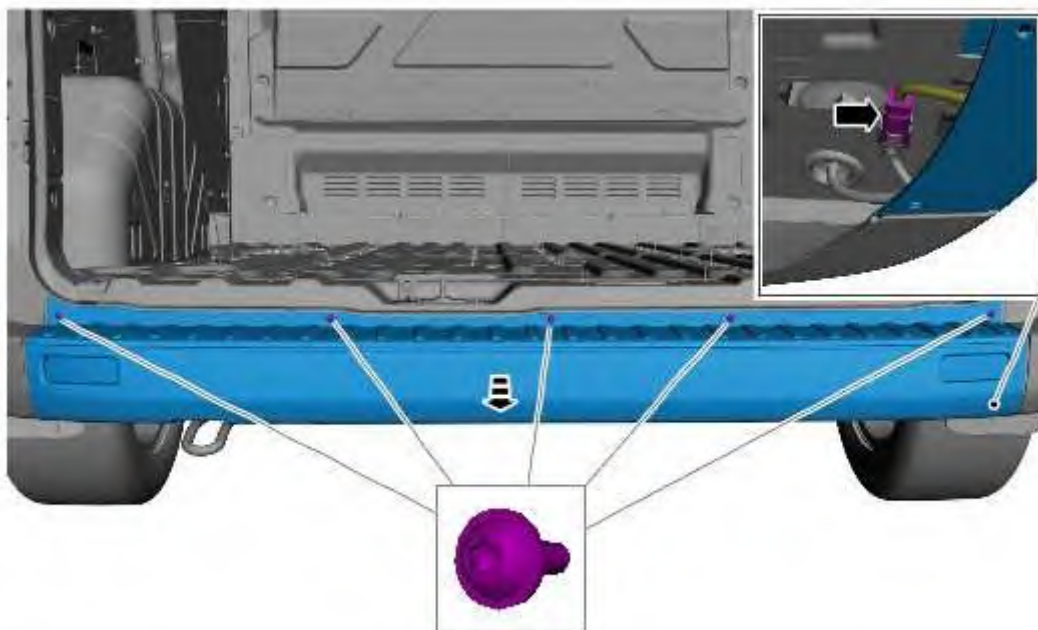

E160809

3. On both sides.


Torque: 3 Nm

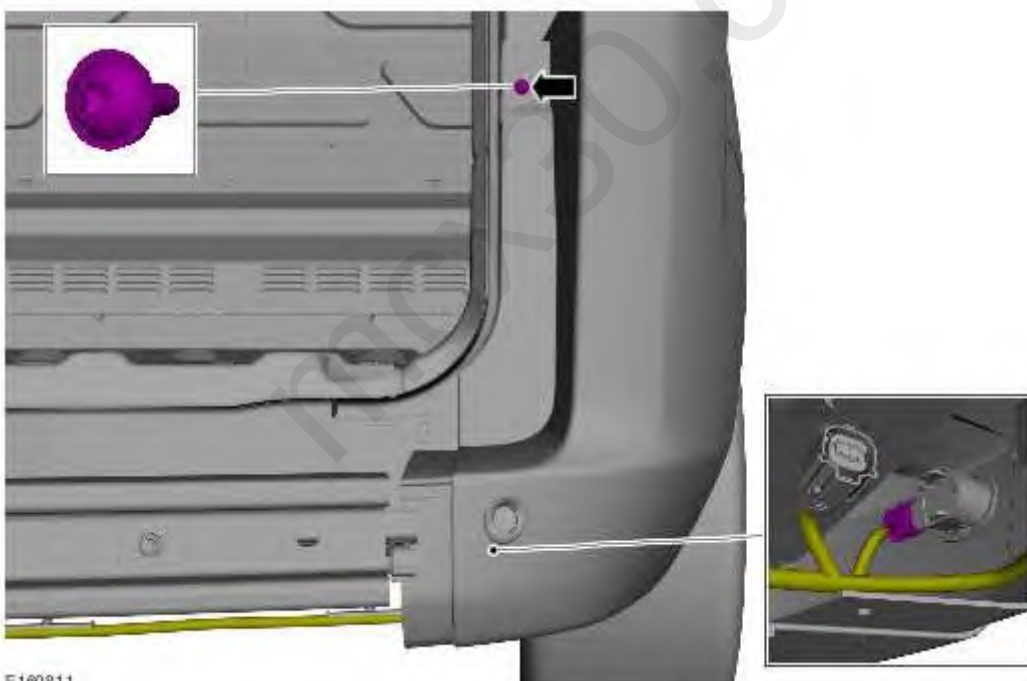

E160811

All vehicles


4. *Torque: 3 Nm*

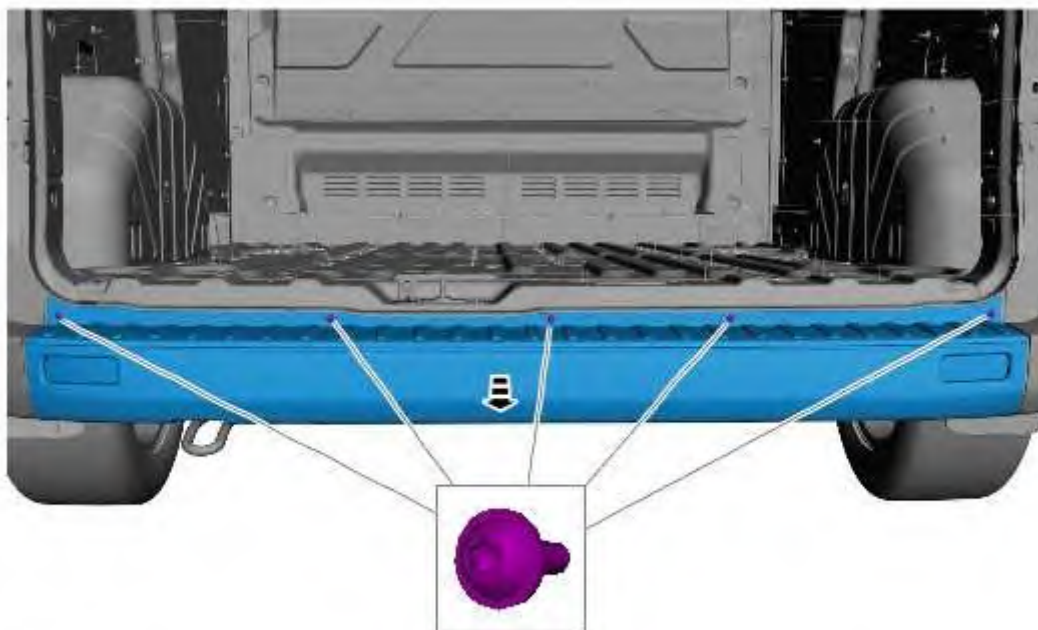

E160808


5. On both sides.

Torque: 3 Nm

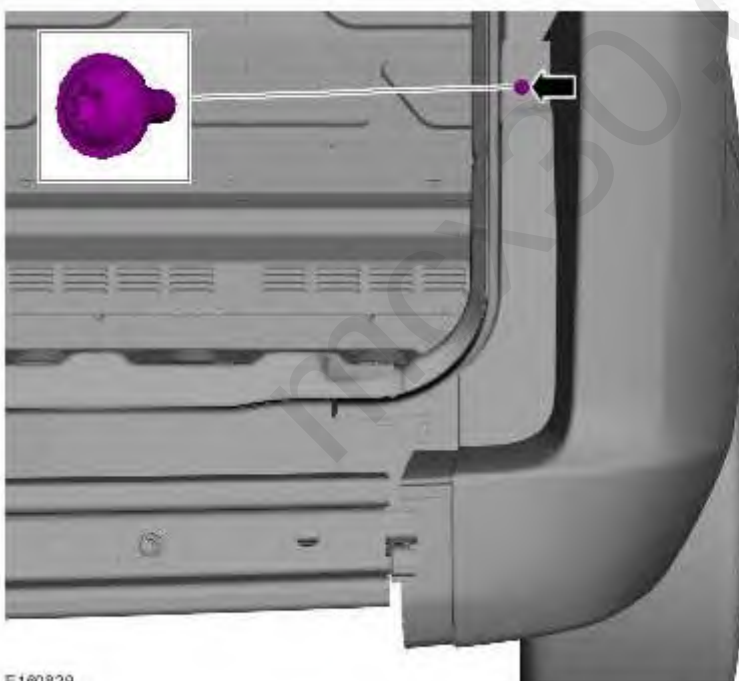


E160829

6. Both sides, If equipped.

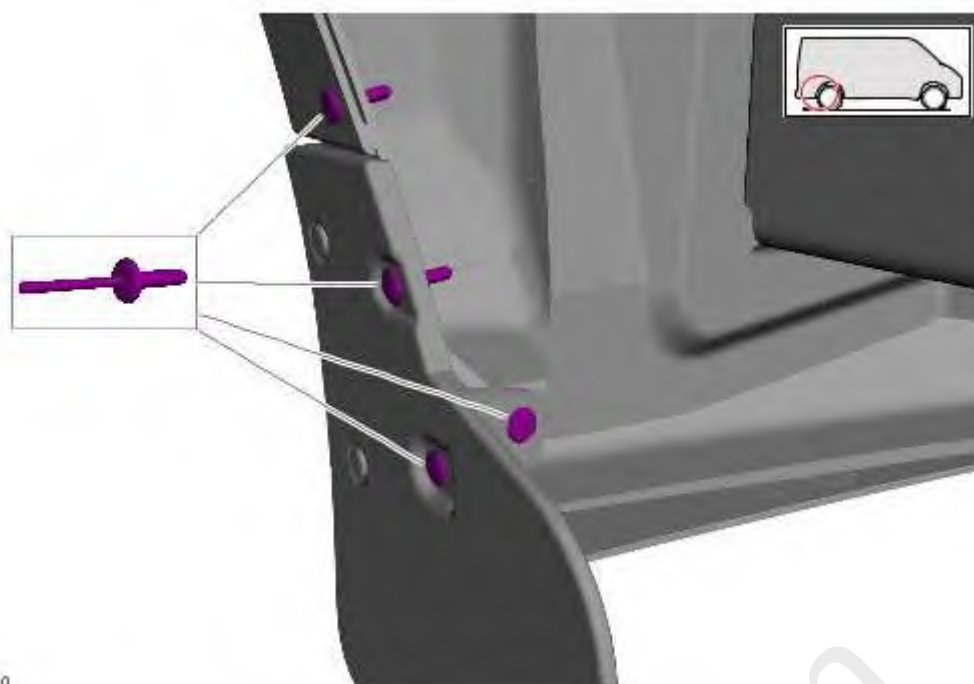


E162900

7. On both sides.

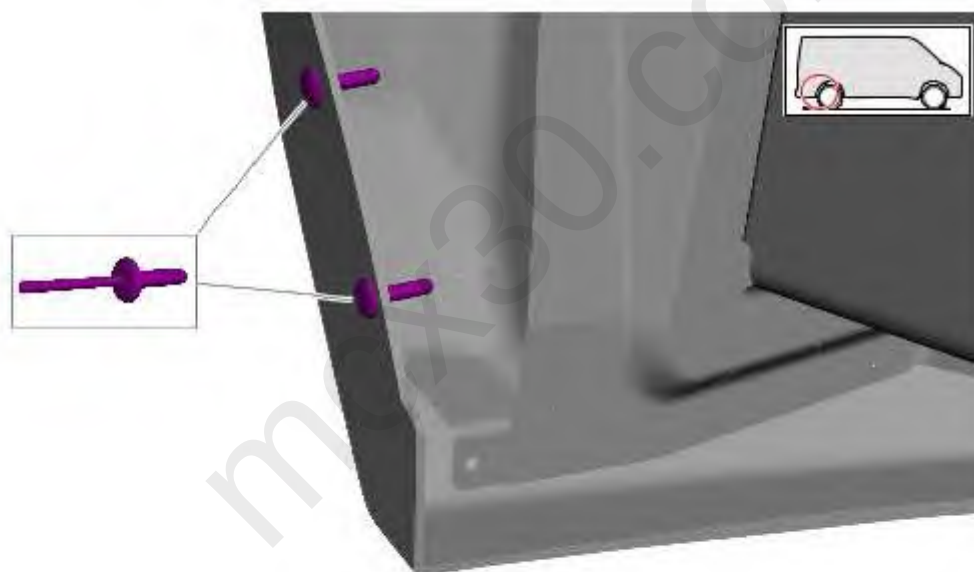

E162901


8. On both sides.

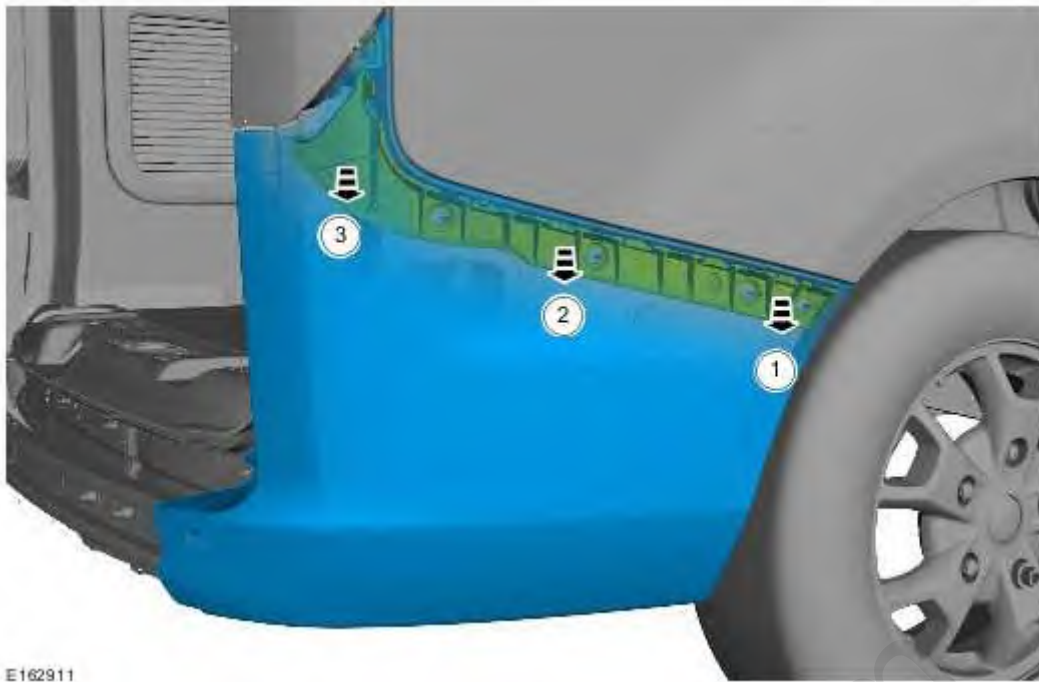

E162911

Installation


1. On both sides.

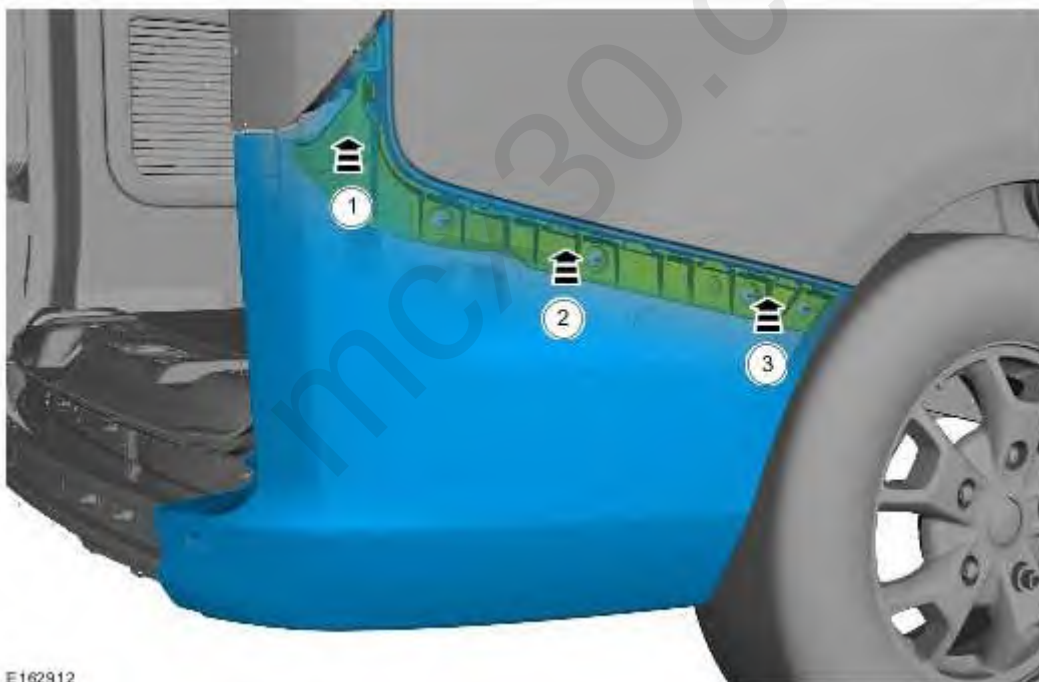

E162912

2. On both sides.


Use the General Equipment: [Blind Rivet Gun](#)

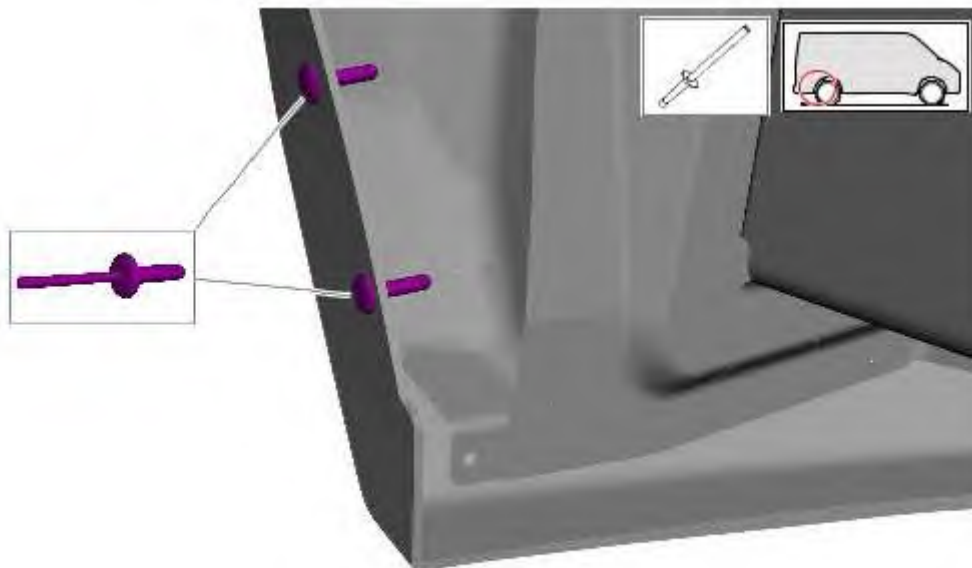

E162914

3. Both sides, If equipped.

Use the General Equipment: [Blind Rivet Gun](#)

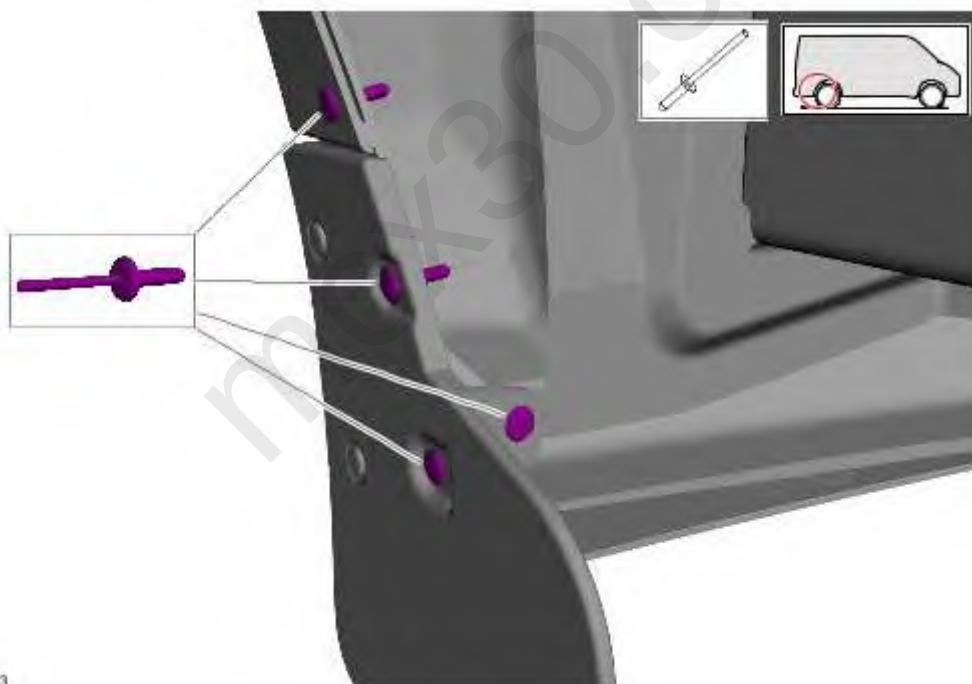

E162913

4. To install, reverse the removal procedure.