


Removal and Installation


Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Refer to: [Health and Safety Precautions](#) (100-00 General Information, Description and Operation).
2. 1. If equipped.

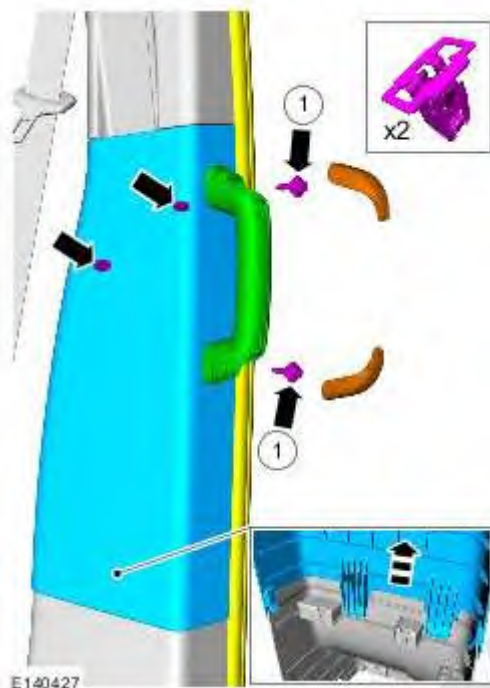


3. 1.

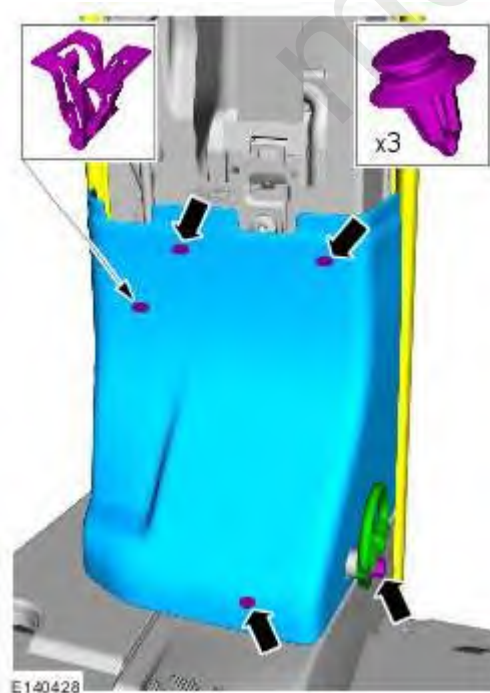


4. 1.
2. *Torque: 40 Nm*




5. 1.

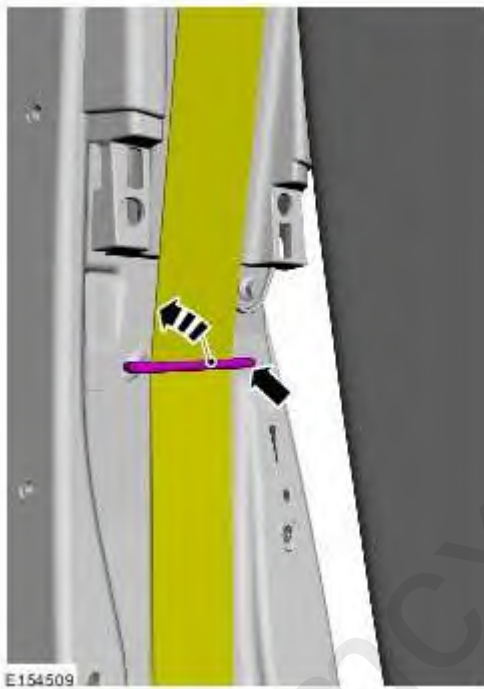

6. 1.

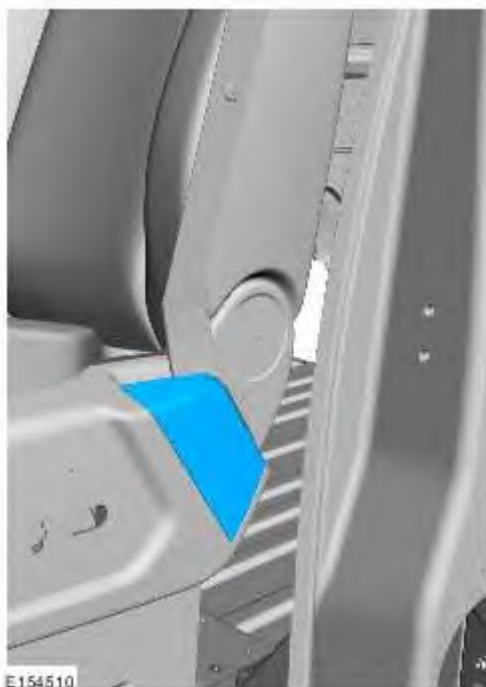


- 7.
1. Torque: 40 Nm

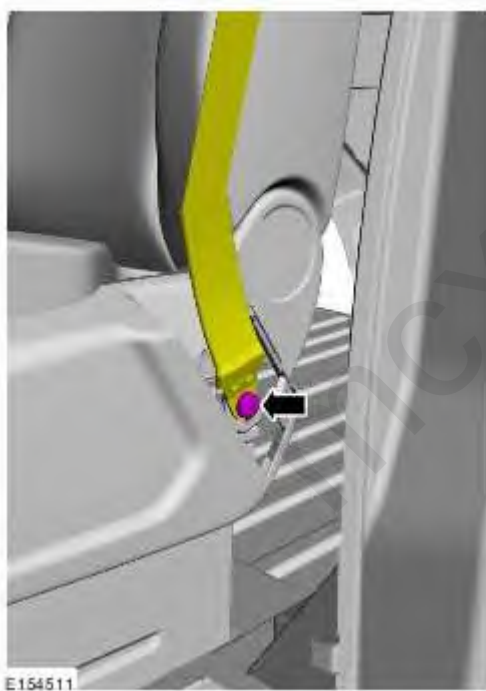

- 8.
1. Torque: 40 Nm



9. 1.

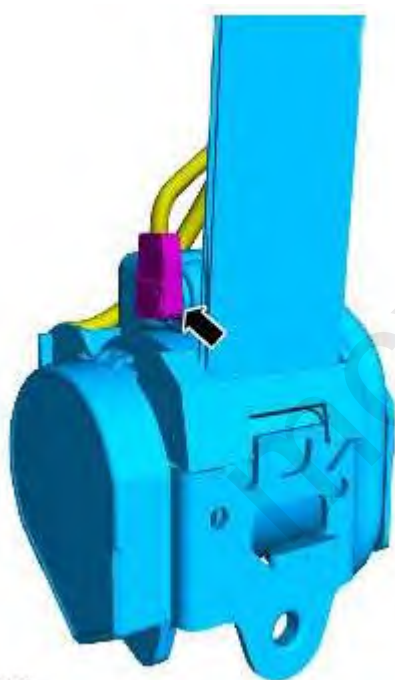

Installation

1. To install, reverse the removal procedure.