


Removal and Installation


Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Refer to: [Health and Safety Precautions](#) (100-00 General Information, Description and Operation).
2. 1. If equipped.

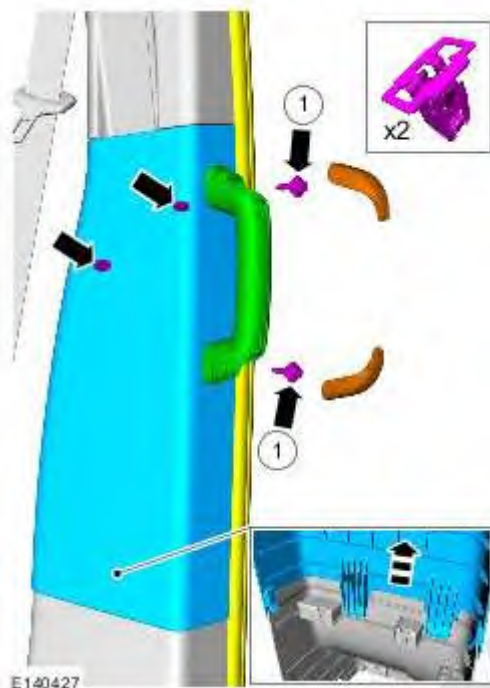

3. 1.
2. Torque: 40 Nm

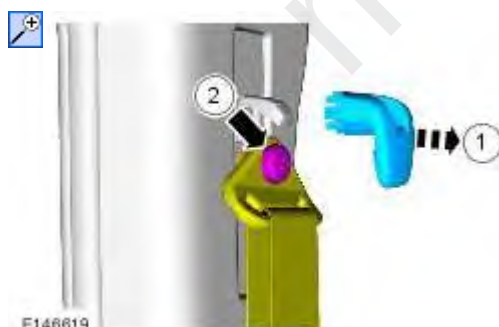

- 4.



5. Torque: 35 Nm



Installation

1. To install, reverse the removal procedure.