


Removal and Installation

Removal


NOTE: Removal steps in this procedure may contain installation details.

1. Refer to: [Front Seat](#) (501-10A Front Seats, Removal and Installation).
- 2.

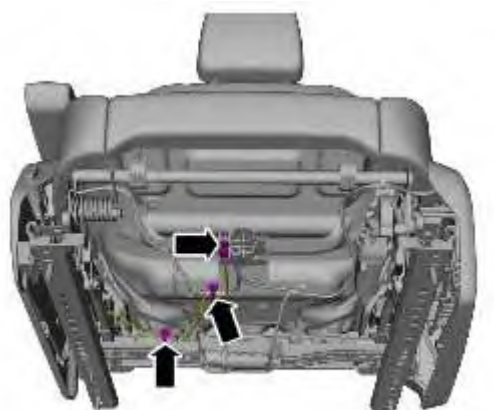

E151224

3. Torque: 40 Nm

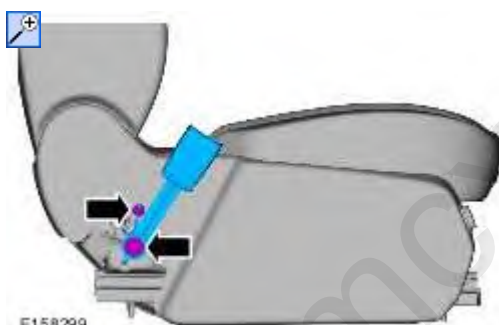

E158299

Installation

1. To install, reverse the removal procedure.