

Removal and Installation


Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Torque: 3 Nm



2. Torque: 40 Nm

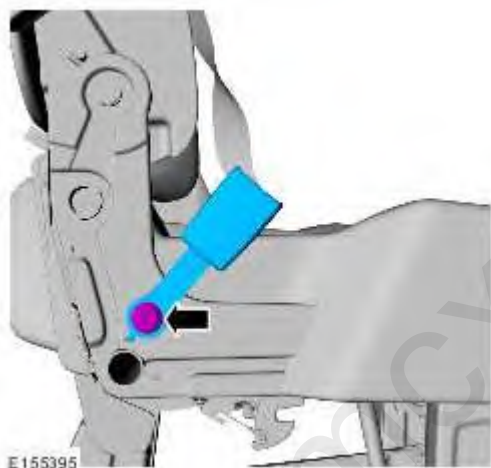

Installation

1. To install, reverse the removal procedure.