

General Procedures

General Equipment

Adhesive Tape

Adjustment

NOTICE:




If there is a break between installing the clockspring and steering wheel rotation sensor assembly and installing the steering wheel, the centralizing of the clockspring must be repeated.




If the centralization of the clockspring is in doubt, the centralizing of the clockspring must be repeated.

1.
 1. Turn the clockspring rotor in a counterclockwise direction until a resistance is felt.
 2. Turn the clockspring rotor in a clockwise direction, until the arrow marked on the clockspring rotor aligns with the raised 'V' section on the clockspring body.
 3. Turn the clockspring rotor in a clockwise direction three turns.

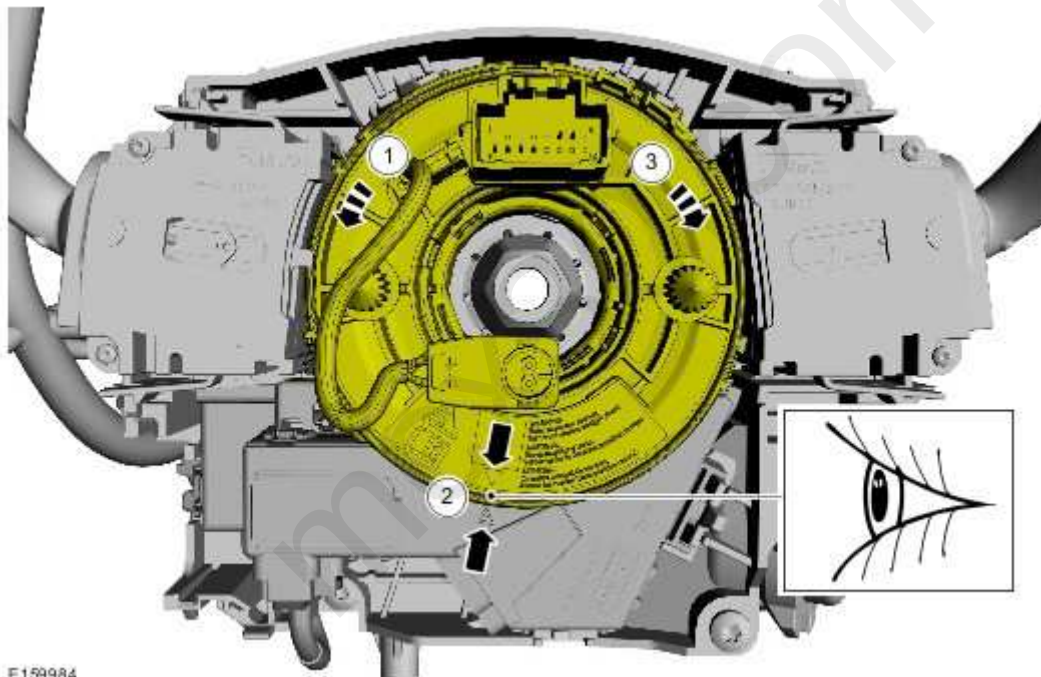

E159984

- 2. **NOTICE:** Make sure that the clockspring rotor does not rotate.
Use the General Equipment: [Adhesive Tape](#)

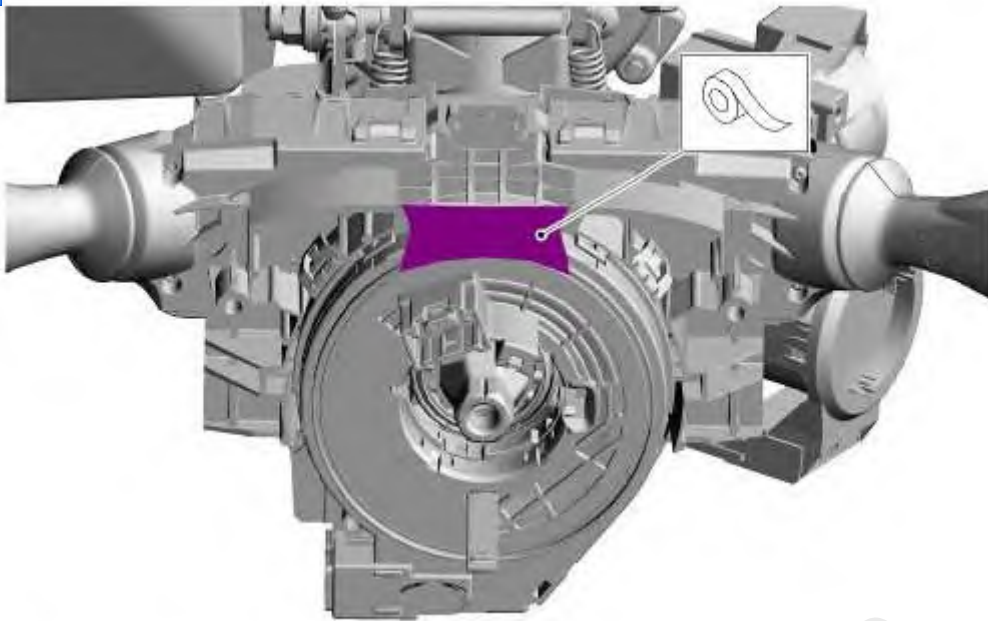

E102968

mcx30.com