


Removal and Installation

Removal


NOTE: Removal steps in this procedure may contain installation details.

1. Refer to: [Steering Wheel](#) (211-04 Steering Column, Removal and Installation).
2.  NOTICE: Make sure that the clockspring pins are not bent or damaged.

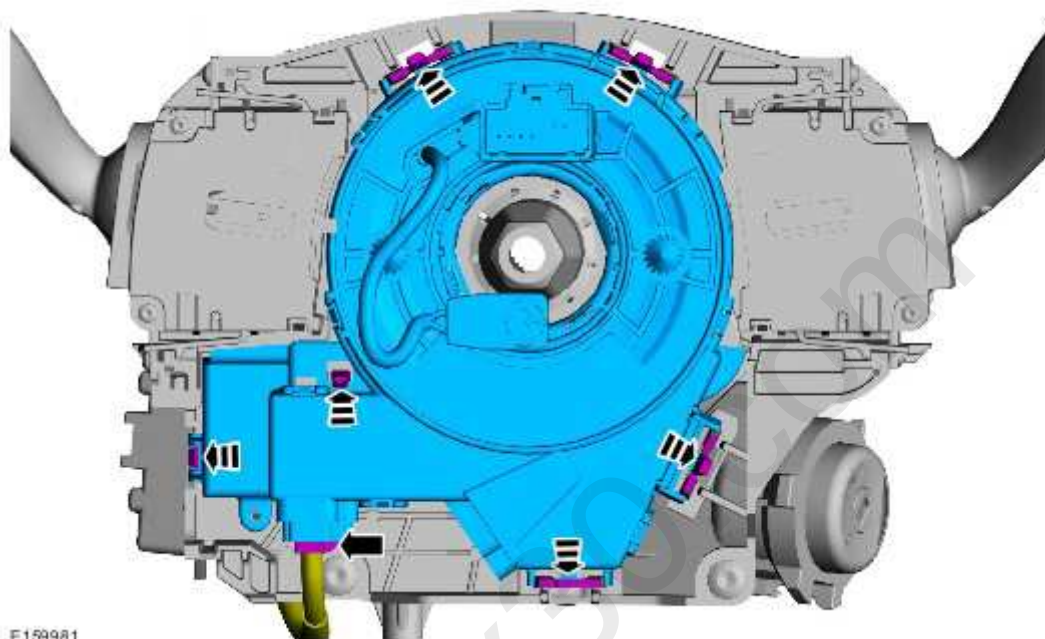

Installation

- 1.

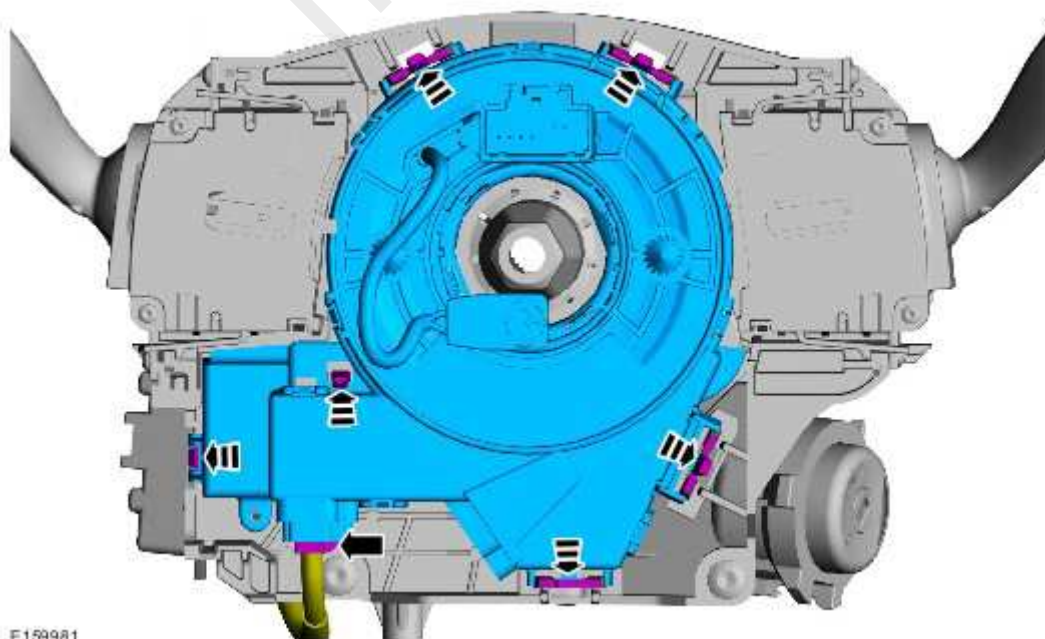

2. **NOTE:** This step is only necessary if adjustment is required.

Refer to: [Clockspring Adjustment](#) (501-20B Supplemental Restraint System, General Procedures).

3. Refer to: [Steering Wheel](#) (211-04 Steering Column, Removal and Installation).

4. **NOTE:** This step is only necessary when installing a new component.



E160414

mcx30.com