

### Removal and Installation

#### Removal

##### WARNINGS:



After the power supply has been disconnected, wait for a minimum of 3 minutes before disconnecting or removing any pyrotechnic components.




Make sure that the vehicle electrical system is fully depowered and no other power source is connected.

NOTE: Removal steps in this procedure may contain installation details.

1. Refer to: [Pyrotechnic Device Health and Safety Precautions](#) (100-00 General Information, Description and Operation).


NOTE: Make sure that the steering column lock is not engaged.

2. Refer to: [Battery Disconnect and Connect](#) (414-01 Battery, Mounting and Cables, General Procedures).
- 3.

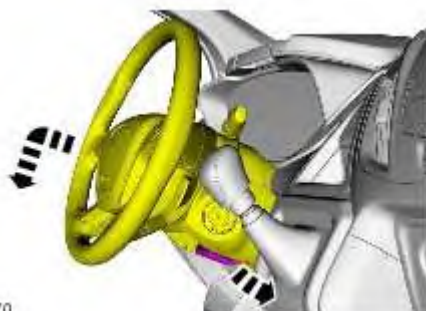


E140470

- 4.

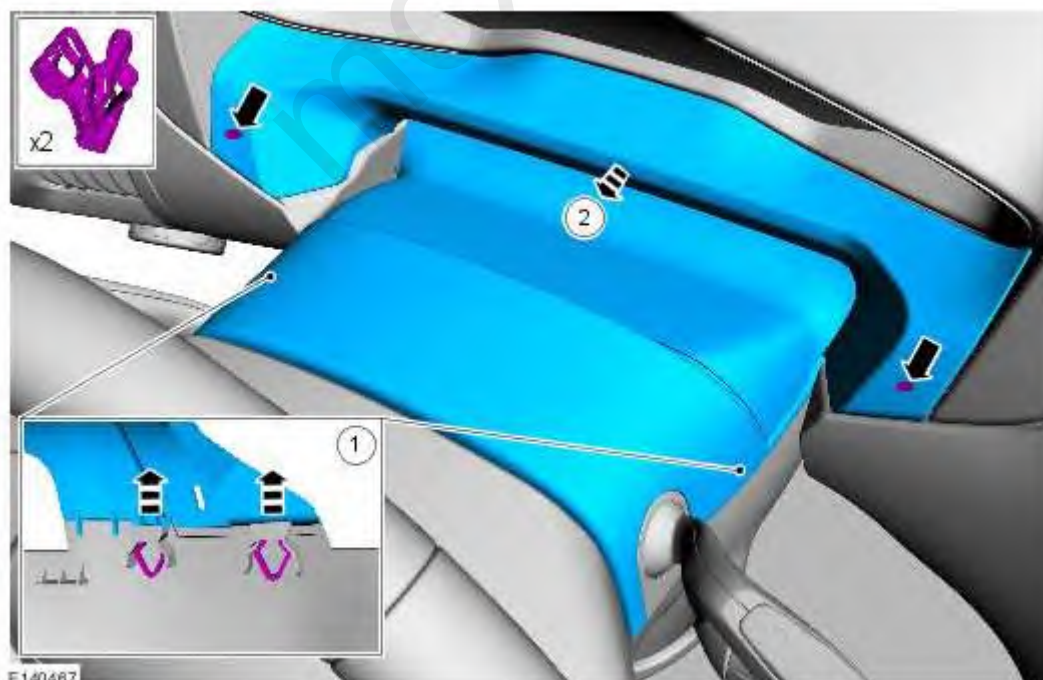



E140467

- 5.

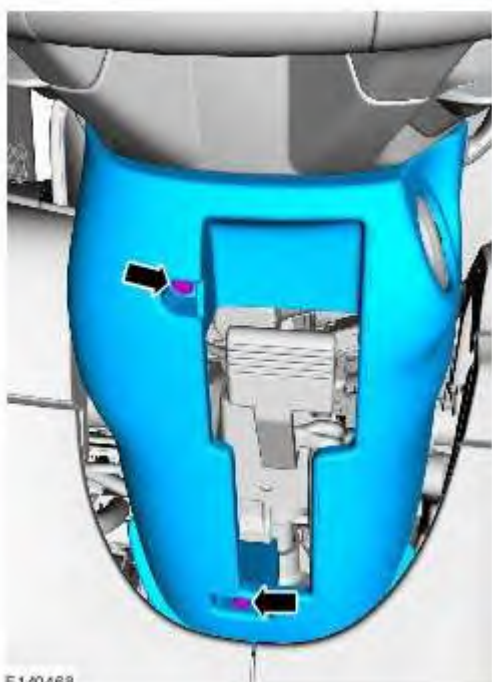

E140468


6.

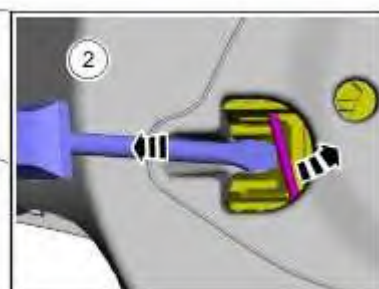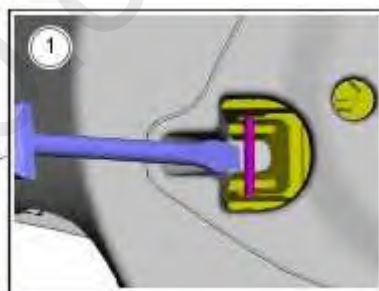

E159920

7.



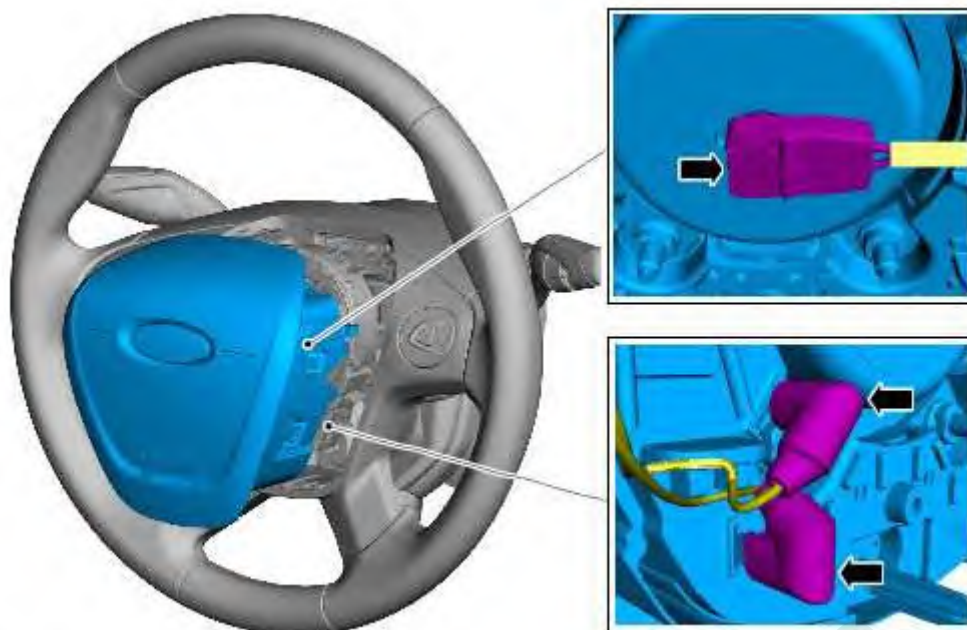

E159921

### Installation

1. To install, reverse the removal procedure.