

Removal and Installation

Removal

WARNINGS:




After the power supply has been disconnected, wait for a minimum of 3 minutes before disconnecting or removing any pyrotechnic components.




Make sure that the vehicle electrical system is fully depowered and no other power source is connected.

NOTE: Removal steps in this procedure may contain installation details.

1. Refer to: [Pyrotechnic Device Health and Safety Precautions](#) (100-00 General Information, Description and Operation).
2. Refer to: [Battery Disconnect and Connect](#) (414-01 Battery, Mounting and Cables, General Procedures).
- 3.

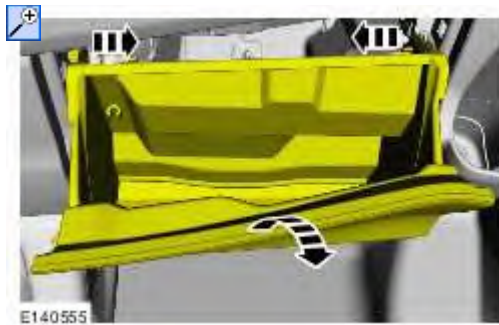


4. Torque: 8 Nm

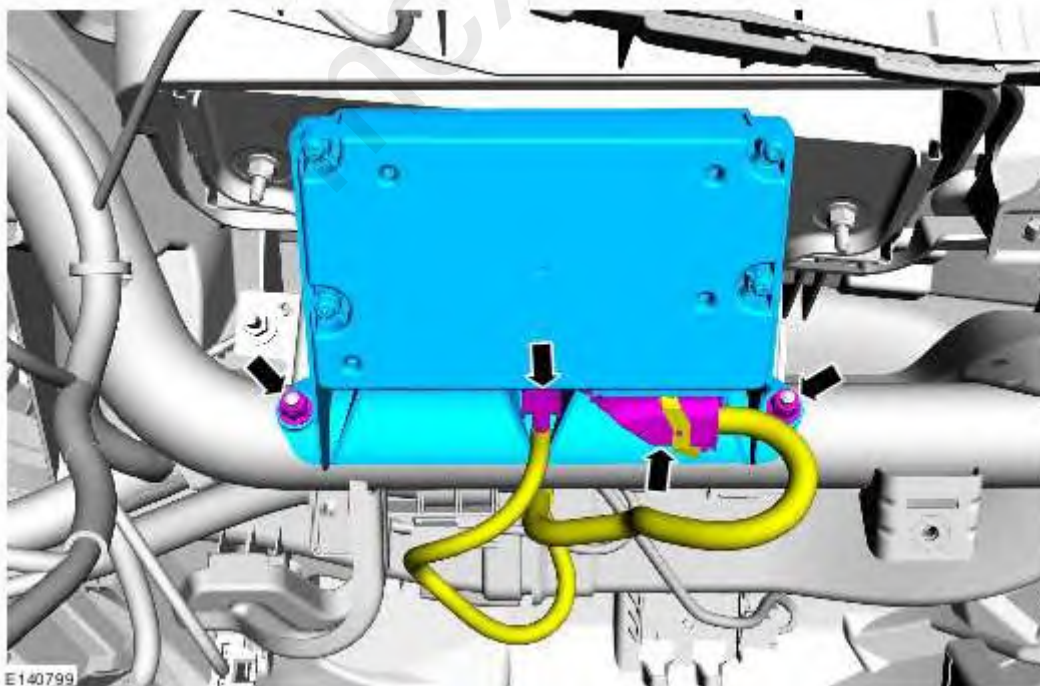


5.
 1. Torque: 4 Nm


2. Torque: 25 Nm

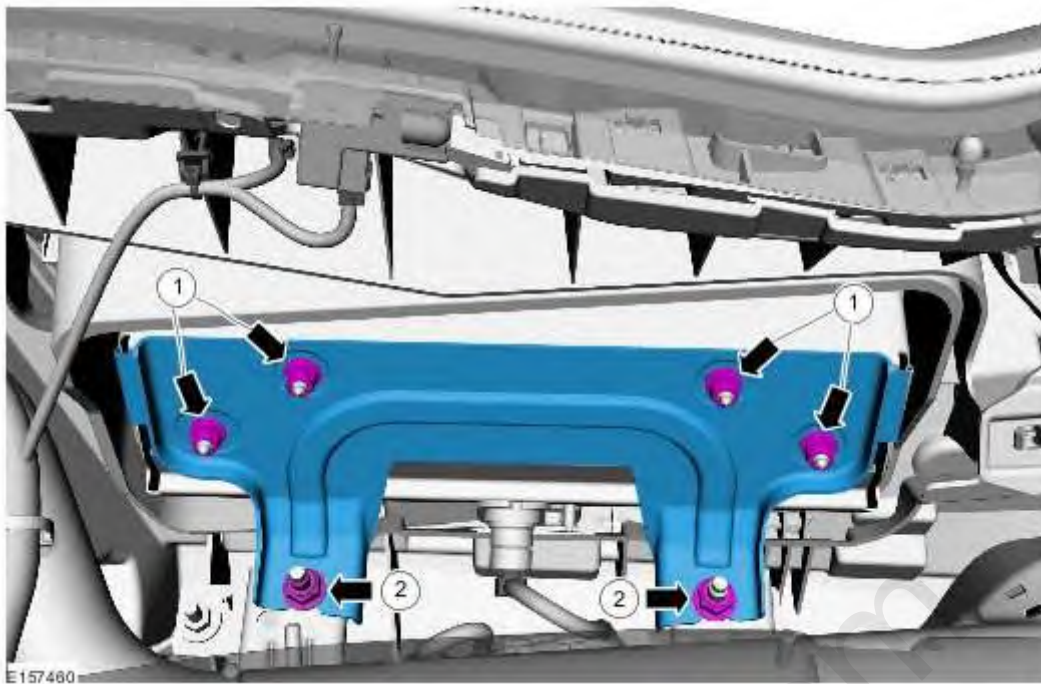

Torque: 4 Nm

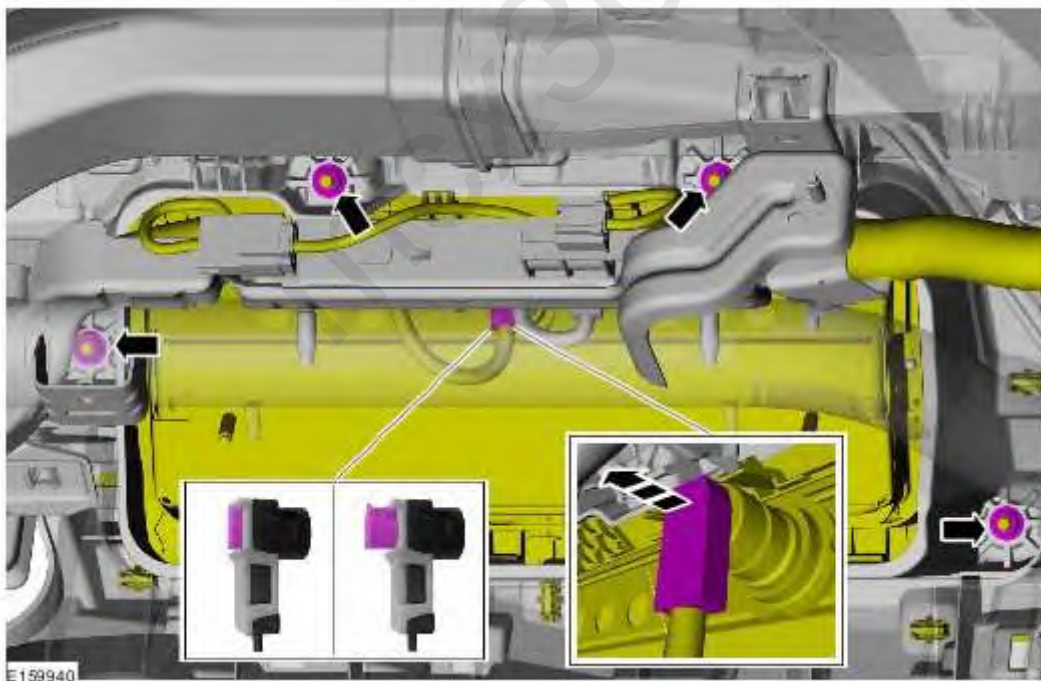

7.

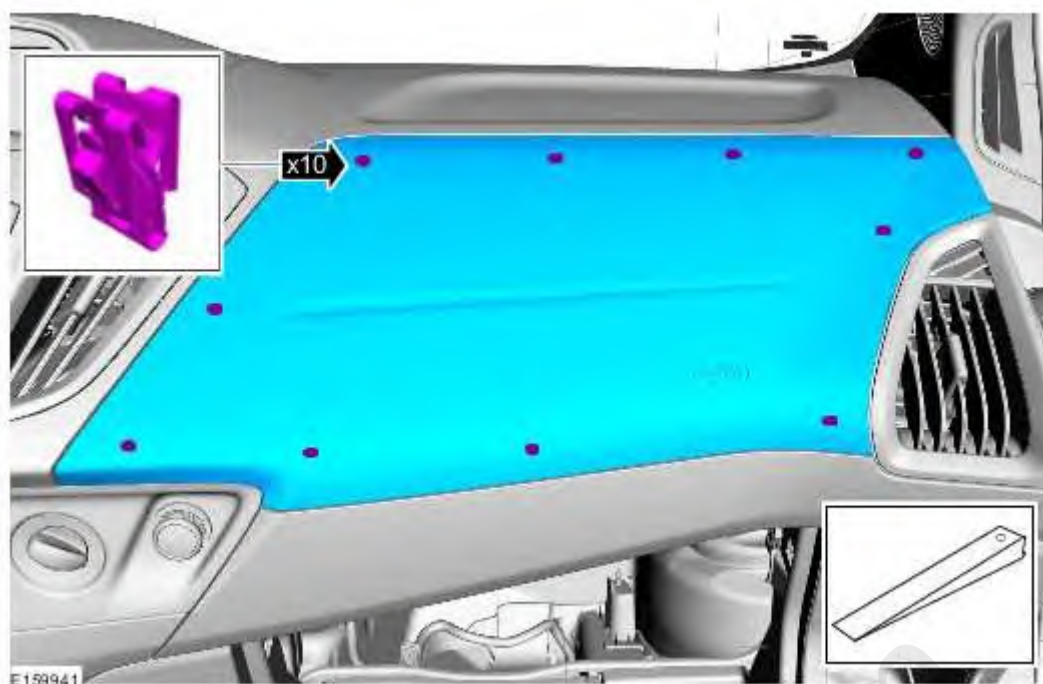

Installation

1. To install, reverse the removal procedure.