

Removal and Installation

Removal

WARNINGS:



After the power supply has been disconnected, wait for a minimum of 3 minutes before disconnecting or removing any pyrotechnic components.



Make sure that the vehicle electrical system is fully depowered and no other power source is connected.

NOTE: Removal steps in this procedure may contain installation details.


1. Refer to: [Battery Disconnect and Connect](#) (414-01 Battery, Mounting and Cables, General Procedures).
2. Refer to: [Front Head Restraint Guide Sleeve](#) (501-10A Front Seats, Removal and Installation).
3. Torque: 40 Nm




4. Torque: 40 Nm




5. Torque: 3 Nm

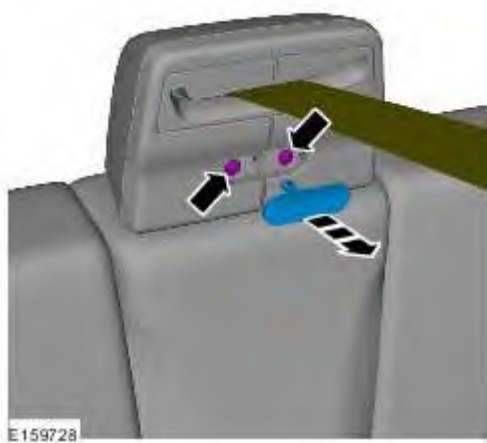


6.

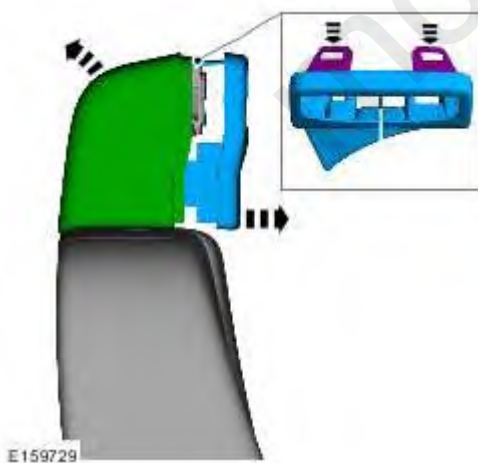

7.

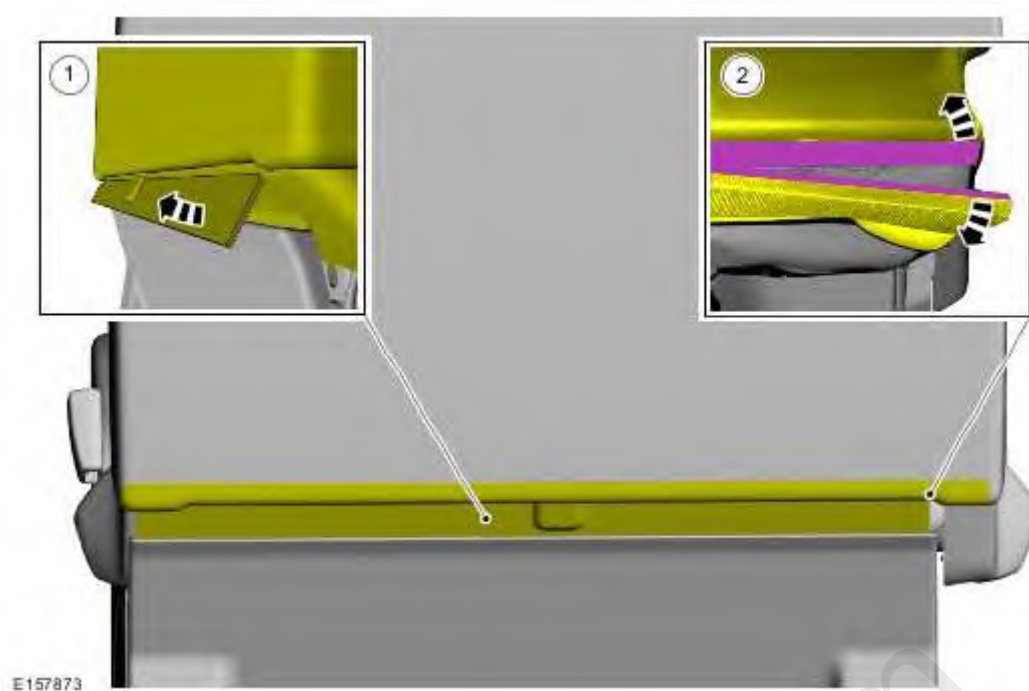

8.

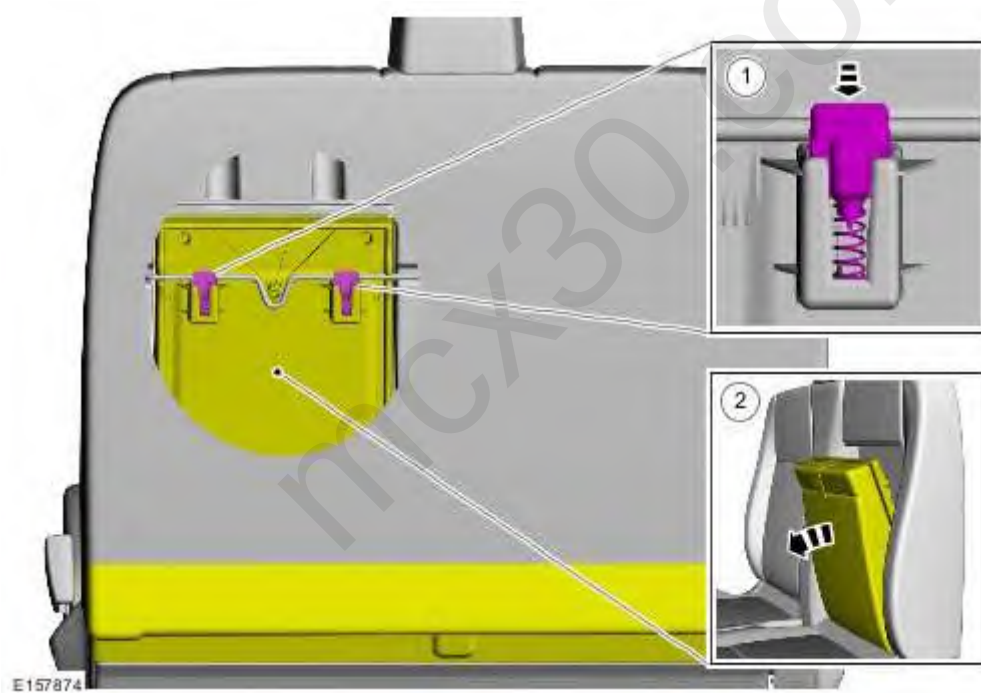


9.




10.



11. If equipped.

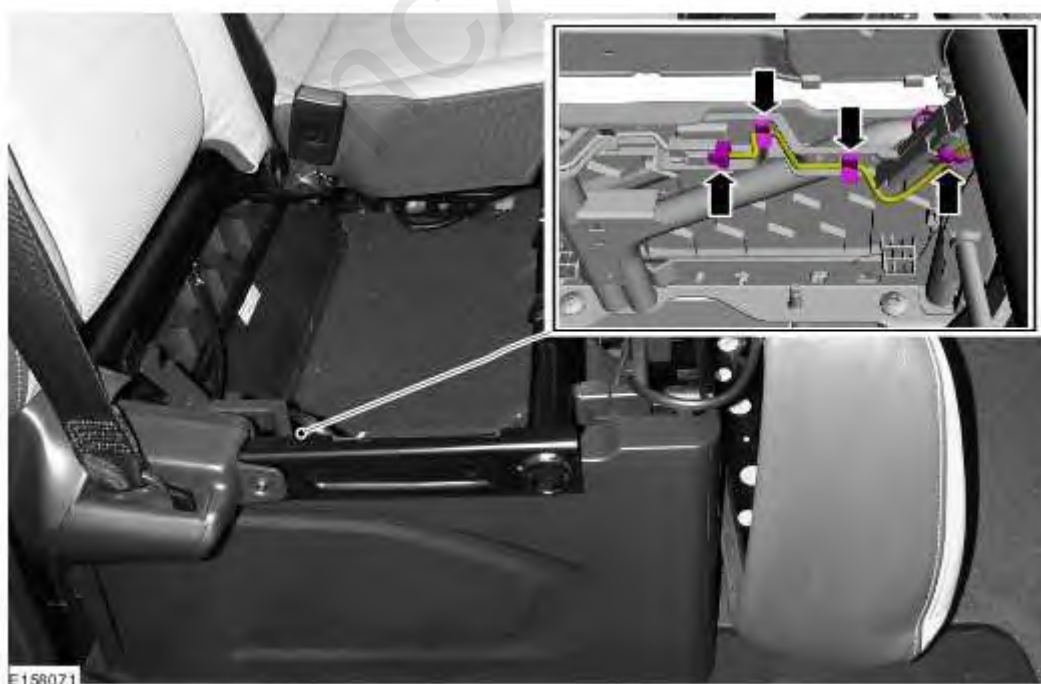

12.

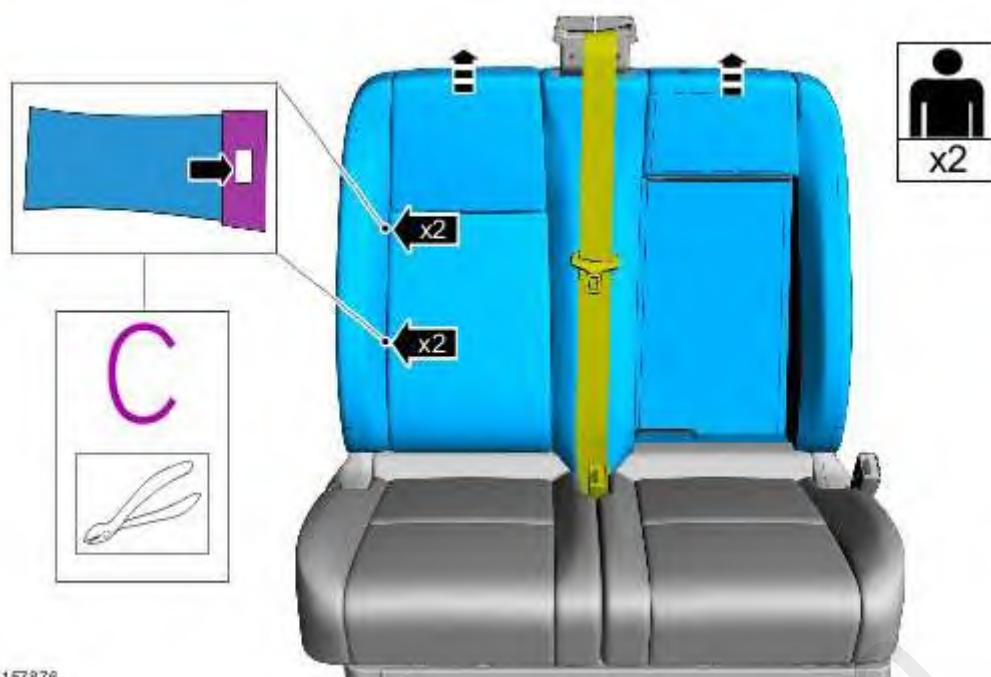


E157876

13.




E168094

14.

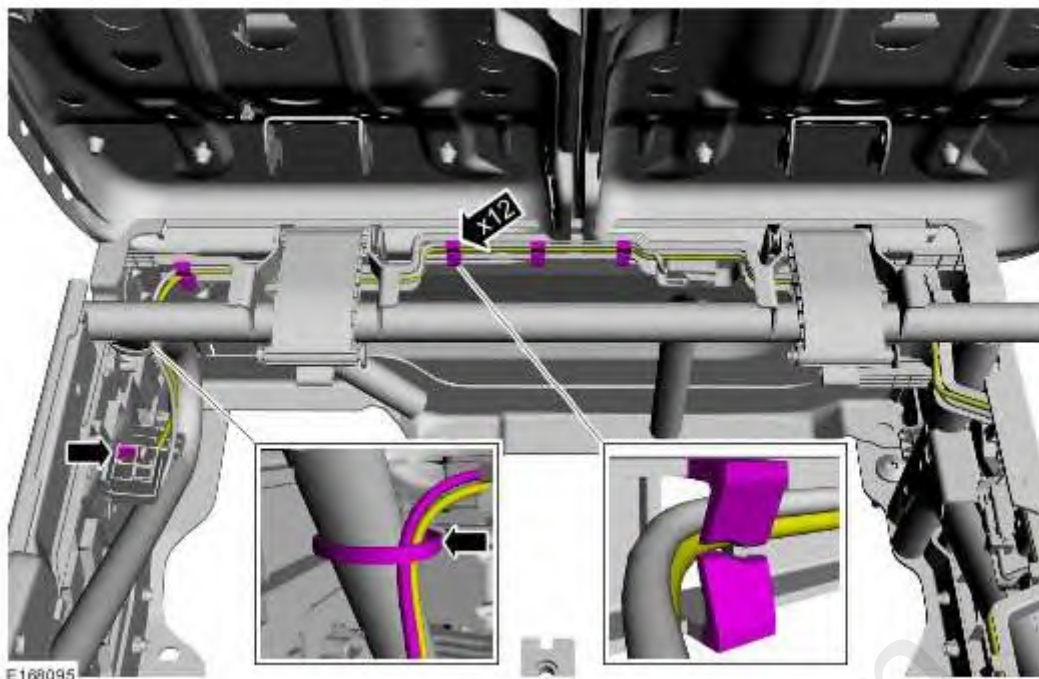

15. 
Torque: 7 Nm

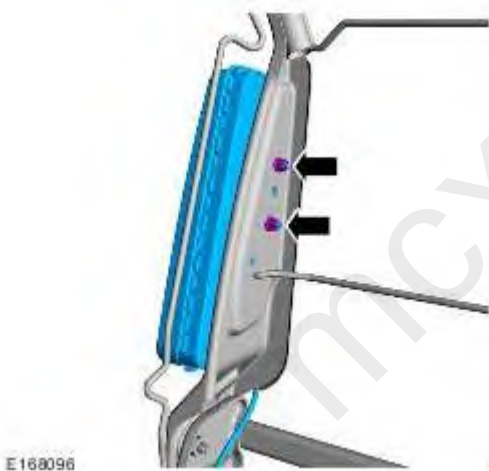

Installation

1. To install, reverse the removal procedure.