


Removal and Installation

Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Refer to: [Health and Safety Precautions](#) (100-00 General Information, Description and Operation).
2. Refer to: [Hood Latch Release Cable](#) (501-14 Handles, Locks, Latches and Entry Systems, Removal and Installation).
3. Torque: 10 Nm

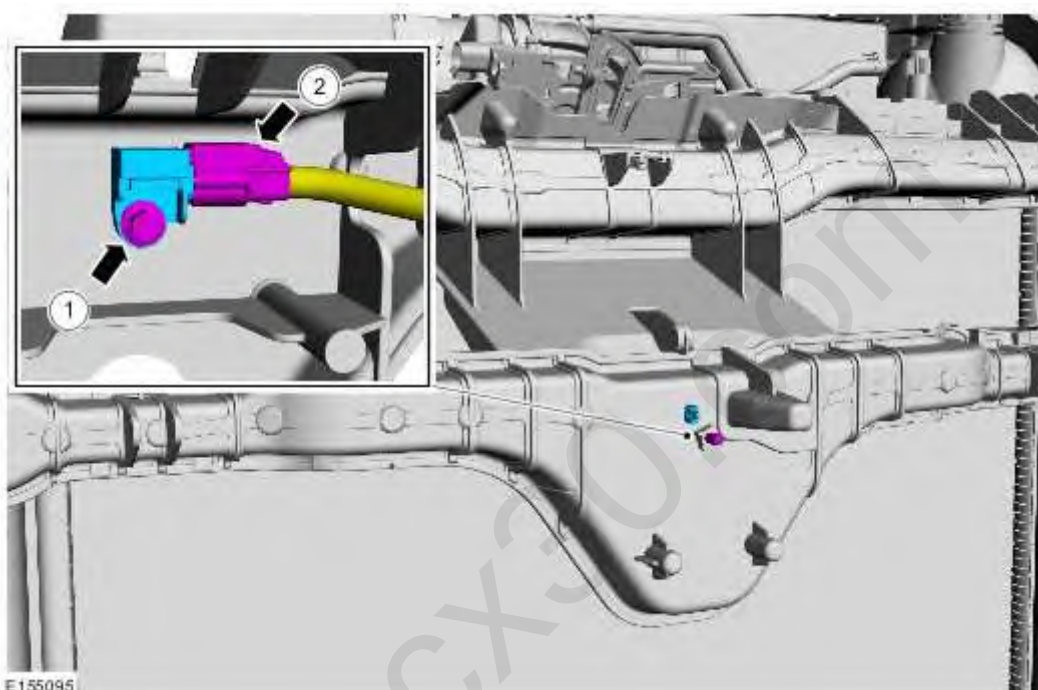

Installation

1. To install, reverse the removal procedure.