


Removal and Installation

Removal

NOTE: Removal steps in this procedure may contain installation details.


1. Refer to: [Pyrotechnic Device Health and Safety Precautions](#) (100-00 General Information, Description and Operation).
2. Refer to: [Battery Disconnect and Connect](#) (414-01 Battery, Mounting and Cables, General Procedures).
- 3.

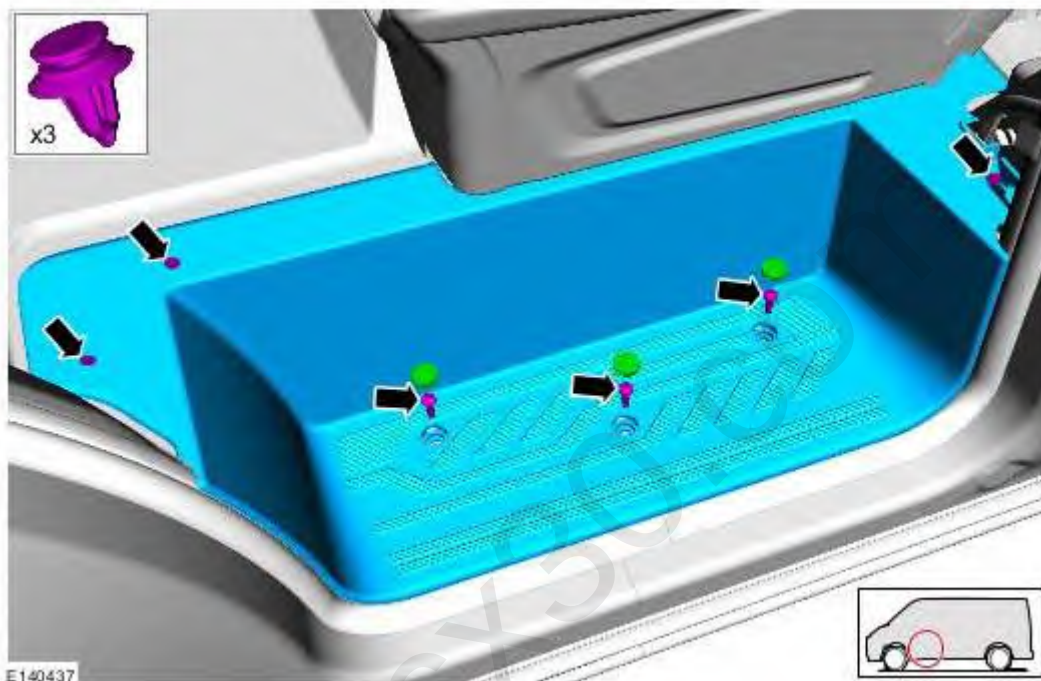


4. NOTE: This step is only necessary when installing a new component to the left-hand side.

If equipped.

Torque: 11 Nm

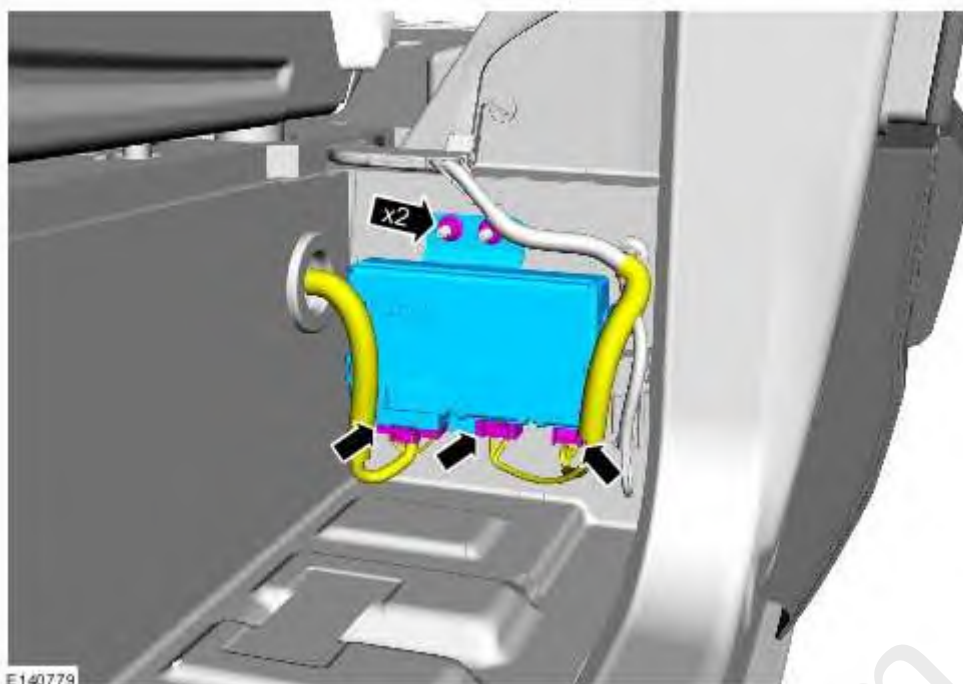

5. Torque: 10 Nm

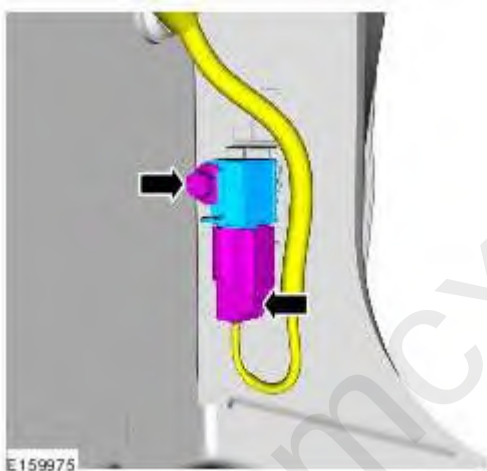

Installation

1. To install, reverse the removal procedure.