

The service has been designed for regular use of your vehicle.

In the event of use in certain difficult conditions, such as:


- constant door to door journeys,
- urban driving,
- repeated short journeys, with cold engine at low temperatures, etc.

Renault recommends that your oil is changed every **9 000 miles (or 15 000 km)** or at least once a year.

Only ACEA standard oils may be used for an **18 000 mile (30 000 km)** change interval.


The tables below show the oil grades which must be used to ensure correct operation of the engine (for European Union countries and Turkey):

PETROL ENGINE

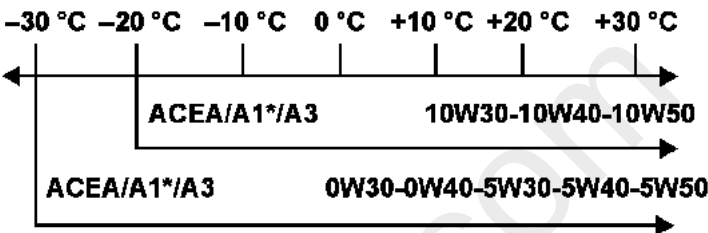

* Oil for fuel economy. This type of oil is not recommended for 2L 16V F4R Renault Sport engines.

DIESEL ENGINE

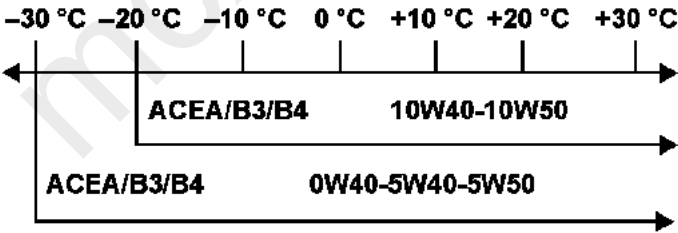

ACEA B1 (diesel) oils must not be used for diesel engines.

ACEA A1 oils (petrol) allow a reduction in fuel consumption, Renault recommends this oil for all engines with the exception of the 2L 16V Renault Sport.

Observe the recommendation on the label located on the engine for diesel vehicles with automatic gearboxes.

RENAULT

1 Engine and peripherals

10A ENGINE AND CYLINDER BLOCK ASSEMBLY

11A TOP AND FRONT OF ENGINE

12A FUEL MIXTURE

12B TURBOCHARGING

13A FUEL SUPPLY

13B DIESEL INJECTION

13C PREHEATING

14A ANTIPOLLUTION

16A STARTING - CHARGING

17A IGNITION

17B PETROL INJECTION

EDITION ANGLAISE

"The repair procedures given by the manufacturer in this document are based on the technical specifications current when it was prepared.

The procedures may be modified as a result of changes introduced by the manufacturer in the production of the various component units and accessories from which the vehicles are constructed".

All rights reserved by Renault.

Copying or translating, in part or in full, of this document or use of the service part reference numbering system is forbidden without the prior written authority of Renault.

19A COOLING

19B EXHAUST

19C TANK

19D ENGINE MOUNTING

mcx30.com

EDITION ANGLAISE

"The repair procedures given by the manufacturer in this document are based on the technical specifications current when it was prepared.

The procedures may be modified as a result of changes introduced by the manufacturer in the production of the various component units and accessories from which the vehicles are constructed".

All rights reserved by Renault.

Copying or translating, in part or in full, of this document or use of the service part reference numbering system is forbidden without the prior written authority of Renault.

Chapitre 1

Contents

Pages

10A	ENGINE AND CYLINDER BLOCK ASSEMBLY		11A	TOP AND FRONT OF ENGINE	
	Crankshaft seal on timing end: Removal - Refitting	10A-1		Pressure at end of compression: Check	11A-1
	Crankshaft seal, gearbox end: Removal - Refitting	10A-5		Accessories belt: Removal - Refitting	11A-2
	Lower cover: Removal - Refitting	10A-9		Crankshaft accessories pulley: Removal - Refitting	11A-10
	Conrod bearing shell: Removal - Refitting	10A-24		Timing belt: Removal - Refitting	11A-17
	Engine oil: Draining - Refilling	10A-32		Rocker cover: Removal - Refitting	11A-42
	Oil filter: Removal - Refitting	10A-34		Camshaft: Removal - Refitting	11A-49
	Oil-coolant heat exchanger: Removal - Refitting	10A-37		Camshaft seal, timing end: Removal - Refitting	11A-56
	Oil pressure sensor: Removal - Refitting	10A-42		Oil decanter: Removal - Refitting	11A-68
	Oil pump: Removal - Refitting	10A-44			
	Oil pressure: Check	10A-46	12A	FUEL MIXTURE	
	Multifunction support: Removal - Refitting	10A-48		Air inlet: Description	12A-1
	Engine - gearbox assembly: Removal - Refitting	10A-54		Air resonator: Removal - Refitting	12A-2
	Flywheel: Removal - Refitting	10A-75		Air filter: Removal - Refitting	12A-3
				Air filter unit: Removal - Refitting	12A-6
				Air flowmeter: Removal - Refitting	12A-10

Contents

12A FUEL MIXTURE

Throttle valve: Removal - Refitting	12A-11
Inlet distributor: Removal - Refitting	12A-12
Injector holder shim: Removal - Refitting	12A-14
Exhaust manifold: Removal - Refitting	12A-16

12B TURBOCHARGING

Turbocharger: Removal - Refitting	12B-1
Turbocharger oil pipe: Removal - Refitting	12B-4
Intercooler: Removal - Refitting	12B-8

13A FUEL SUPPLY

Fuel circuit: Operating diagram	13A-1
Manual priming pump: Removal - Refitting	13A-3
Diesel filter: Removal - Refitting	13A-5
Fuel pressure: Check	13A-9
Fuel flow: Check	13A-11

13B DIESEL INJECTION

Diesel injection: List and location of components	13B-1
Diesel injection computer: Removal - Refitting	13B-5
Camshaft position sensor: Removal - Refitting	13B-7

13B DIESEL INJECTION

Crankshaft position sensor: Removal - Refitting	13B-8
High pressure pump: Removal - Refitting	13B-9
Flow actuator: Removal - Refitting	13B-14
Venturi: Removal - Refitting	13B-16
High pressure pipe: Check	13B-18
High pressure pipe between pump and rail: Removal - Refitting	13B-19
High pressure pipe between rail and injector: Removal - Refitting	13B-22
Injector rail: Removal - Refitting	13B-25
Fuel temperature sensor: Removal - Refitting	13B-28
Injector leak flow: Check	13B-30
Diesel injector: Removal - Refitting	13B-32
Accelerometer: Removal - Refitting	13B-37

13C PREHEATING

Pre-postheating unit: Removal - Refitting	13C-1
Heater plugs: Removal - Refitting	13C-2

14A ANTIPOLLUTION

Exhaust gas recirculation: List and location of components	14A-1
Fuel vapour absorber: Removal - Refitting	14A-2

Contents

14A	ANTIPOLLUTION		19A	COOLING	
	Exhaust gas recirculation solenoid valve: Removal - Refitting	14A-4		Engine cooling system: Operating diagram	19A-1
	Exhaust gas cooler: Removal - Refitting	14A-7		Engine cooling system: Specifications	19A-2
	Exhaust gas recirculation assembly: Removal - Refitting	14A-9		Engine cooling system: Check	19A-3
	Exhaust gas recirculation rigid pipe: Removal - Refitting	14A-12		Engine cooling circuit: List and location of components	19A-5
				Cooling system: Draining - Refilling	19A-6
				Cooling radiator: Removal - Refitting	19A-9
				Coolant pump: Removal - Refitting	19A-13
16A	STARTING - CHARGING			Thermostat: Removal - Refitting	19A-19
	Alternator: Removal - Refitting	16A-1		Water chamber: Removal - Refitting	19A-22
	Starter: Removal - Refitting	16A-8		Engine cooling fan assembly: Removal - Refitting	19A-27
	Alternator pulley: Removal - Refitting	16A-12		Coolant pump inlet pipe: Removal - Refitting	19A-34
				Expansion bottle: Removal - Refitting	19A-38
				Coolant temperature sensor: Removal - Refitting	19A-40
17A	IGNITION				
	Coils: Removal - Refitting	17A-1			
17B	PETROL INJECTION		19B	EXHAUST	
	Petrol injection: List and location of components	17B-1		Exhaust: List and location of components	19B-1
	Oxygen sensors: Removal - Refitting	17B-4		Exhaust: Precautions for the repair	19B-6
	Throttle valve potentiometer: Removal - Refitting	17B-6		Catalytic converter: Removal - Refitting	19B-10
	Petrol injection computer: Removal - Refitting	17B-7		Expansion chamber: Removal - Refitting	19B-17
	Crankshaft position sensor: Removal - Refitting	17B-9			
	Injector rail - Injectors: Removal - Refitting	17B-10			
