

Contents

19B EXHAUST

Intermediate pipe: Removal - Refitting	19B-18
Silencer: Removal - Refitting	19B-20

19C TANK

Fuel tank: Draining	19C-1
Fuel tank: Removal - Refitting	19C-3
Fuel level sensor module: Removal - Refitting	19C-8

19D ENGINE MOUNTING

Suspended engine mounting: Tightening torque	19D-1
Left-hand suspended engine mounting: Removal - Refitting	19D-2
Right-hand suspended engine mounting: Removal - Refitting	19D-4
Lower engine tie-bar: Removal - Refitting	19D-8

mcx30.com