

ENGINE AND CYLINDER BLOCK ASSEMBLY

Oil-coolant heat exchanger: Removal - Refitting

10A

K9K, and 796

- ☐ Connect the air outlet duct to the intercooler.
- ☐ Fill the cooling system (see **19A, Cooling, Cooling system: Draining - Refilling**, page **19A-6**) .
- ☐ Refit:
 - the closure panel component under the diesel filter,
 - the engine undertray,
 - the engine cover.
- ☐ Bleed the cooling system (see **19A, Cooling, Cooling system: Draining - Refilling**, page **19A-6**) .

K9K

Tightening torques


oil pressure sensor	33 N.m
---------------------	--------

REMOVAL

I - REMOVAL PREPARATION OPERATION

- ☐ Position the vehicle on a two-post lift (see **Vehicle: Towing and lifting**) (02A, Lifting equipment).
- ☐ Remove the engine undertray.

II - OPERATION FOR REMOVAL OF PART CONCERNED

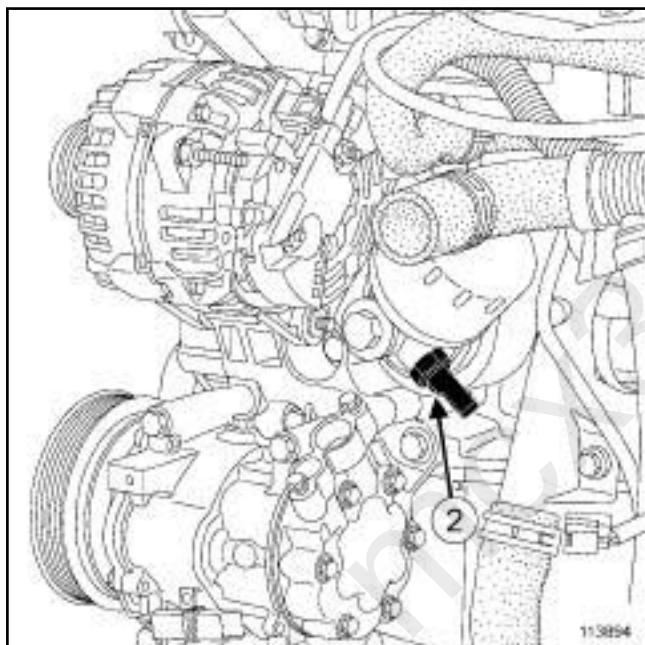

113894

- ☐ Disconnect the oil pressure sensor connector.
- ☐ Remove the oil pressure sensor (2) using the.

REFITTING

I - REFITTING OPERATION FOR PART CONCERNED

- ☐ Refit the oil pressure sensor.
- ☐ Torque tighten the **oil pressure sensor (33 N.m)**.
- ☐ Connect the oil pressure sensor connector.

II - FINAL OPERATION

- ☐ Refit the engine undertray.