

FUEL MIXTURE


Air resonator: Removal - Refitting

12A

K4M

REMOVAL

REMOVAL OPERATION FOR PART CONCERNED

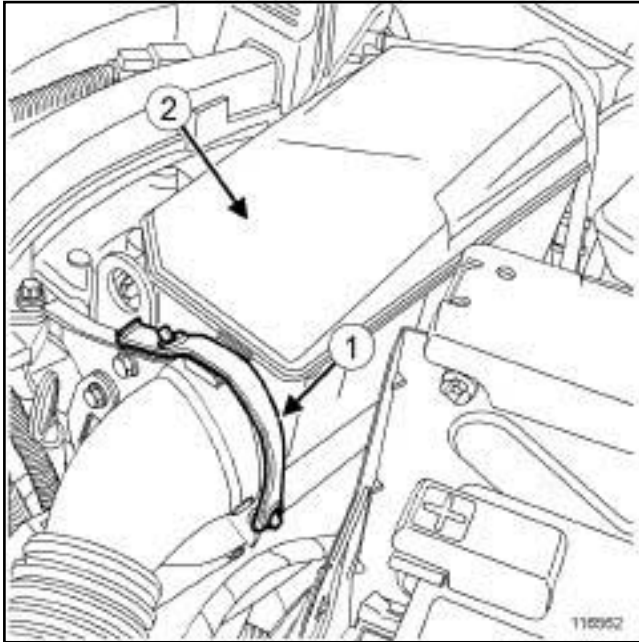

116562

❑ Remove:

- the elastic mounting (1) from the air resonator unit,
- the air resonator unit (2) .

REFITTING

REFITTING OPERATION FOR PART CONCERNED

❑ Refit:

- the air resonator unit,
- the air resonator elastic mounting.

FUEL MIXTURE

Air filter: Removal - Refitting

12A


K4M

REMOVAL

I - REMOVAL PREPARATION OPERATION

- ☐ Remove the air resonator (see **12A, Fuel mixture, Air resonator: Removal - Refitting**, page **12A-2**) .
- ☐ Disconnect the brake servo vacuum pipe (**1**) from the inlet distributor.

II - REMOVAL OPERATION

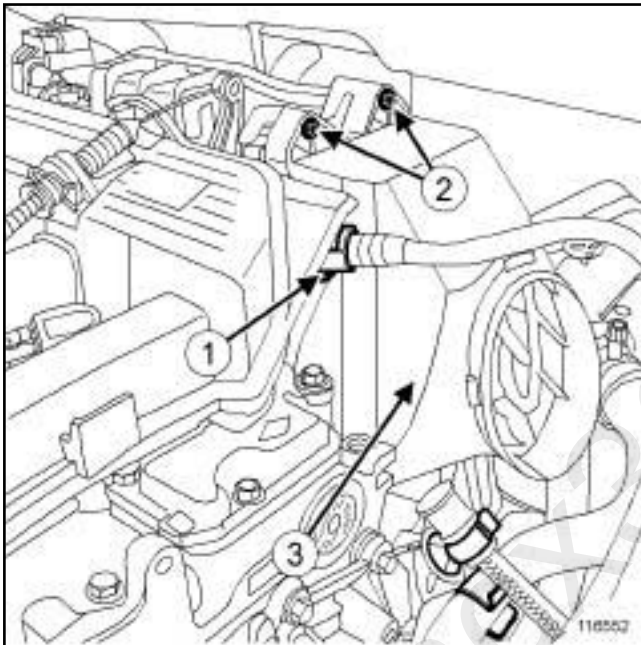

☐

WARNING

Do not damage the vacuum outlet on the inlet distributor. If it is damaged, the inlet distributor will need to be replaced.

- ☐ Remove:
 - the two bolts (**2**) from the air filter cover,
 - the air filter cover (**3**) ,
 - the air filter.

REFITTING

I - REFITTING PREPARATION OPERATION

- ☐ Clean the air filter housing.

II - REFITTING OPERATION FOR PART CONCERNED

- ☐ Refit:
 - the air filter,
 - the air filter cover,
 - the two air filter cover bolts.

III - FINAL OPERATION

- ☐ Reconnect the brake servo vacuum pipe to the inlet distributor.
- ☐ Refit the air resonator (see **12A, Fuel mixture, Air resonator: Removal - Refitting**, page **12A-2**) .

FUEL MIXTURE

Air filter: Removal - Refitting

12A

K9K


REMOVAL

I - REMOVAL PREPARATION OPERATION

- ❑ Remove the air filter unit (see **12A, Fuel mixture, Air filter unit: Removal - Refitting**, page **12A-6**) .


II - OPERATION FOR REMOVAL OF PART CONCERNED

1 - First fitting of air filter unit

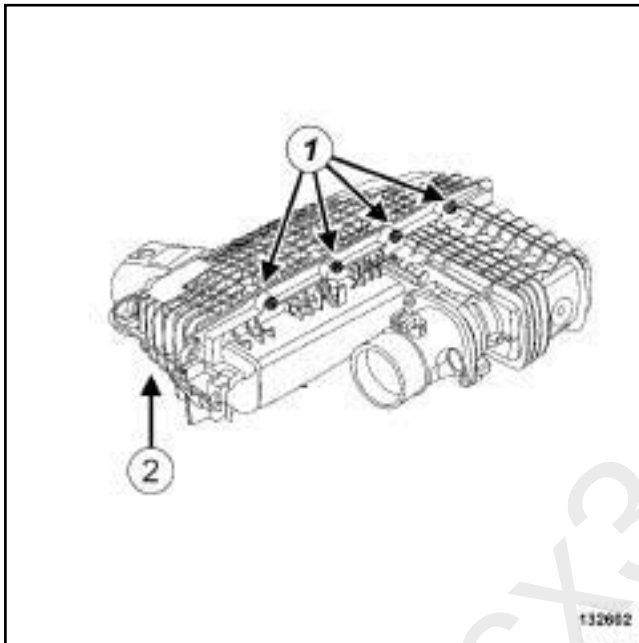


- ❑ Remove the 4 bolts (1) from the air filter unit.
- ❑ Pivot the hinged cover (2) of the air filter unit in relation to the air filter unit tank.
- ❑ Move aside the air filter unit cover (2) .

2 - Second fitting of air filter unit

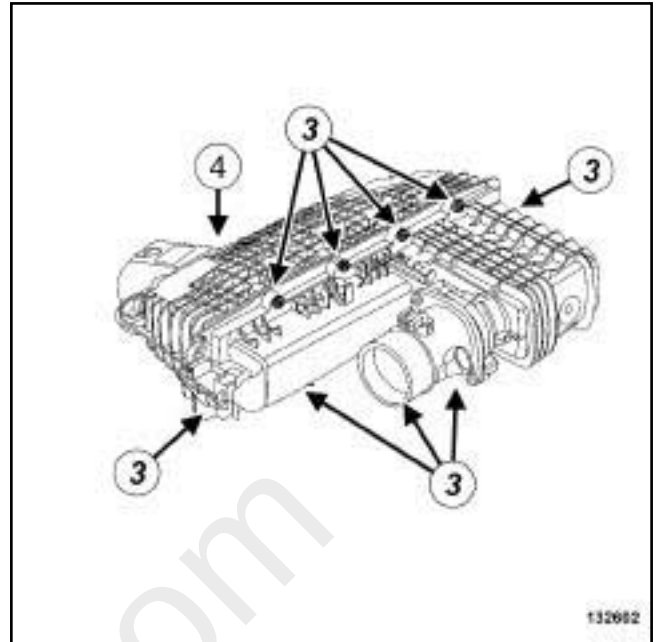

- ❑ Remove the 9 bolts (3) from the air filter unit.
- ❑ Move aside the air filter unit cover (4) .

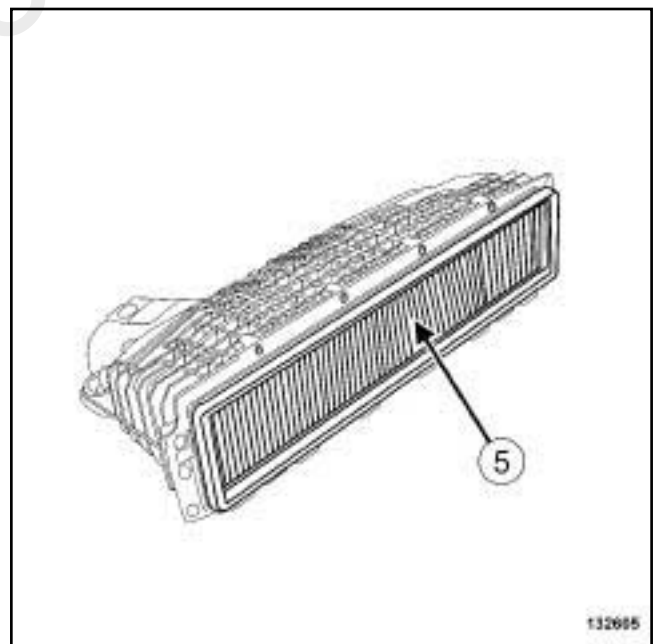

- ❑ Remove the air filter (5) from the air filter unit cover.

REFITTING

I - REFITTING PREPARATION OPERATION

- ❑ Clean the air filter unit.