

FUEL MIXTURE

Air filter unit: Removal - Refitting

12A

K4M

- the plastic rivets and clips every time they are removed.

II - REFITTING OPERATION

☐ Refit:

- the air filter unit,
- the two air filter unit bolts.

☐ Torque tighten the **air filter unit bolts (9 N.m)**.

☐ Attach the electrical wiring to the oxygen sensor.

☐ Refit the coolant pipes mounting bracket.

☐ Reclip:

- the breather,
- the coolant pipes.

☐ Refit:

- the filter element,
- the two air filter cover bolts.

☐ Reconnect:

- the brake servo vacuum pipe on the inlet distributor,
- the petrol vapour recirculation pipe,
- the throttle position potentiometer connector,
- the idle speed regulation stepping motor connector.

III - FINAL OPERATION

☐ Refit the air resonator (see **12A, Fuel mixture, Air resonator: Removal - Refitting**, page 12A-2) .

☐ Connect the battery (see **Battery: Removal - Refitting**) (80A, Battery).