


TURBOCHARGING

Intercooler: Removal - Refitting


12B

K9K

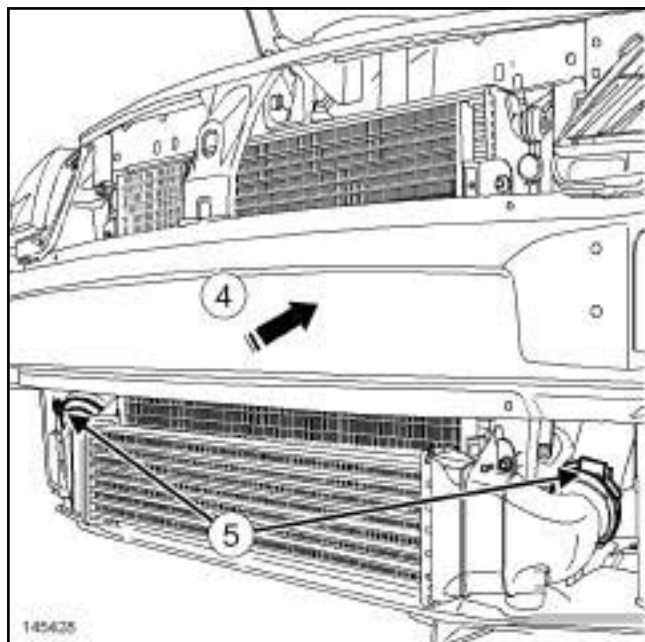


145428

- ☐ Push the « radiator - fan » assembly in the direction of the arrow (4) in order to remove the intercooler.
- ☐ Remove the clips (5) of the intercooler ducts.
- ☐ Disconnect the intercooler ducts.

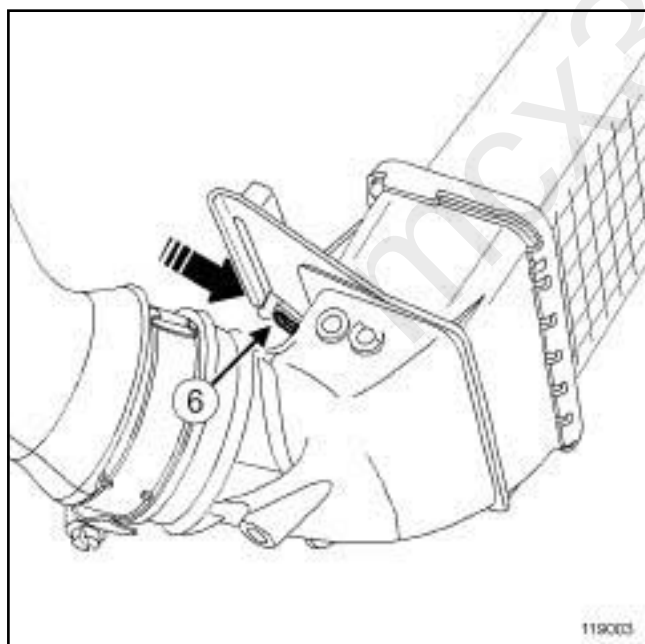

119003

- ☐ Press the end piece of the intercooler mounting at (6), in the direction of the arrow, to unclip it.

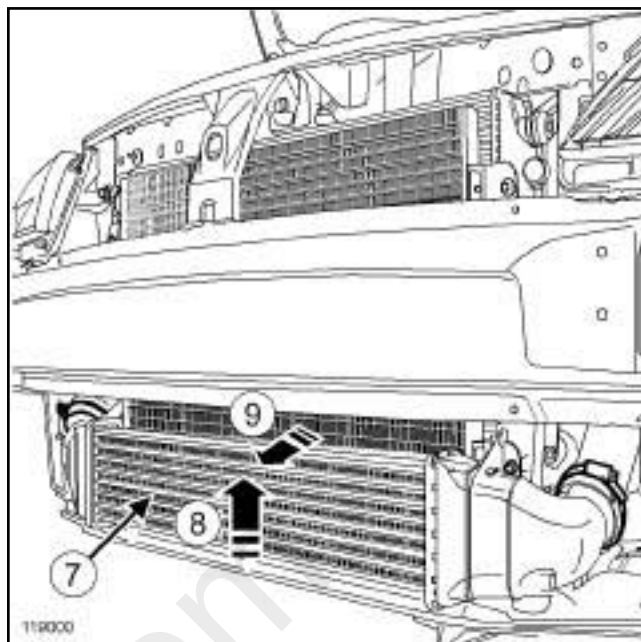

119000

- ☐ Remove the intercooler (7) in the direction of the arrows (8) then (9).

REFITTING

I - REFITTING PREPARATION OPERATION

- ☐ Check that the intercooler is not full of oil. If this is the case, clean it with a cleaning agent and then let it dry.

II - REFITTING OPERATION

- ☐ Proceed in the reverse order to removal.